

OEM HARD DISK DRIVE SPECIFICATIONS

for

DARA-2xxxxx (6 GB - 25 GB)

2.5-Inch Hard Disk Drive with ATA Interface

Revision (2.1)



OEM HARD DISK DRIVE SPECIFICATIONS

for

DARA-2xxxxx (6 GB - 25 GB)

2.5-Inch Hard Disk Drive with ATA Interface

Revision (2.1)

```
1st Edition (0.1) S25L-1638-00 (June 30, 1999) Preliminary
2nd Edition (1.0) S25L-1638-01 (July 23, 1999)
3nd Edition (2.0) S25L-1638-02 (Aug. 16, 1999) Unclassified
4th Edition (2.1) S25L-1638-03 (Nov. 11, 1999)
```

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer or express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time.

It is possible that this publication may contain reference to, or information about, IBM products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that IBM intends to announce such IBM products, programming, or services in your country.

Technical information about this product is available by contacting with local IBM representative or the following.

```
Tel:+1-507-253-4110 / Fax:+1-507-253-4111 ----- U.S.A Tel:+81-466-45-1441 / Fax:+81-466-45-1045 ----- Japan Internet: http://www.ibm.com/harddrive
```

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Director of Commercial Relations, IBM Corporation, Armonk, NY 10577.

© Copyright International Business Machines Corporation 1999. All rights reserved.

Note to U.S. Government Users —Documentation related to restricted rights —Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents

1.0 General	
1.1 Glossary	
1.2 General Caution	1
1.2.1 Caution of usage	
2.0 General Features	
Part 1. Functional Specification	
Tart 1. Functional Specification	
3.0 Drive Characteristics	9
3.1 Default Logical Drive Parameter	
3.2 Data Sheet	
3.3 Performance Characteristics	
3.3.1 Command Processing	
3.3.2 Average Seek Time (Including Settling)	
3.3.3 Single Track Seek Time	
3.3.4 Full Stroke Seek	
3.3.5 Average Latency	
3.3.6 Drive Ready Time	
3.3.7 Operating Modes	
4.0 Data Integrity	15
4.1 Data Loss by Power Off	15
4.2 Write Cache	
4.3 Equipment Status	
4.4 WRITE Safety	
4.5 Data buffer test	
4.6 Error Recovery	
4.7 Automatic Reallocation	
4.7.1 Non Recovered Write Errors	
4.7.2 Non Recovered Read Errors	16
4.7.3 Recovered Read Errors	
5.0 Specification	17
5.1 Environment	17
5.1.1 Temperature and Humidity	17
5.1.2 Magnetic Fields	18
5.2 DC Power Requirements	19
5.2.1 Start Up Current	21
5.3 Reliability	23
5.3.1 Data Reliability	23
5.3.2 Failure Prediction (S.M.A.R.T.)	23
5.3.3 Cable Noise Interference	23
5.3.4 Service Life and Usage Condition	23
5.3.5 Preventive Maintenance	
5.3.6 Load/Unload	
5.4 Mechanical Specifications	
5.4.1 Mechanical Dimensions and Weight	
5.4.2 Hole Locations	
5.4.3 Mounting Orientation	28

5.5	Vibration and Shock	29
5	.5.1 Operating Vibration	29
5	.5.2 Non-Operating Vibration	29
5	.5.3 Operating Shock	30
5	.5.4 Non-Operating Shock	30
5.6	Acoustics	31
5	.6.1 Sound Power Level	31
5	.6.2 Discrete Tone Penalty	32
5.7	Identification	33
5	.7.1 Labels	33
5.8	Electromagnetic Compatibility	33
	.8.1 CE Mark	33
5	.8.2 C-Tick Mark	33
	Safety	34
	.9.1 Underwriters Lab(UL) Approval	34
	.9.2 Canadian Standards Authority(CSA) Approval	34
_	.9.3 IEC Compliance	34
	.9.4 German Safety Mark	34
	.9.5 Flammability	34
	.9.6 Secondary Circuit Protection	34
_	Packaging	34
5.10	rackaging	34
<i>4</i> 0	Electrical Interface Specifications	35
	Electrical Interface Specifications	
6.1	8	35
	Interface Connector	35
	2.2.1 Signal Definition	36
	Interface Logic Signal Levels	39
	Reset timings	40
	PIO Timings	41
	5.5.1 DMA Timings (Single Word)	42
	5.5.2 DMA Timings (Multiword)	43
	5.5.3 Ultra DMA Timings	44
	Drive Address Setting	58
	6.6.1 Default Setting	58
6.7	Addressing of drive Registers	59
	4 A ATDA T 4 . C C 'C' 4'	
Pa	rt 2. ATA Interface Specification	61
- ^		
	General	63
	Introduction	63
7.2	Terminology	63
8.0	Deviations From Standard	65
	Registers	67
	Alternate Status Register	67
	Command Register	68
	Cylinder High Register	68
	Cylinder Low Register	68
9.5	Data Register	68
9.6	Device Control Register	69
9.7	Drive Address Register	69
9.8	Device/Head Register	69
	Error Register	70

9.10 Features Register	
9.12 Sector Number Register	
9.13 Status Register	71
10.0 General Operation Descriptions	73
10.1 Reset Response	
10.1.1 Register Initialization	
10.2 Diagnostic and Reset considerations	
10.3 Power-off considerations	
10.4 Sector Addressing Mode	
10.4.1 Logical CHS Addressing Mode	
10.4.2 LBA Addressing Mode	
10.5 Power Management Feature	
10.5.1 Power Mode	
10.5.2 Power Management Commands	
10.5.3 Standby/Sleep command completion timing	
10.5.4 Standby timer	79
10.5.5 Status	79
10.5.6 Interface Capability for Power Modes	79
10.5.7 Initial Power Mode at Power On	79
10.6 Advanced Power Management (ABLE-3) Feature	
10.6.1 Performance Idle mode	
10.6.2 Active Idle mode	
10.6.3 Low Power Idle mode	
10.6.4 Transition Time	
10.7 S.M.A.R.T. Function	
10.7.1 Attributes	
10.7.2 Attribute values	
10.7.3 Attribute thresholds	
10.7.4 Threshold exceeded condition	
10.7.5 S.M.A.R.T. commands	
10.7.6 S.M.A.R.T. operation with power management modes	83
10.8 Security Mode Feature Set	84
10.8.1 Security mode	84
10.8.2 Security level	84
10.8.3 Password	84
10.8.4 Master Password Revision Code	
10.8.5 Operation example	
10.8.6 Command Table	
10.9 Protected Area Function	
10.9.1 Example for operation (In LBA mode)	
10.10 Address Offset Feature (Vendor Specific)	
10.10.1 Enable/Disable Address Offset Mode	
10.10.2 Identify Device Data	
10.10.3 Exceptions in Address Offset Mode	
10.11 Write Cache Function	
10.12 Delayed Write Function (Vendor Specific)	
10.12.1 Enable/Disable Delayed Write command	95
10.13 Reassign Function	
10.13.1 Auto Reassign Function	96
11.0 Command Protocol	97
11.1 Data In Commands	
11.2 Data Out Commands	

	Non-Data Commands	
11.4	DMA Data Transfer Commands	101
	Command Descriptions	
	Check Power Mode (E5h/98h)	
	Enable/Disable Delayed Write (FAh: Vendor Specific)	
	Execute Device Diagnostic (90h)	
	Flush Cache (E7h)	
12.5	Format Track (50h: Vendor Specific)	111
	Format Unit (F7h: Vendor Specific)	
12.7	Identify Device (ECh)	115
12.8	Identify Device DMA (EEh)	122
12.9	Idle (E3h/97h)	123
	Idle Immediate (E1h/95h)	
	Initialize Device Parameters (91h)	
	Read Buffer (E4h)	
	Read DMA (C8h/C9h)	
	Read Long (22h/23h)	
	Read Multiple (C4h)	
	Read Native Max ADDRESS (F8h)	
	Read Sectors (20h/21h)	
	Read Verify Sectors (40h/41h)	
	Recalibrate (1xh)	
	Security Disable Password (F6h)	
	Security Erase Prepare (F3h)	
	Security Erase Unit (F4h)	
	Security Freeze Lock (F5h)	
12.24	Security Set Password (F1h)	145
	Security Unlock (F2h)	
	Seek (7xh)	
12.27	Set Features (EFh)	150
12.28	Set Max ADDRESS (F9h)	152
	Set Multiple (C6h)	
	Sleep (E6h/99h)	
	S.M.A.R.T. Function Set (B0h)	
	.31.2 Device Attributes Data Structure	
	.31.3 Device Attribute Thresholds Data Structure	
	.31.4 SMART error log sector	
	.31.5 Self-test log data structure	
	.31.6 Error Reporting	
	Standby (E2h/96h)	
	Standby Immediate (E0h/94h)	
	Write Buffer (E8h)	
	Write DMA (CAh/CBh)	
	Write Long (32h/33h)	
		181
		183
12.39	Write Verify (3Ch: Vendor Specific)	185
13.0	Timeout Values	187
	Appendix	
14.1	Commands Support Coverage	189
	••	192

193

1.0 General

This document describes the specifications of the following IBM 2.5-inch, ATA interface hard disk drives:

- DARA-206000 (6 GB) 9.5mm height 4200 rpm
 DARA-209000 (9 GB) 9.5mm height 4200 rpm
 DARA-212000 (12 GB) 9.5mm height 4200 rpm
- DARA-215000 (15 GB) 12.7mm height 4200 rpm
 DARA-218000 (18 GB) 12.7mm height 4200 rpm
- DARA-225000 (25 GB) 17.0mm height 5411 rpm

Note: The specifications are subject to change without notice.

1.1 Glossary

Word	Meaning
Kbpi	1 000 Bit Per Inch
Mbps	1 000 000 Bit per second
GB	1 000 000 000 bytes
MB	1 000 000 bytes
KB	1 000 bytes
32 KB	32 x 1 024 bytes
64 KB	64 x 1 024 bytes
Mb/sq.in	1 000 000 bits per square inch
MLC	Machine Level Control
DFT	Drive Fitness Test
TBD	To Be Defined

1.2 General Caution

- Do not apply pressing force on the top cover (See Figure 1 on page 2).
- Do not cover the breathing hole on the top cover (See Figure 2 on page 3).
- Do not touch the interface connector pins and the surface of printed circuit board.
- The drive can be easily damaged by shocks or ESD (Electric Static Discharge), so any damages applied to the drive after taking out from shipping package and opening ESD protective bag are user's responsibilities.

1.2.1 Caution of usage


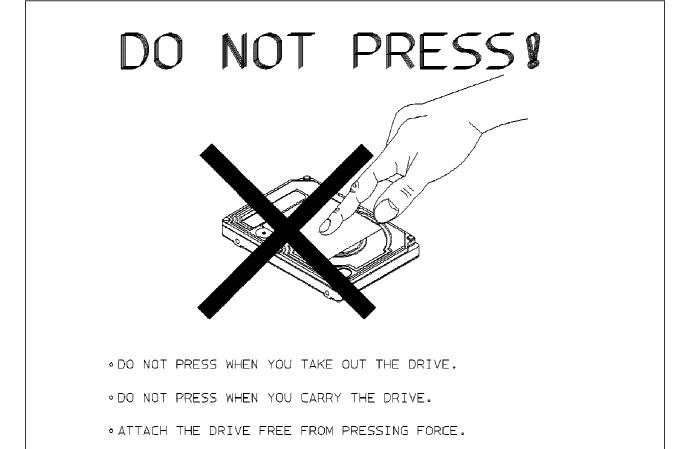


Figure 1. Handling caution of DARA-2xxxxx

DO NOT COVER THIS HOLE

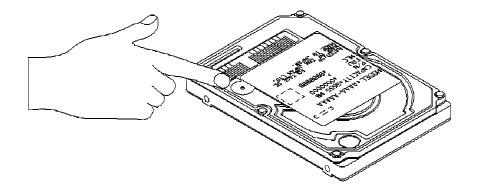

COVERING THIS HOLE WILL RESULT LOSS OF DATA.

Figure 2. Breathing hole caution of DARA-2xxxxx

2.0 General Features

- 2.5-inch, 9.5mm/12.7mm/17.0mm height MCC Compliance
- 6GB 25GB formatted capacity
- 512 bytes/sector
- AT Interface (Enhanced IDE) conforming to ATA-4
- · No-ID recording format
- · PRML channel
- On The Fly correction: 12 Bytes/sector
- 418 KB Segmented Buffer for Read and Write
- · Host data transfer speed.
 - 66.6 MB/sec : Ultra DMA Mode-4 (Ultra ATA/66)
- · Media data transfer rate
 - 161.6 Mbit/sec max (DARA-218000/215000/212000/209000/206000)
 - 181.2 Mbit/sec max (DARA-225000)
- · Average seek time 12 ms for read
- Closed-loop actuator servo (Embedded Sector Servo)
- · Rotary voice coil motor actuator
- · Load / Unload mechanism
- Adaptive power save control
 - 0.65 W at low-power-idle (DARA-218000/215000/212000/209000/206000)
 - 0.85 W at low-power-idle (DARA-225000)
- · Power on to ready
 - 2.8 sec (DARA-212000/209000/206000)
 - 3.0 sec (DARA-218000/215000)
 - 4.5 sec (DARA-225000)
- · Non-operating Shock
 - 800 G/1ms (DARA-212000/209000/206000)
 - 700 G/1ms (DARA-218000/215000)
 - 500 G/2ms (DARA-225000)
- Operating Shock
 - 175 G/2ms (DARA-218000/215000/212000/209000/206000)
 - 150 G/2ms (DARA-225000)
- · Address Offset Feature to support DFT implementation

Note: Mounting screw position is

- Incompatible with DBOA/DMCA/DCRA/DSOA/DPRA-2xxxx.
- Compatible with DTNA/DLGA/DDLA/DTCA/DPLA/DYKA/DYLA/DADA/ DKLA/DBCA/DCXA/DCYA-2xxxxx.

Part 1. Functional Specification

3.0 Drive Characteristics

3.1 Default Logical Drive Parameter

Default of logical drive parameters in Identify Device data are as follows.

Figure 3. Default Drive Parameters						
Model	Capacity (GB)	Word 1 (Cyl)	Word 3 (Head)	Word 6 (Sect/Trk)	Word 60-61 (LBA)	Customer Usable Data Bytes
DARA-206000	6	12416	15	63	11,733,120	6,007,357,440
DARA-209000	9	16383	16	63	17,660,160	9,042,001,920
DARA-212000	12	16383	16	63	23,579,136	12,072,517,632
DARA-215000	15	16383	16	63	29,498,112	15,103,033,344
DARA-218000	18	16383	16	63	35,433,216	18,141,806,592
DARA-225000	25	16383	16	63	49,577,472	25,383,665,664

3.2 Data Sheet

Figure 4. Data Sheet	
Media transfer rate [Mb/sec]	161.6 - 85.5 (DARA-218000/215000/212000/209000/206000) 181.2 - 105.1 (DARA-225000)
Interface transfer rate [MB/sec]	66.6 max (Ultra DMA Mode-4) 16.6 max (PIO-4)
Data buffer size [KB]	418 KB (Read / Write)
Rotational speed [RPM]	4200 (DARA-218000/215000/212000/209000/206000) 5411 (DARA-225000)
Average latency [msec]	7.1 (DARA-218000/215000/212000/209000/206000) 5.5 (DARA-225000)
Recording density [Kbpi]	356 max (DARA-218000/215000/212000/209000/206000) 327 max (DARA-225000)
Track density [TPI]	28,500 (DARA-218000/215000/212000/209000/206000) 26,800 (DARA-225000)
Areal density [Gb/sq.in.]	10.1 max (DARA-218000/215000/212000/209000/206000) 8.8 Max (DARA-225000)
Number of zone	12
Number of disks	1 / 2 / 2 / 3 / 3 / 5
Number of heads	2 / 3 / 4 / 5 / 6 / 10
Servo design method	Embedded sector servo

3.3 Performance Characteristics

File performance is characterized by the following parameters:

- · Command Overhead
- · Mechanical Positioning
 - Seek Time
 - Latency
- Data Transfer Speed
- · Buffering Operation

Note: All the above parameters contribute to a file performance. There are other parameters which contribute to the performance on the actual system. This specification tries to define the essential file characteristics, not the system throughput which is dependent on the system and the application.

The following table gives a **typical value** of each parameter. The detail descriptions are followed in the next sections.

Function	Typical
Average Random Seek Time For Read	12 msec
Average Random Seek Time For Write	14 msec (except DARA-225000) 13 msec (DARA-225000)
Rotational Speed	4200 rpm (except DARA-225000) 5411 rpm (DARA-225000)
Power On To Ready	2.8 sec (DARA-212000/209000/206000) 3.0 sec (DARA-218000/215000) 4.5 sec (DARA-225000)
Command Overhead	1.0 msec
Disk-Buffer Data Transfer	161.6 - 85.5 Mbit/sec (except DARA-225000) 181.2 - 105.1 Mbits/sec (DARA-225000)
Buffer-Host Data Transfer	16.6 MB/sec (PIO Mode-4) 66.6 MB/sec (Ultra DMA Mode-4)

Figure 5. Performance Parameter

3.3.1 Command Processing

Command overhead time is defined as the total time from when the command is received by the drive to the start of motion of the actuator.

3.3.2 Average Seek Time (Including Settling)

Command Type	Typical	Max
Read	12 msec	16 msec
Write	14 msec (except DARA-225000) 13 msec (DARA-225000)	17 msec

Figure 6. Mechanical Positioning Performance

'Typical' and 'Max' are given throughout the performance specification by;

Typical Average of the drive population tested at nominal environmental

and voltage conditions.

Max Maximum value measured on any one drive over the full range of the environmental and

voltage conditions. (See section on Environment and D.C. Power Requirements.)

The seek time is measured from the start of motion of the actuator to the start of a reliable read or write operation. Reliable read or write implies that error correction/recovery is not employed to correct for arrival problems. The Average Seek Time is measured as the weighted average of all possible seek combinations.

Weighted Average =
$$\frac{\sum_{n=1}^{\max} (\max + 1 - n) (Tn.in + Tn.out)}{(\max + 1) (\max)}$$

Where:

max = Maximum seek length n = Seek length (1 to max)

Tn.in = Inward measured seek time for an n track seek
Tn.out = Outward measured seek time for an n track seek

3.3.3 Single Track Seek Time

Function	Typical	Max
Read	2.5 msec	4.0 msec
Write	3.0 msec	4.5 msec

Figure 7. Single Track Seek Time

The single track seek time includes settling time but does not include command overhead.

Single track seek is measured as the average of one (1) single track seek from every track in both directions (inward and outward).

3.3.4 Full Stroke Seek

Function	Typical	Max
Read	23.0 msec	30.0 msec
Write	24.0 msec	31.0 msec

Figure 8. Full Stroke Seek Time

Full stroke seek is measured as the average of 1000 full stroke seeks.

3.3.5 Average Latency

Model	RPM	Time for a revolution	Average Latency
DARA-225000	5411	11.1 msec	5.5 msec
DARA-206000 DARA-209000 DARA-212000 DARA-215000 DARA-218000	4200	14.3 msec	7.1 msec

Figure 9. Latency Time

3.3.6 Drive Ready Time

Condition	Model	Typical	Max
Power On To Ready	DARA-225000	4.5 sec	10.5 sec
Power On To Ready	DARA-206000 DARA-209000 DARA-212000	2.8 sec	9.5 sec
Power On To Ready	DARA-215000 DARA-218000	3.0 sec	9.5 sec

Figure 10. Drive Ready Time

Ready The condition in which the drive is able to perform a media access command (e.g.

read, write) immediately.

Power On This includes the time required for the internal self diagnostics.

3.3.7 Operating Modes.

Operating mode Description Spin-Up : Start up time period from spindle stop or power down. : Seek operation mode Seek : Write operation mode Write : Read operation mode Read Performance: The device is capable of responding immediately to media access requests. All electronic components idle remain powered and full frequency servo remains operational. : The device is capable of responding immediately to Active idle media access requests. Some circuitry including servo system and R/W electronics are in power saving mode. The head is parked near the mid-diameter of disk without servoing. A device in Active idle mode may take longer to complete the execution of a command because it has to activate that circuitry. Low power : Head is unloaded on the ramp position. idle Spindle motor is rotating at full speed. : The device interface is capable of accepting commands. Standby Spindle motor is stopped. All circuitry except host interface are in power saving mode. The execution of commands is delayed until spindle becomes ready. : The device requires a soft reset or a hard reset to Sleep be activated. All electronics including spindle motor and host interface are shut off.

Figure 11. Operating Mode

3.3.7.1 Mode Transition Time.

Model	From	То	Transition Time	
DARA-225000	Standby	Idle	4.5 sec (typical) / 9.5 sec (max)	
Others	Standby	Idle	1.8 sec (typical) / 9.5 sec (max)	

Figure 12. Drive Ready Time

3.3.7.2 Operating mode at power on

The device goes to Idle mode after power on or hard reset as an initial state. Initial state may be changed to Standby mode using pin C on the interface connector. Refer to 6.6, "Drive Address Setting" on page 58 for detail.

3.3.7.3 Adaptive power save control

The transient timing from active mode to Idle mode is adaptively controlled to the access pattern of the host system.

4.0 Data Integrity

4.1 Data Loss by Power Off

- The drive retains recorded data under all non-write operations.
- No more than one sector can be lost by power down during write operation while write cache is disabled.
- Power off during write operation may make an incomplete sector which will report hard data error when read. The sector can be recovered by a re-write operation.
- · Hard reset does not cause any data loss.

4.2 Write Cache

- Power off while write cache is enabled may cause loss of data which are remaining in the cache and have not been flushed onto the disk media.
 - This means that there is a possibility that power off even after write command completion may cause loss of data.
- There are ways to check if all data in the write cache have been flushed onto the disk. Checking just before power off is recommended to prevent data loss.
 - To confirm successful completion of Software Reset.
 - To confirm successful completion of Flush Cache command.
 - To confirm successful completion of Standby command.
 - To confirm successful completion of Standby Immediate command.
 - To confirm successful completion of Sleep command.

Note: For Power Off Sequence, refer to 5.3.6, "Load/Unload" on page 24.

4.3 Equipment Status

Equipment status is available to the host system any time the drive is not ready to read, write, or seek. This status normally exists at power-on time and will be maintained until the following conditions are satisfied:

- Access recalibration/tuning is complete.
- Spindle speed meets requirements for reliable operation.
- Self-check of drive is complete.

Appropriate error status is made available to the host system if any of the following conditions occur after the drive has once become ready:

- Spindle speed outside requirements for reliable operation.
- · Occurrence of a Write Fault condition.

4.4 WRITE Safety

The drive ensures that the data is written into the disk media properly. Following conditions are monitored during a write operation. When one of those conditions exceeds the criteria, the write operation is terminated and automatic retry sequence will be invoked.

- · Head off track
- · External shock
- · Low supply voltage
- Spindle speed tolerance

4.5 Data buffer test

The data buffer is tested at Power-on-reset and when a drive self-test is requested by the host. The tests are consisted of write/read '00'x and 'ff'x pattern on all buffer.

4.6 Error Recovery

Errors occurring on the drive are handled by the error recovery procedure.

Errors that are uncorrectable after application of the error recovery procedures are reported to the host system as non-recoverable errors.

4.7 Automatic Reallocation

The sectors that show some errors may be reallocated automatically when specific conditions are met. The drive does not report for auto-reallocation to the host system. The conditions for auto-reallocation are described below.

4.7.1 Non Recovered Write Errors

When a write operation can not be completed after the Error Recovery Procedure (ERP) is fully carried out, the sector(s) are reallocated to the spare location. An error is reported to the host system only when the write cache is disabled and the auto reallocation is failed.

4.7.2 Non Recovered Read Errors

When a read operation is failed after defined ERP is fully carried out, a hard error is reported to the host system. This location is registered internally as a candidate for the reallocation. When a registered location is specified as a target of a write operation, a sequence of media verification is performed automatically. When the result of this verification meets the criteria, this sector is reallocated.

4.7.3 Recovered Read Errors

When a read operation for a sector failed once then recovered at the specific ERP step, this sector is reallocated automatically. A media verification sequence may be run prior to the reallocation according to the pre-defined conditions.

5.0 Specification

5.1 Environment

5.1.1 Temperature and Humidity

Figure 13. Environmental Condition			
Operating Conditions			
Temperature	5 to 55 [°C] (See note)		
Relative Humidity	8 to 90 [% R H]		
Maximum Wet Bulb Temperature	29.4 [°C]		
Maximum Temperature Gradient	20 [°C/Hour]		
Altitude	-300 to 3000 [m]		
Non-Operating Conditions			
Temperature	- 40 to 65 [°C]		
Relative Humidity	5 to 95 [% RH]		
Maximum Wet Bulb Temperature	40 [°C]		
Maximum Temperature Gradient	20 [°C/Hour]		
Altitude	-300 to 12,000 [m]		

Note:

The system has to provide sufficient ventilation to maintain a surface temperature below $60\,^{\circ}\text{C}$ at the center of the top cover of the drive.

Non-condensing should be kept at any time.

Maximum storage period with shipping package is one year.

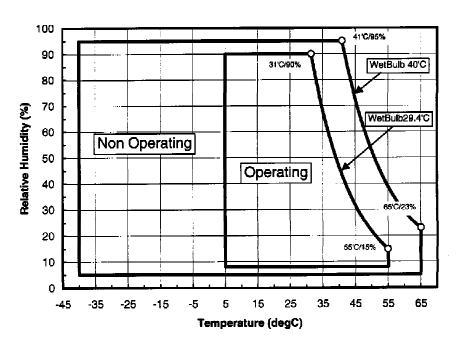


Figure 14. Limits of Temperature and Humidity

5.1.2 **Magnetic Fields**

The disk drive will withstand radiation & conductive noise within the limits shown below.

5.1.2.1 Radiation Noise

The disk drive shall work without degradation of the soft error rate under the following Magnetic Flux Density Limits at the enclosure surface.

Frequency (KHz)	Limits (Gauss rms)
0 - 60	5.0
61 - 100	2.5
101 - 200	1.0
201 - 400	0.5

Figure 15. Magnetic Flux Density Limits

5.1.2.2 Conductive Noise

The disk drive shall work without degradation of the soft error rate, with an AC current of up to 45 mA(p-p), in the frequency range from DC to 20 MHz, injected through any two of the mounting screw holes of the drive via 50ohm resistor.

5.2 DC Power Requirements

Connection to the product should be made in isolated secondary circuits (SELV). The voltage specifications are applied at the power connector of the drive.

Item	Requirements	Notes
Nominal Supply	+5 Volt	
Power Supply Ripple (0-20Mhz)	100 mv p-p max	*1
Tolerance	+/-5%	*2
Supply Rise Time	7 - 100 ms	
Supply Current (+5.00V case)	Pop.Mean (Nominal Condition)	
DARA-212000/209000/206000 Low-power Idle Average Active Idle Average Performance Idle Average	0.13 A RMS typical (0.65 W) 0.17 A RMS typical (0.85 W) 0.37 A RMS typical (1.85 W)	*3
Read average Write average Seek average	0.40 A RMS typical (2.0 W) 0.42 A RMS typical (2.1 W) 0.46 A RMS typical (2.3 W)	*4
Standby Sleep	0.05 A RMS typical (0.25 W) 0.02 A RMS typical (0.1 W)	*6
Start up(maximum peak) Average from power on to ready	0.94 A RMS typical (4.7 W) 0.66 A RMS typical (3.3 W)	**0
DARA-218000/215000 Low-power Idle Average Active Idle Average	0.13 A RMS typical (0.65 W) 0.19 A RMS typical (0.95 W)	
Performance Idle Average Read average Write average	0.37 A RMS typical (1.85 W) 0.42 A RMS typical (2.1 W) 0.44 A RMS typical (2.2 W)	*3 *4
Seek average Standby Sleep	0.44 A RMS typical (2.2 W) 0.46 A RMS typical (2.3 W) 0.05 A RMS typical (0.25 W) 0.02 A RMS typical (0.1 W)	*5
Start up(maximum peak) Average from power on to ready	0.94 A RMS typical (4.7 W) 0.66 A RMS typical (3.3 W)	*6
DARA-225000 Low-power Idle Average Active Idle Average	0.17 A RMS typical (0.85 W) 0.26 A RMS typical (1.3 W)	
Performance Idle Average Read average Write average	0.40 A RMS typical (2.0 W) 0.50 A RMS typical (2.5 W) 0.54 A RMS typical (2.7 W)	*3 *4
Seek average Standby Sleep	0.52 A RMS typical (2.6 W) 0.05 A RMS typical (0.25 W) 0.02 A RMS typical (0.1 W)	*5
Start up(maximum peak) Average from power on to ready	1.00 A RMS typical (5.0 W) 0.76 A RMS typical (3.8 W)	*6


Figure 16. Power Requirement

Notes:

(*1) The maximum fixed disk ripple is measured at 5V input of the drive.

- (*2) The disk drive shall not incur damage for an over voltage condition of +25% (maximum duration of 20 ms) on the 5-volt nominal supply.
- (*3) The idle current is specified at an inner track.
- (*4) The read/write current is specified based on three operations of 63 sector read/write per 100 msec.
- (*5) The seek average current is specified based on three operations per 100 msec.
- (*6) The typical current wave form at start up is shown in 5.2.1, "Start Up Current" on page 21.

5.2.1 Start Up Current

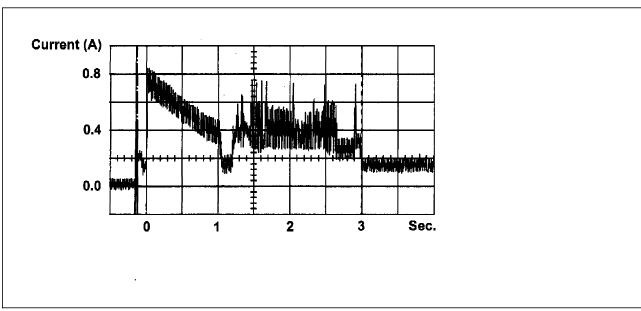

 $Figure \ \ 17. \ Typical \ current \ wave \ form \ at \ start \ up \ of \ DARA-212000/209000/206000$

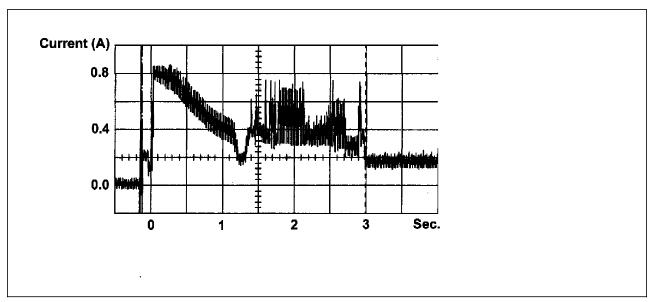


Figure 18. Typical current wave form at start up of DARA-218000/215000

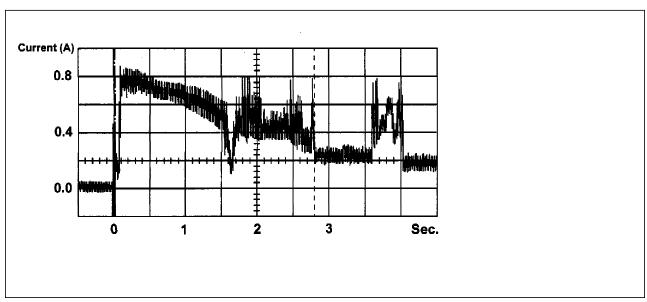


Figure 19. Typical current wave form at start up of DARA-225000

5.3 Reliability

5.3.1 Data Reliability

- Probability of not recovering data 1 in 10¹³ bits read
- ECC implementation
 On-The-Fly correction, performed as a part of read channel function, recovers up to 12 symbols of error in 1 sector. (1 symbol is 8 bits.)

5.3.2 Failure Prediction (S.M.A.R.T.)

DARA-2xxxxx supports S.M.A.R.T. function. The details are described in 10.7, "S.M.A.R.T. Function" on page 82 and 12.31, "S.M.A.R.T. Function Set (B0h)" on page 156.

5.3.3 Cable Noise Interference

To avoid any degradation of performance throughput or error when the interface cable is routed on top or comes in contact with the HDA assembly, the drive must be grounded electrically to the system frame by four screws. The common mode noise or voltage level difference between the system frame and power cable ground or AT interface cable ground should be in the allowable level specified in the power requirement section.

5.3.4 Service Life and Usage Condition

The drive is designed to be used under the following conditions.

- Within specifications of Shock, Vibration, Temperature, Humidity, Altitude, and Magnetic Field.
- ESD protective handling.
- Without covering breathing hole on top cover.
- Without pressing top cover.
- Less than 250 (333 for DARA-225000) power-on hours per month.
- Seeking/Writing/Reading operation be less than 20% of power-on hours.
- The power requirements be satisfied.
- Drive frame be grounded electrically to the system through four screws.
- · Mounting with recommended screw depth and torque.
- Interface physical and electrical requirements be satisfied per ATA-4.
- Power off sequence according to 5.3.6.2, "Required Power-Off Sequence" on page 24.

Service life of DARA-2xxxxx is approximately 5 years or 15,000 (20,000 for DARA-225000) power-on hours, whichever comes first.¹

Actual product life and failure rate depend on duty cycle and environmental conditions. Consult your IBM representative for reliability estimate if atypical operating conditions are anticipated.

5.3.5 Preventive Maintenance

None.

¹ This does not represent any warranty nor warranty period. Applicable warranty and warranty period are covered by purchase agreement.

5.3.6 Load/Unload

The product supports a minimum of 300,000 normal load/unloads.

Load/unload is a functional mechanism of the HDD. It is controlled by the drive microcode. Specifically, unloading of the heads is invoked by the commands:

- · Hard Reset
- · Soft Reset
- Standby
- · Standby Immediate
- Sleep

Load/unload is also invoked as one of the idle modes of the drive.

The specified start/stop life of the product assumes that load/unload is operated normally, **not in emergency mode.**

5.3.6.1 Emergency Unload

When HDD power is interrupted while the heads are still loaded, the microcode cannot operate and the normal 5v power is unavailable to unload the heads. In this case, normal unload is not possible, so the heads are unloaded by routing the back-EMF of the spinning motor to the voice coil. The actuator velocity is greater than the normal case, and the unload process is inherently less controllable without a normal seek current profile.

Emergency unload is intended to be invoked in rare situations. Because this operation is inherently uncontrolled, it is more mechanically stressful than a normal unload.

DARA-2xxxxx supports a minimum of 20,000 emergency unloads.

5.3.6.2 Required Power-Off Sequence

The required BIOS sequence for removing power from DARA-2xxxxx is:

- Step 1: Issue one of the following commands.
 - · Soft Reset
 - Standby
 - · Standby Immediate
 - Sleep

Note: Do **not** use Flush Cache command for power off sequence, because the command does not invoke Unload.

• Step 2: Wait until Command Complete Status is returned.

In typical case, it takes 350ms for the command completion, however, BIOS time out value needs to be 30sec considering error recovery time. Refer to 13.0, "Timeout Values" on page 187 for time out values.

• Step 3: Terminate power to HDD.

This power-down sequence should be followed for entry into any system power-down state, or system suspend state, or system hibernation state. In a robustly designed system, emergency unload is limited to rare scenarios such as battery removal during operation.

5.3.6.3 Power Switch Design Considerations

In systems that use DARA-2xxxxx consideration should be given to the design of the system power switch.

IBM recommends that the switch operate under control of the Bios, as opposed to being 'hard wired'. The same recommendation is made for 'cover-close' switches. When a hard wired switch is turned off, emergency unload occurs, as well as the problems cited in 4.1, "Data Loss by Power Off" on page 15 and 4.2, "Write Cache" on page 15.

5.3.6.4 Test Considerations

Start/stop testing is classically performed to verify head/disk durability. In the case of DARA-2xxxxx the heads do not land on the disk, so this type of test should be viewed as a test of the load/unload function.

Start/Stop testing should be done by commands through the interface, Not by power cycling the drive. Simple power cycling of DARA-2xxxxx invokes the emergency unload mechanism, and subjects the HDD to nontypical mechanical stress.

Power cycling testing may be required to test the boot-up function of the system. In this case IBM recommends that the power-off portion of the cycle contain the sequence specified in 5.3.6.2, "Required Power-Off Sequence" on page 24. Again, if this is not done, the emergency unload function is invoked and non-typical stress results.

5.4 Mechanical Specifications

5.4.1 Mechanical Dimensions and Weight


The following chart describes the dimensions for the 2.5" hard disk drive form factor.

Model	Height (mm)	Width (mm)	Length (mm)	Weight (gram)
DARA-212000/209000/206000	9.5 ± 0.2	69.85 ± 0.25	100.2 ± 0.25	99 Max
DARA-218000/215000	12.7 +0.0/-0.5	69.85 ± 0.25	100.2 ± 0.25	135 Max
DARA-225000	17.0 +0.0/-0.5	69.85 ± 0.25	100.2 ± 0.25	185 Max


Figure 20. Physical Dimension and Weight

5.4.2 Hole Locations


The following figures show hole location.

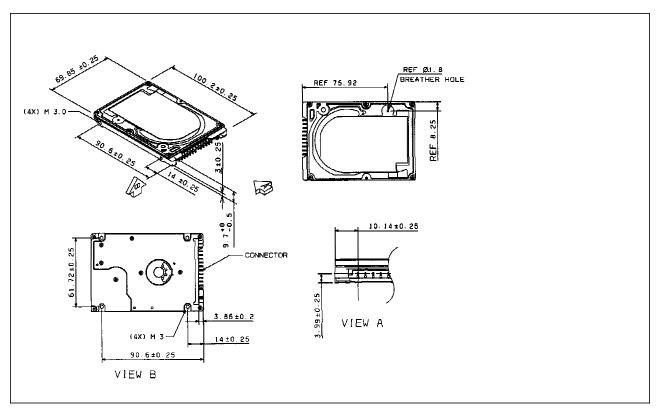

| Figure 21. Hole Location of DARA-212000/209000/206000

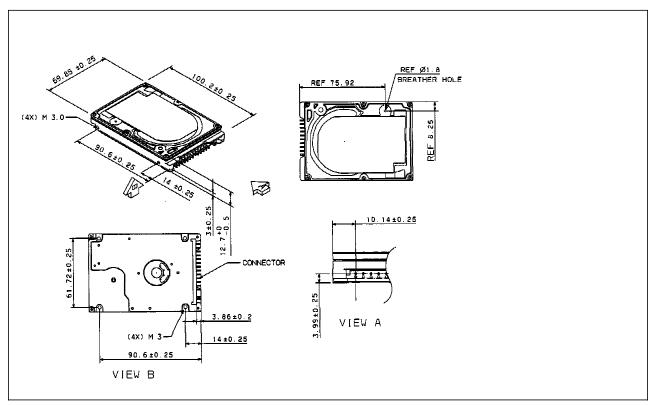

| Figure 22. Hole Location of DARA-218000/215000

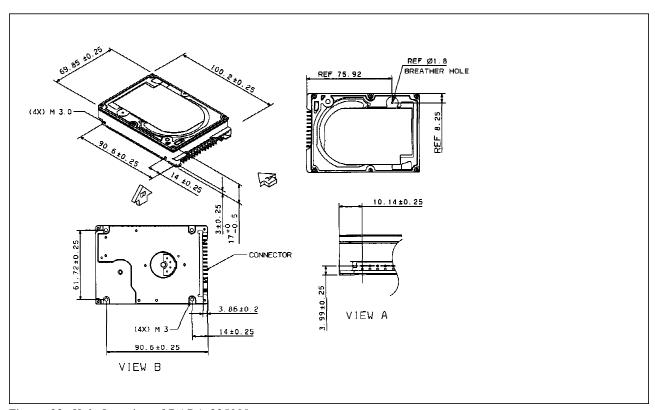

| Figure 23. Hole Location of DARA-225000

5.4.3 Mounting Orientation

The drive will operate in all axes (6 directions). The drive will operate within the specified error rates when tilted \pm 5 degree from these positions.

Performance and error rate will stay within specification limits if the drive is operated in the other permissible orientations from which it was formatted. Thus a drive formatted in a horizontal orientation will be able to run vertically and vice versa.

The recommended mounting screw torque is 3.0 + / - 0.5 kgf.cm.

The recommended mounting screw depth is 3.0 + / - 0.3 mm for bottom and 3.5 + / - 0.5 mm for horizontal mounting.

The system is responsible for mounting the drive securely enough to prevent excessive motion or vibration of the drive at seek operation or spindle rotation, using appropriate screws or equivalent mounting hardware.

5.5 Vibration and Shock

All vibration and shock measurements in this section shall be for the disk drive without the mounting attachments for the systems. The input level shall be applied to the normal drive mounting points.

Vibration test and shock test are to be conducted by mounting the drive to the table using the bottom four screws.

5.5.1 Operating Vibration

The disk drive will operate without a hard error while being subjected to the following vibration levels.

5.5.1.1 Random Vibration

The measurements are carried out with vibration test level 0.67G RMS (Root Mean Square) during 30 minutes of random vibration using the power spectrum density (PSD) as follows.

Random vibration PSD profile Breakpoint

```
5 Hz
              2.0 \times E-5
                             q * * 2 / Hz
 17 Hz
              1.1 \times E-3
 45 Hz
              1.1 \times E-3
              8.0 \times E-3
 48 Hz
 62 Hz
              8.0 \times E-3
 65 Hz
              1.0 \ x \ E-3
150 Hz
              1.0 \ x \ E-3
200 Hz
              5.0 \times E-4
500 Hz
              5.0 \times E-4
```

The specified levels are measured at the mounting points.

5.5.1.2 Swept Sine Vibration

- 1 G (Zero to peak), 5 to 500 to 5 Hz sine wave
- 2.0 oct/min sweep rate

5.5.2 Non-Operating Vibration

5.5.2.1 Random Vibration

The test consists of a random vibration applied in each of three mutually perpendicular axes with the time duration of 15 minutes per axis. The PSD levels for the test simulates the shipping and relocation environment which is shown below.

Figure 24. Random Vibration PSD Profile Breakpoints (Non-Operating)							
Hz Random Vibration PSD Profile Breakpoints (Non-Operating)							
Hz	2.5	5	40	500			
G**2/Hz	0.001	0.03	0.018	0.018			

Overall RMS level of vibration is 3.01G (RMS).

5.5.2.2 Swept Sine Vibration

- 25.4mm (peak to peak) displacement, 5 to 10 to 5 Hz
- 5 G (zero to peak), 10 to 500 to 10 Hz sine wave
- 0.5 oct/min sweep rate

5.5.3 Operating Shock

The drive meets the following criteria.

DARA-218000/215000/212000/209000/206000.

- No data loss with 15G 11msec half-sine shock pulse
- No data loss with 175G 2msec half-sine shock pulse

DARA-225000.

- No data loss with 15G 11msec half-sine shock pulse
- No data loss with 150G 2msec half-sine shock pulse

The shock pulses of each level are applied to the drive, ten pulses for each direction and for all three axes. There must be a minimum of 30 seconds delay between shock pulses. The input level is applied to a base plate where the drive is attached with four screws.

5.5.4 Non-Operating Shock

The drive withstands the following half-sine shock pulse

DARA-212000/209000/206000.

- No data loss with 120G 11ms
- No data loss with 800G 1ms

DARA-218000/215000

- No data loss with 120G 11ms
- No data loss with 700G 1ms

DARA-225000

- · No data loss with 120G 11ms
- · No data loss with 500G 2ms

The shocks are applied for each direction of the drive for three mutually perpendicular axes and one axis at a time. Input levels are measured on a base plate where the drive is attached with four screws.

5.6 Acoustics

5.6.1 Sound Power Level

The criteria of A-weighted sound power level is described below.

Measurements are to be taken in accordance with ISO 7779. The mean of 40 drives is to be less than the typical value. Each drive is to be less than the maximum value. Drives are to meet this requirement in both board down orientations.

DARA-218000/215000/212000/209000/206000.

A-weighted Sound Power (Bels)	Typical	Maximum
Idle	3.2	3.5
Operating	3.5	3.8

DARA-225000.

A-weighted Sound Power (Bels)	Typical	Maximum
Idle	3.6	3.9
Operating	4.0	4.3

Background power levels of the acoustic test chamber for each octave band are to be recorded.

Sound power tests are to be conducted with the drive supported by spacers so that the lower surface of the drive be located at 25 + / - 3mm height from the chamber floor. No sound absorbing material shall be used.

The acoustical characteristics of the disk drive are measured under the following conditions.

Idle mode:

Power on, disks spinning, track following, unit ready to receive and respond to control line commands.

Operating mode:

Continuous random cylinder selection and seek operation of actuator with a dwell time at each cylinder. Seek rate for the drive can be calculated as shown below.

$$Ns = 0.4/(Tt + T1)$$

where:

Ns : Average seek rate in seeks/s.

Tt : Published seek time from one random track to another without including rotational latency.

T1 : Equivalent time, in seconds, for the drive to rotate by half a revolution.

5.6.2 Discrete Tone Penalty

Discrete tone penalties are added to the A-weighted sound power (Lw) with following formula only when determining compliance.

Lwt(spec)=Lw+0.1*Pt+0.3 < 4.0 (Bels)

where:

Lw : A-weighted sound power level.

: Value of discrete tone penalty = dLt-6.0 (dBA) Pt

dLt : Tone-to-noise ratio taken in accordance with ISO 7779. at each octave band.

5.7 Identification

5.7.1 Labels

The following labels are affixed to every disk drive.

- 1. A label placed on the top of the HDA containing the statement 'Made by IBM' or equivalent, Part No., EC No. and FRU No.
- 2. A bar code label placed on the disk drive based on user request. The location on the disk drive is to be designated in the drawing.
- 3. Labels containing the vendor's name, disk drive model number, serial number, place of manufacture and UL/CSA logos.

5.8 Electromagnetic Compatibility

The drive, when installed in a suitable enclosure and exercised with a random accessing routine at maximum data rate, shall meet the worldwide EMC requirements listed below.

IBM will provide technical support to assist users in complying with the EMC requirements.

- United States Federal Communications Commission (FCC) Rules and Regulations (Class B), Part 15.
- European Economic Community (EEC) directive number 76/889 related to the control of radio frequency interference and the Verband Deutscher Elektrotechniker (VDE) requirements of Germany (GOP).

5.8.1 CE Mark

The product is certified for compliance to EC directive 89/336/EEC. CE marking for the certification appears on the drive.

5.8.2 C-Tick Mark

The product complies with the following Australian EMC standard.

• Limits and methods of measurement of radio disturbance characteristics of information technology equipment, AS/NZS 3548:1995 Class B.

5.9 Safety

5.9.1 Underwriters Lab(UL) Approval

DARA-2xxxxx complies with UL 1950:1995+A1.

5.9.2 Canadian Standards Authority(CSA) Approval

DARA-2xxxxx complies with CSA C22.2 950-M1995.

5.9.3 IEC Compliance

DARA-2xxxxx complies with IEC 950:1991+A1-4.

5.9.4 German Safety Mark

DARA-2xxxxx are approved by TUV on Test Requirement:

EN 60 950:1992+A1-4.

5.9.5 Flammability

Printed Circuit boards used in this product are made of material with a UL recognized flammability rating of V-1 or better. The flammability rating is marked or etched on the board. All other parts not considered electrical components are made of material with a UL recognized flammability rating of V-1 or better except minor mechanical parts.

5.9.6 Secondary Circuit Protection

This product utilizes printed circuit wiring that must be protected against the possibility of sustained combustion due to circuit or component failure. Adequate secondary over current protection is the responsibility of the using system.

User must protect the drive from it's electrical short circuit problem. 10 A limit is required for safety purpose.

5.10 Packaging

Drives are shipped in ESD protective bags. Drives are shipped in appropriate containers.

6.0 Electrical Interface Specifications

6.1 Cabling

The maximum cable length from the host system to the drive plus circuit pattern length in the host system shall not exceed 18 inches.

6.2 Interface Connector

The signal connector for AT Attachment is designed to mate with Dupont part number 69764-044 or equivalent.

Figure 25 and 5.4.2, "Hole Locations" show the connector location and physical pin location.

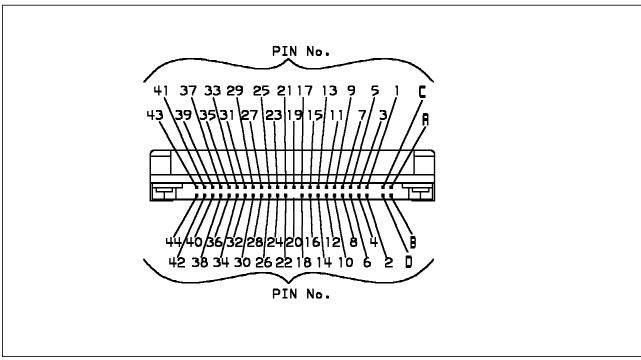


Figure 25. AT Attachment connector of DARA-2xxxxx

Note 1: Pin position 20 is left blank for correct connector insertion.

Note 2: Pin position A,B,C,D are used for drive address setting. (Refer to Figure 48 on page 58 for

address setting.)

© Copyright IBM Corp. 1999

6.2.1 Signal Definition

The pin assignments of interface signals are listed as follows:

PIN	SIGNAL	I/O	Туре	PIN	SIGNAL	I/O	Туре
01 03 05 07 09 11 13 15 17 19	-RESET DD07 DD06 DD05 DD04 DD03 DD02 DD01 DD00 GND DMARQ	I I/O I/O I/O I/O I/O I/O I/O	TTL 3-state 3-state 3-state 3-state 3-state 3-state 3-state 3-state 3-state	0 2 0 4 0 6 0 8 1 0 1 2 1 4 1 6 1 8 (2 0)	GND DD08 DD09 DD10 DD11 DD12 DD13 DD14 DD15 Key GND	I/0 I/0 I/0 I/0 I/0 I/0 I/0	3-state 3-state 3-state 3-state 3-state 3-state 3-state 3-state 3-state
23 25 27 29 31 33 35 37 39 41 43	-DIOW(*) -DIOR(*) IORDY(*) -DMACK INTRQ DA01 DA00 -CS0 -DASP +5V Logic GND	I I O I I I I/O PWR	TTL TTL OD TTL 3-state TTL TTL TTL OD	2 4 2 6 2 8 3 0 3 2 3 4 3 6 3 8 4 0 4 2 4 4	GND GND CSEL GND —IOCS16 —PDIAG DA02 —CS1 GND +5V MOTOR (Resv)	I O I/O I I PWR	TTL OD OD TTL TTL

Figure 26. Table of signals

Notes:

- 1. "O" designates an output from the Drive.
- 2. "I" designates an input to the Drive.
- 3. "I/O" designates an input/output common.
- 4. "OD" designates Open-Drain output.
- 5. The signal lines marked with (*) are redefined during the Ultra DMA protocol to provide special functions. These lines change from the conventional to special definitions at the moment the Host decides to allow a DMA burst, if the Ultra DMA transfer mode was previously chosen via SetFeatures. The Drive becomes aware of this change upon assertion of the -DMACK line. These lines revert back to their original definitions upon the deassertion of -DMACK at the termination of the DMA burst.

	Special Definition (for Ultra DMA)	Conventional Definition
Write Operation	-DDMARDY HSTROBE STOP	IORDY -DIOR -DIOW
Read Operation	-HDMARDY DSTROBE STOP	-DIOR IORDY -DIOW

Figure 27. Signal Special Definitions for Ultra DMA

6. "PWR" designates a power supply to the drive.

7. "(Resv)" designates reserved pin which must be left unconnected.

DD00-DD15 16-bit bi-directional data bus between the host and the HDD. The lower 8 lines, DD00-07, are used for Register and ECC access. All 16 lines, DD00-15, are used for data transfer. These are 3-State lines with 24 mA current sink capability.

DA00-DA02 Address used to select the individual register in the HDD.

Chip select signal generated from the Host address bus. When active, one of the Command -CS0 Block Registers (Data, Error{Features when written}, Sector Count, Sector Number, Cylinder Low, Cylinder High, Drive/Head and Status (Command when written) register) can be selected. (See Figure 49 on page 59.)

-CS1 Chip select signal generated from the Host address bus. When active, one of the Control Block Registers (Alternate Status [Device Control when written] and Drive Address register) can be selected. (See Figure 49 on page 59.)

This line is used to reset the HDD. It shall be kept Low logic state during power up and -RESET kept High thereafter.

Its rising edge holds data from the host data bus to a register or data register of the HDD. -DIOW

-DIOR When low, this signal enables data from a register or data register of the drive onto data bus. The data on the bus shall be latched on the rising edge of -DIOR.

INTRQ Interrupt is enabled only when the drive is selected, and the host activates the -IEN bit in the Device Control Reg. Otherwise, this signal is in high impedance state regardless of the state of the IRQ bit. The interrupt is set when the IRQ bit is set by the drive CPU. IRQ is reset to zero by a host read of the status register or a write to the Command Reg. This signal is a 3-State line with 24 mA sink capability.

-IOCS16 Indication to the host that a 16-bit wide data register has been addressed and that the drive is prepared to send or receive a 16-bit wide data word. This signal is an Open-Drain output with 24 mA sink capability and an external resistor is needed to pull this line to 5 volts.

-DASP This is a time-multiplexed signal which indicates that a drive is active, or that device 1 is present. This signal is driven by Open-Drain driver and internally pulled-up to 5 volts through a $10k\Omega$ resistor.

> During Power-On initialization or after -RESET is negated, -DASP shall be asserted by Device 1 within 400 msec to indicate that device 1 is present. Device 0 shall allow up to 450msec for device 1 to assert -DASP. If device 1 is not present, device 0 may assert -DASP to drive a LED indicator.

> -DASP shall be negated following acceptance of the first valid command by device 1. Anytime after negation of -DASP, either drive may assert -DASP to indicate that a drive is active.

-PDIAG This signal shall be asserted by device 1 to indicate to device 0 that it has completed diagnostics. This line is pulled-up to 5 volts in the HDD through a $10k\Omega$ resistor.

> Following a Power On Reset, software reset or -RESET, drive 1 shall negate -PDIAG within 1 msec (to indicate to device 0 that it is busy). Drive 1 shall then assert -PDIAG within 30 seconds to indicate that it is no longer busy, and is able to provide status.

> Following the receipt of a valid Execute Drive Diagnostics command, device 1 shall negate -PDIAG within 1 msec to indicate to device 0 that it is busy and has not yet passed its drive diagnostics. If device 1 is present then device 0 shall wait up to 6 seconds from the receipt of a valid Execute Drive Diagnostics command for drive 1 to assert -PDIAG. Device 1 should clear BSY before asserting -PDIAG, as -PDIAG is used to indicate that device 1 has passed its diagnostics and is ready to post status.

> If -DASP was not asserted by device 1 during reset initialization, device 0 shall post its own status immediately after it completes diagnostics, and clear the device 1 Status register to

00h. Device 0 may be unable to accept commands until it has finished its reset procedure and is ready (DRDY=1).

CSEL (Cable Select)

This signal is monitored to determine the drive address, 0 or 1, when the jumper on the interface connector is at Position-3. (See Figure 48 on page 58.)

- When CSEL is ground or a low level, the drive works as address 0.
- When CSEL is open or a high level, the drive works as address 1.

The signal level of CSEL to one drive should be different from the signal level to another drive on the same AT interface cable to avoid drive address 0-0 or 1-1 configuration.

KEY

Pin position 20 has no connection pin. It is recommended to close the respective position of the cable connector in order to avoid incorrect insertion by mistake.

IORDY

Indication to host that the drive is ready to complete current I/O cycle. This line is driven low at the falling edge of -DIOR or -DIOW, when HDD needs some additional WAIT cycle(s) to extend PIO cycle. This line can be connected to host IORDY signal in order to insert WAIT state(s) in the host PIO cycle. This is an Open-Drain output with 24 mA sink capability.

5V Power

There are two input pins for +5 V power supply, "+5 V Logic" and "+5 V Motor". The two input pins are tied together within drive.

-DMACK

This signal shall be used by the host in response to DMARQ to either acknowledge that data has been accepted, or that data is available.

This signal is internally pulled-up to 5Volt through 15 K ohm resistor and the tolerance of the resistor value is -50% to +100%.

DMARQ

This signal, used for DMA data transfers between host and drive, shall be asserted by the drive when it is ready to transfer data to or from the host. The direction of data transfer is controlled by -HIOR and -HIOW. This signal is used on a handshake manner with -DMACK. This signal is a 3-state line with 24mA sink capability and internally pulled-down to GND through 10 k Ω resistor.

-HDMARDY (Ultra DMA)

This signal is used only for Ultra DMA data transfers between host and drive.

-HDMARDY is a flow control signal for Ultra DMA data in bursts. This signal is held asserted by the host to indicate to the device that the host is ready to receive Ultra DMA data in transfers. The host may negate -HDMARDY to pause an Ultra DMA data in transfer.

HSTROBE (Ultra DMA)

This signal is used only for Ultra DMA data transfers between host and drive.

HSTROBE is the data out strobe signal from the host for an Ultra DMA data out transfer. Both the rising and falling edge of HSTROBE latch the data from DD(15:0) into the device. The host may stop toggling HSTROBE to pause an Ultra DMA data out transfer.

STOP (Ultra DMA)

This signal is used only for Ultra DMA data transfers between host and drive.

STOP shall be asserted by the host prior to initiation of an Ultra DMA burst. STOP shall be negated by the host before data is transferred in an Ultra DMA burst. Assertion of STOP by the host during or after data transfer in an Ultra DMA mode signals the termination of the burst.

-DDMARDY (Ultra DMA)

This signal is used only for Ultra DMA data transfers between host and drive.

-DDMARDY is a flow control signal for Ultra DMA data out bursts. This signal is held asserted by the device to indicate to the host that the device is ready to receive Ultra DMA data out transfers. The device may negate -DDMARDY to pause an Uptra DMA data out transfer.

DSTROBE (Ultra DMA)

This signal is used only for Ultra DMA data transfers between host and drive.

DSTROBE is the data int strobe signal from the device for an Ultra DMA data in transfer. Both the rising and falling edge of DSTROBE latch the data from DD(15:0) into the host. The device may stop toggling DSTROBE to pause an Ultra DMA data in transfer.

6.3 Interface Logic Signal Levels

The interface logic signal have the following electrical specifications:

```
Input Bigh Voltage - 2.0 V min./ Vcc+0.7 V max.


Input Low Voltage - 0.5 V min./ 0.8 V max.

Outputs: Output High Voltage - 2.4 V min.
Output Low Voltage - 0.5 V max.

Current: Driver Sink Current - 24 mA min.
Driver Source Current - 400 uA min.
```

6.4 Reset timings


HDD reset timing.

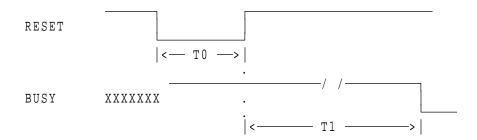


	PARAMETER DESCRIPTION	Min (usec)	Max (sec)
Т0	RESET low width	25] —]
Т1	RESET high to Not BUSY		9.5

Figure 28. System Reset timing

6.5 PIO Timings

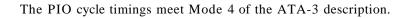

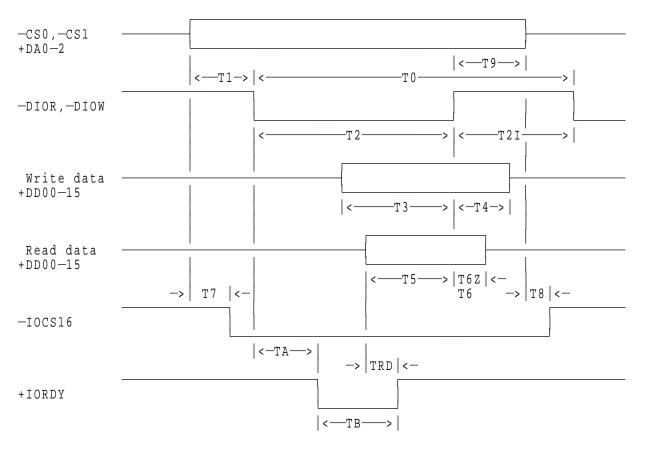


	PARAMETER DESCRIPTION	MIN (nsec)	MAX (nsec)	Note
T0 T1 T2 T2I T3 T4 T5 T6 T6Z T7 T8 T9 TRD TA TB	Cycle time -CSO-1, +DA00-02 valid to -DIOR, -DIOW active -DIOR, -DIOW pulse width -DIOR, -DIOW recovery +DD00-15 setup to -DIOW high -DIOW high to +DD00-15 hold +DD00-15 setup to -DIOR high -DIOR high to +DD00-15 hold -DIOR high to +DD00-15 tristate -CSO-1, +DA00-02 valid to -IOCS16 assertion -CSO-1, +DA00-02 invalid to -IOCS16 negation -DIOR, -DIOW high to -CSO-1, +DA00-02 hold Read data valid to +IORDY active -DIOR, -DIOW low to +IORDY low +IORDY pulse width	120 25 70 25 20 10 20 5 — 10 0		*1

Note *1 : This value is applied only when +IORDY is not negated. When +IORDY is negated, TRD is applied.

Figure 29. PIO cycle timings

6.5.1 DMA Timings (Single Word)

The Single Word DMA timing meets Mode 2 of the ATA-3 description.

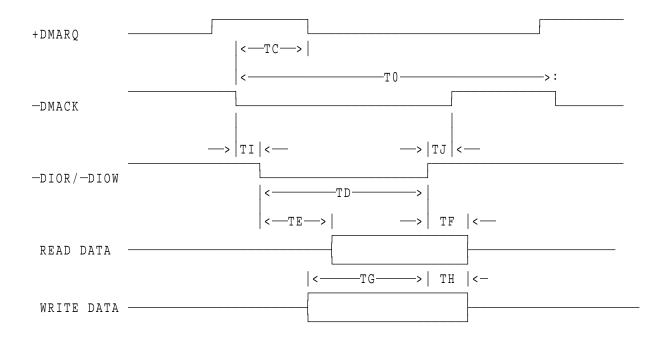


	PARAMETER DESCRIPTION	MIN (nsec)	MAX (nsec)	Note
TO TC TD TE TF TG TH TI	Cycle timeDMACK active to +DMARQ inactiveDIOR,DIOW pulse widthDIOR data accessDIOR data holdDIOW data setupDIOW data holdDMACK toDIOR/DIOW setupDIOR/DIOW toDMACK hold	240 	80 - 60 - - - -	

Figure 30. DMA (Single Word) cycle timings

6.5.2 DMA Timings (Multiword)

The Multiword DMA timing meets Mode 2 of the ATA-3 description.

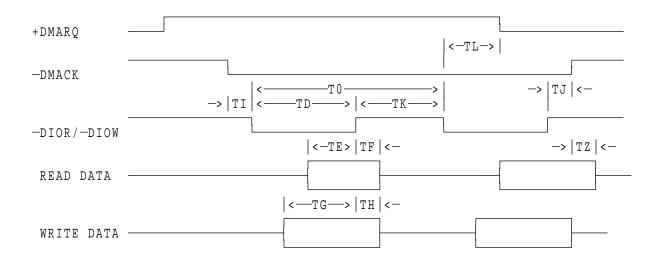

	PARAMETER DESCRIPTION	MIN (nsec)	MAX (nsec)	Note
TO TD TF TG TH TI TK TL	Cycle time -DIOR,-DIOW pulse width -DIOR data setup -DIOR data hold -DIOW data setup -DIOW data hold -DMACK to -DIOR/-DIOW setup -DIOR/-DIOW to -DMACK hold -DIOR/-DIOW nagated pulse width -DIOR/-DIOW to -DMARQ delay -DMACK to tristate	120 70 20 5 20 10 0 5 25 —	- - - - - - - - - 35 25	

Figure 31. DMA (Multi Word) cycle timings

6.5.3 Ultra DMA Timings

The Ultra DMA timing meets Mode 0,1,2,3 and 4 of the Ultra DMA Protocol.

6.5.3.1 Initiating Read DMA

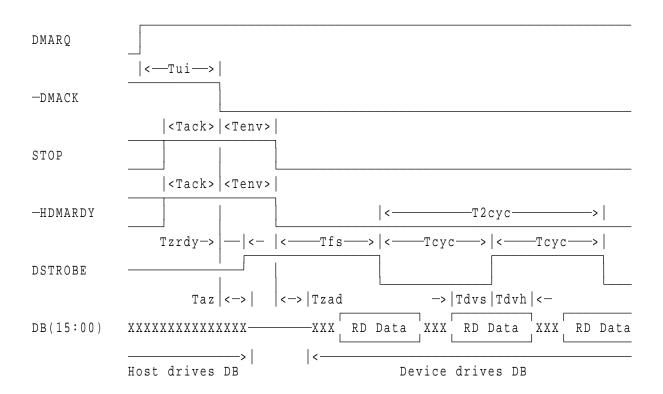


Figure 32. Ultra DMA cycle time chart (Initiating Read)

[nsec]

	PARAMETER DESCRIPTION		MODE 0		MODE1) E 2
			MAX	MIN	MAX	MIN	MAX
Tui Tack Tenv Tzrdy Tfs Tcyc T2cyc	First strobe time Cycle Time	0 20 20 0 0 112 230	70 - 230 -	0 20 20 0 0 73 154	70 - 200 -	0 20 20 0 0 54 115	70 - 170 -
Taz Tzad Tdvs Tdvh	Output release time Output enable time Data setup time (at device side) Data Hold time (at device side)	0 70 6	10 - - -	0 48 6	10 - - -	0 3 0 6	10 - - -

[nsec]

	PARAMETER DESCRIPTION	MOI	DE3	MODE4	
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX
T2cyc Taz Tzad	First strobe time Cycle Time 2 Cycle time Output release time Output enable time	0 20 20 0 0 39 86 —	55 - 130 - - 10	0 20 20 0 0 25 57 0	55 - 120 - 10
Tdvs Tdvh	Data setup time (at device side) Data Hold time (at device side)	6	_	6	_

Figure 33. Ultra DMA cycle timings (Initiating Read)

6.5.3.2 Host Pausing Read DMA

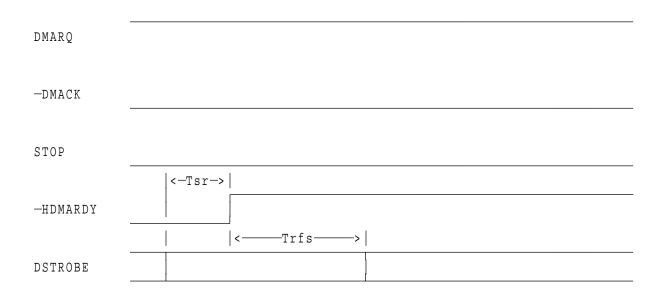


Figure 34. Ultra DMA cycle time chart (Host pausing Read)

[nsec]

PARAMETER DESCRIPTION	MODE 0		MODE1		MODE2		
	MIN	MAX	MIN	MAX	MIN	MAX	
Tsr Trfs	Strobe to ready response time Ready to final strobe time	_ _	5 0 7 5	_	3 0 7 0	_ _ 	2 0 6 0

[nsec]

	DADAMETED DECCRIPTION	MOI) E 3	MOI) E 4
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX
Tsr Trfs	Strobe to ready response time Ready to final strobe time	_	_ 60	_	_ 6 0

Note: When a host does not meet Tsr, it should be ready to receive 2 (mode 0, 1 and 2) or 3 (mode 3 and 4) more strobes after -HDMARDY is negated.

Figure 35. Ultra DMA cycle timings (Host pausing Read)

6.5.3.3 Host Terminating Read DMA

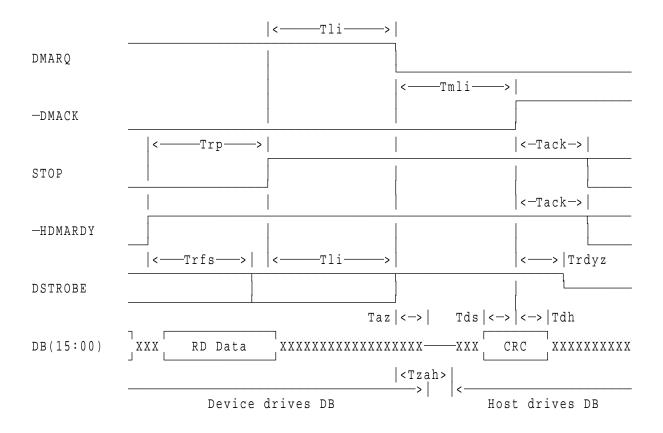


Figure 36. Ultra DMA cycle time chart (Host terminating Read)

[nsec]

	DADAMEMED DECONTROLON	MOI	DE O	MOI	DE1	MODE 2		
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX	MIN	MAX	
Trfs Trp Tli Taz Tzah Tmli Tds Tdh Tack	Ready to final strobe time Ready to pause time Limited interlock time Output release time Output enable time Interlock time Data setup time (at device side) Data Hold time (at device side) Hold time after —DMACK negation	- 160 0 - 20 20 15 5	75 150 10 —	125 0 - 20 20 10 5	70 — 150 10 — — —	100 0 - 20 20 7 5	60 150 10 	
Trdyz	Pull-up time before DSTROBE release		20	_	20		20	

[nsec]

	PARAMETER DESCRIPTION	MOI) E 3	MOI) E 4
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX
Trfs Trp Tli Taz Tzah Tmli Tds Tdh Tack	Ready to final strobe time Ready to pause time Limited interlock time Output release time Output enable time Interlock time Data setup time (at device side) Data Hold time (at device side) Hold time after —DMACK negation	100 0 - 20 20 7 5	60 100 10 - -	100 0 - 20 20 5 5	60 100 10
Trdyz	Pull—up time before DSTROBE release	_	20	_	20

Figure 37. Ultra DMA cycle timings (Host terminating Read)

6.5.3.4 Device Terminating Read DMA

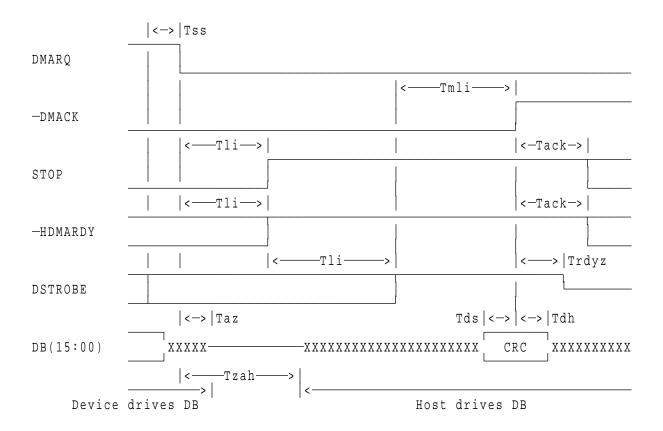


Figure 38. Ultra DMA cycle time chart (Device terminating Read)

[nsec]

	MOI	DE O	MOI	DE1	MOI	DE 2
PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX	MIN	MAX
Tss Time from strobe to stop assertion Tli Limited interlock time Taz Output release time Tzah Output enable time Tmli Interlock time Tds Data setup time (at device side) Tdh Data Hold time (at device side) Tack Hold time after -DMACK negation Trdyz Pull-up time before DSTROBE release	50 0 	150 10 — — — — — 20	50 0 20 20 10 5	150 10 — — — — — 20	50 0 	150 10 - - - - 20

[nsec]

PARAMETER DESCRIPTION	MOI	DE3	MOI	DE 4
PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX
Tss Time from strobe to stop assertion Tli Limited interlock time Output release time Tzah Output enable time Tmli Interlock time Tds Data setup time (at device side) Tdh Data Hold time (at device side) Tack Hold time after -DMACK negation Trdyz Pull-up time before DSTROBE release	5 0 0 	100 10 - - - 20	5 0 0 - 2 0 2 0 5 5 2 0	100 10 - - - - 20

Figure 39. Ultra DMA cycle timings (Device terminating Read)

6.5.3.5 Initiating Write DMA

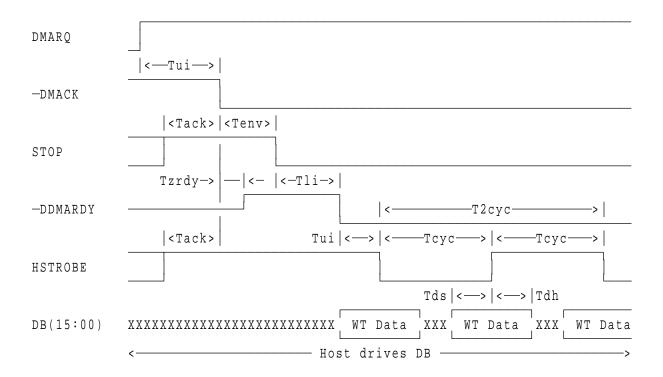


Figure 40. Ultra DMA cycle time chart (Initiating Write)

[nsec]

	PARAMETER DESCRIPTION	MOD	E O	MOI) E 1	MODE2	
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX	MIN	MAX
Tui Tack Tenv Tzrdy Tli Tcyc T2cyc	Limited interlock time Cycle Time 2 Cycle time	0 20 20 0 0 112 230		0 0 73 154	70 - 150 -	0	70 - 150 -
Tds Tdh	Data setup time (at device side) Data Hold time (at device side)	15 5	_ _	10	_	5	-

[nsec]

	MOI	DE 3	MOI	DE 4
PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX
Tui Unlimited interlock time Tack Setup time before —DMACK assertion Tenv Envelope time Tzrdy Wait time before driving DSTROBE Tli Limited interlock time Tcyc Cycle Time T2cyc 2 Cycle time Tds Data setup time (at device side) Tdh Data Hold time (at device side)	0 20 20 0 0 39 86 7	55 - 100 - - -	0 20 20 0 0 25 57 5	55 - 100 - - -

Figure 41. Ultra DMA cycle timings (Initiating Write)

6.5.3.6 Device Pausing Write DMA

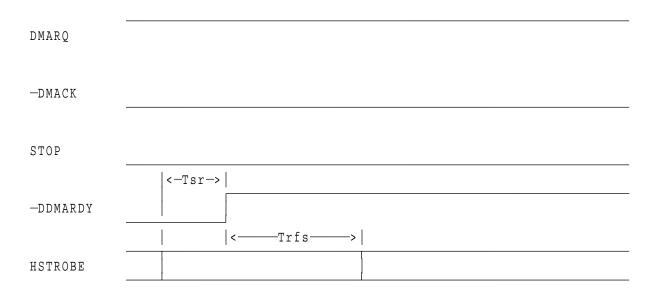


Figure 42. Ultra DMA cycle time chart (Device pausing Write)

[nsec]

	PARAMETER DESCRIPTION	MOI	DE O	MODE1		MODE 2	
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX	MIN	MAX
Tsr Trfs	Strobe to ready response time Ready to final strobe time		5 0 7 5	_ _	3070	_	20

[nsec]

PARAMETER DESCRIPTION	DADAMETED DECCRIPTION	MOI) E 3	MOI	DE4
	MIN	MAX	MIN	MAX	
Tsr Trfs	Strobe to ready response time Ready to final strobe time	_	- 6 0	_	_ 60

Note : When a device does not meet Tsr, it shall be ready to receive 3 more strobes after -DDMARDY is negated.

Figure 43. Ultra DMA cycle timings (Device pausing Write)

6.5.3.7 Device Terminating Write DMA

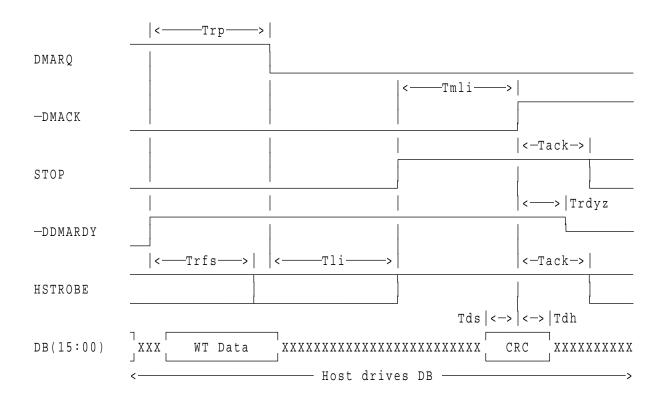


Figure 44. Ultra DMA cycle time chart (Device terminating Write)

[nsec]

	DADAMERED DECENTRATION	MOI) E 0	MOI) E 1	MOI) E 2
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX	MIN	MAX
Trfs Trp Tli Tmli Tds Tdh Tack Trdyz	Ready to final strobe time Ready to pause time Limited interlock time Interlock time Data setup time (at device side) Data Hold time (at device side) Hold time after —DMACK negation Pull—up time before HSTROBE release	160 0 20 15 5 20	75 - 150 - - - 20	125 0 20 10 5 20	70 - 150 - - - 20	100 0 20 7 5 20	60 - 150 - - - - 20

[nsec]

PARAMETER DESCRIPTION	MOI) E 3	MODE 4		
PARAMETER DESCRIPTION		MAX	MIN	MAX	
Trfs Ready to final strobe time Trp Ready to pause time Tli Limited interlock time Tmli Interlock time Tds Data setup time (at device side) Tdh Data Hold time (at device side) Tack Hold time after -DMACK negation Trdyz Pull-up time before HSTROBE release	100 0 20 7 5 20	60 - 100 - - - 20	100 0 20 5 5 20	60 100 - - - 20	

Figure 45. Ultra DMA cycle timings (Device terminating Write)

6.5.3.8 Host Terminating Write DMA

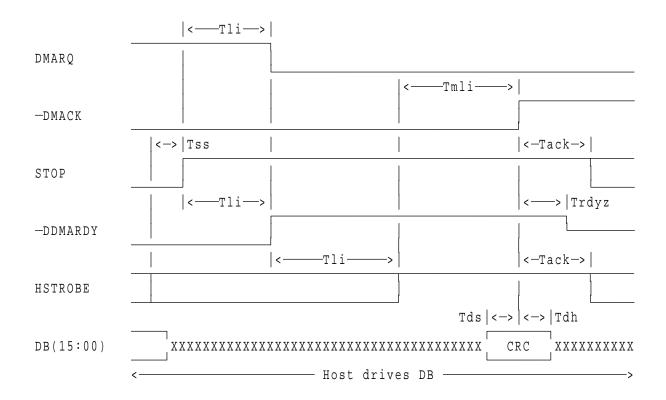


Figure 46. Ultra DMA cycle time chart (Host terminating Write)

[nsec]

	PARAMETER DESCRIPTION	MOI	DE O	MOI	DE1	MOI) E 2
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX	MIN	MAX
Tss Tli Tmli Tds Tdh Tack Trdyz	Time from strobe to stop assertion Limited interlock time Interlock time Data setup time (at device side) Data Hold time (at device side) Hold time after —DMACK negation Pull—up time before DSTROBE release	50 0 20 15 5	150 - - - - 20	50 0 20 10 5	150 - - - 20	50 0 20 7 5 20	150 - - - - 20

[nsec]

	PARAMETER DESCRIPTION	MODE3		MODE 4	
	PARAMETER DESCRIPTION	MIN	MAX	MIN	MAX
Tss Tli Tmli Tds Tdh Tack Trdyz	Time from strobe to stop assertion Limited interlock time Interlock time Data setup time (at device side) Data Hold time (at device side) Hold time after —DMACK negation Pull—up time before DSTROBE release	50 0 20 7 5 20	100 - - - - 20	5 0 0 2 0 5 5 2 0	100 - - - 20

Figure 47. Ultra DMA cycle timings (Host terminating Write)

6.6 Drive Address Setting

A jumper is available at the interface connector to determine the drive address. The set position of the jumper is as shown in Figure 48.

Using Cable Selection, the drive address depends on the condition of pin 28 of the AT interface cable. In the case when pin 28 is ground or low, the drive is a Master. If pin 28 is open or high level, the drive is a Slave.

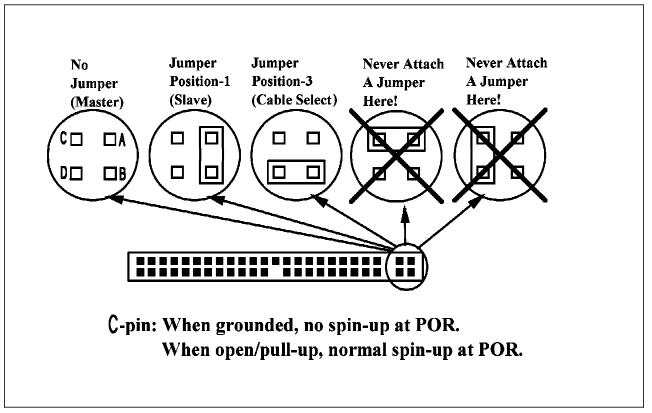


Figure 48. Address setting by a jumper for DARA-2xxxxx.

6.6.1 Default Setting

The default setting of jumper at shipment is No Jumper (Master).

6.7 Addressing of drive Registers

The host addresses the drive through a set of registers called a Task File. These registers are mapped into the host's I/O space. Two chip select lines (-HCS0 and -HCS1) and three address lines (HA00-02) are used to select one of these registers, while a -HIOR or -HIOW is provided at the specified time.

The -HCS0 is used to address Command Block registers. while the -HCS1 is used to address Control Block registers.

The following table shows the standard I/O address range for IBM PC-AT machines.

Addr.	-CS0	-cs1	HA2	HA1	HA0	-HIOR = 0 (Read)	-HIOW = 0 (Write)	
						Command Block Registers		
1F0 1F1 1F2 1F3 1F4 1F5 1F6 1F7	0 0 0 0 0	1 1 1 1 1 1 1	0 0 0 0 1 1 1	0 0 1 1 0 0 1 1	0 1 0 1 0 1	Data Reg. Error Reg. Sector count Reg. Sector number Reg. Cylinder low Reg. Cylinder high Reg. Drive/Head Reg. Status Reg.	Data Reg. Features Reg. Sector count Reg. Sector number Reg. Cylinder low Reg. Cylinder high Reg. Drive/Head Reg. Command Reg.	
						Control Block Registers		
3 F 6 3 F 7	1 1	0	1 1	1 1	0	Alt. Status Reg. Drive address Reg.	Device control Reg	

Figure 49. Register Address

Note: "Addr." field is shown just as an example.

Part 2. ATA Interface Specification

© Copyright IBM Corp. 1999

7.0 General

7.1 Introduction

This specification describes the host interface of DARA-2xxxxx.

The interface conforms to the Working Document of Information technology - AT Attachment with Packet Interface Extension (ATA/ATAPI-4) Revision 17 dated on October 30th, 1997. with certain limitations described in 8.0, "Deviations From Standard" on page 65.

DARA-2xxxxx support following new functions included by ATA/ATAPI-4 standard or newer standard.

- S.M.A.R.T. Error Logging and Self Test commands
- Ultra-DMA/66 transfer commands

DARA-2xxxx support following functions as Vendor Specific Function.

- · Address Offset Feature
- Format Unit Function

7.2 Terminology

Device Device indicates DARA-2xxxxx

Host Host indicates the system that the device is attached to.

First Command The command which is executed first right after power on reset or hard reset when

the initial power mode at power on is Standby mode.

INTRQ Interrupt request (Device or Host)

8.0 Deviations From Standard

The interface conforms to the Working Document of Information technology - AT Attachment with Packet Interface Extension (ATA/ATAPI-4) Revision 17 dated on October 30th, 1997 with deviation as follows.

Write Verify WRITE VERIFY command does not include read verification after write operation.

The function is exactly same as WRITE SECTORS command.

SMART Return Status SMART RETURN STATUS subcommand does not check advisory attributes.

That is, the device will not report threshold exceeded condition unless prefailure attributes exceed their corresponding thresholds. For example, Power-On Hours Attribute

never results in negative reliability status.

Standby Timer Even if IDLE command or STANDBY command is issued with Sector Cuont reg-

ister value 00h, Standby Timer is not disabled, but it sets default value 109 minutes. In case Sector Count register value is other than 00h, Standby Timer is set to (Sector

Count register value) x 5 seconds.

Check Power Mode While the drive is in idle mode, FFh is returned as a response to Check Power Mode

command. 80h is not used for the response.

9.0 Registers

	Ado	dresses	5		Function	ns	
CS0-	CS1-	DA2	DA1	DA0	READ(DIOR-)	WRITE(DIOW-)	
N	N	Х	Х	Х	Data bus high imped*1	Not used	
					Control block reg	gisters	
N N N N	A A A A	0 1 1 1	x 0 1	x x 0 1	Data bus high imped Data bus high imped Alternate Status Device Address	Not used Not used Device Control Not used	
					Command block registers		
A A A A A A A A A	N N N N N N N N	0 0 0 0 0 1 1 1 1 1 1	0 0 1 1 1 0 0 0 0	0 1 0 1 1 0 0 0 1 1 0 0	Data Error Register Sector Count Sector Number *2 LBA bits 0-7 Cylinder Low *2 LBA bits 8-15 Cylinder High *2 LBA bits 16-23 Device/Head *2 LBA bits 24-27 Status	Data Features Sector Count Sector Number *2 LBA bits 0-7 Cylinder Low *2 LBA bits 8-15 Cylinder High *2 LBA bits 16-23 Device/Head *2 LBA bits 24-27 Command	
А	А	х	Х	Х	Invalid address	Invalid address	

^{*1 &}quot;imped" stands for "impedance".

Logic conventions : A = signal assertedN = signal negated

x = does not matter which it is

Figure 50. Register Set

Communication to or from the device is through an I/O Register that routes the input or output data to or from registers addressed by the signals from the host (CS0-, CS1-, DA2, DA1, DA0, DIOR- and DIOW-).

The Command Block Registers are used for sending commands to the device or posting status from the device.

The Control Block Registers are used for device control and to post alternate status.

9.1 Alternate Status Register

^{*2} Mapping of registers in LBA mode

	Alternate Status Register										
7	6	5	4	3	2	1	0				
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR				

Figure 51. Alternate Status Register

This register contains the same information as the Status Register. The only difference is that reading this register does not imply interrupt acknowledge or clear a pending interrupt. See 9.13, "Status Register" on page 71 for the definition of the bits in this register.

9.2 Command Register

This register contains the command code being sent to the device. Command execution begins immediately after this register is written. The command set is shown in Figure 68 on page 103.

All other registers required for the command must be set up before writing the Command Register.

9.3 Cylinder High Register

This register contains the high order bits of the starting cylinder address for any disk access. At the end of the command, this register is updated to reflect the current cylinder number.

In LBA Mode this register contains Bits 16-23. At the end of the command, this register is updated to reflect the current LBA Bits 16-23.

The cylinder number may be from zero to the number of cylinders minus one.

9.4 Cylinder Low Register

This register contains the low order 8 bits of the starting cylinder address for any disk access. At the end of the command, this register is updated to reflect the current cylinder number.

In LBA Mode this register contains Bits 8-15. At the end of the command, this register is updated to reflect the current LBA Bits 8-15.

The cylinder number may be from zero to the number of cylinders minus one.

9.5 Data Register

This register is used to transfer data blocks between the device data buffer and the host. It is also the register through which sector information is transferred on a Format Track command, and configuration information is transferred on an Identify Device command.

All data transfers are 16 bits wide, except for ECC byte transfers, which are 8 bits wide. Data transfers are PIO only.

The register contains valid data only when DRQ=1 in the Status Register.

9.6 Device Control Register

	Device Control Register									
7	6 —	5 —	4	3 1	2 SRST	1 -IEN	0 0			

Figure 52. Device Control Register

Bit Definitions

SRST (RST) Software Reset. The device is held reset when RST=1. Setting RST=0 re-enables

the device.

The host must set RST=1 and wait for at least 5 microseconds before setting

RST=0, to ensure that the device recognizes the reset.

-IEN Interrupt Enable. When IEN=0, and the device is selected, device interrupts to the

host will be enabled. When IEN=1, or the device is not selected, device interrupts to

the host will be disabled.

9.7 Drive Address Register

Drive Address Register										
7	6	5	4	3	2	1	0			
H I Z	-WTG	—H 3	—H 2	—H1	—H 0	-DS1	-DS0			

Figure 53. Drive Address Register

This register contains the inverted drive select and head select addresses of the currently selected drive.

Bit Definitions

HIZ High Impedance. This bit is not device and will always be in a high impedance state.

-WTG -Write Gate. This bit is 0 when writing to the disk device is in progress.

-Н3,-Н2,-Н1,-Н0 -Head Select. These four bits are the one's complement of the binary coded address

of the currently selected head. -H0 is the least significant.

-DS1 -Drive Select 1. Drive select bit for device 1, active low. DS1=0 when device 1

(slave) is selected and active.

-DS0 -Drive Select 0. Drive select bit for device 0, active low. DS0=0 when device 0

(master) is selected and active.

9.8 Device/Head Register

	Device/Head Register										
7 1	6	5	4	3	2	1	0				
	L	1	DRV	HS3	HS2	HS1	HS0				

Figure 54. Device/Head Register

This register contains the device and head numbers.

Bit Definitions

L Binary encoded address mode select. When L=0, addressing is by CHS mode. When

L=1, addressing is by LBA mode.

DRV Device. When DRV=0, device 0 (master) is selected. When DRV=1, device 1

(slave) is selected.

HS3,HS2,HS1,HS0 Head Select. These four bits indicate binary encoded address of the head . HS0 is the

least significant bit. At command completion, these bits are updated to reflect the

currently selected head.

The head number may be from zero to the number of heads minus one.

In LBA mode, HS3 through HS0 contain bits 24-27 of the LBA. At command com-

pletion, these bits are updated to reflect the current LBA bits 24-27.

9.9 Error Register

Error Register								
7 CRC	6 UNC	5	4 IDNF	3 0	2 ABRT	1 TKONF	0 AMNF	

Figure 55. Error Register

This register contains status from the last command executed by the device, or a diagnostic code.

At the completion of any command except Execute Device Diagnostic, the contents of this register are valid always even if ERR=0 in the Status Register.

Following a power on, a reset, or completion of an Execute Device Diagnostic command, this register contains a diagnostic code. See Figure 59 on page 75 for the definition.

Bit Definitions

Interface CRC Error. CRC=1 indicates a CRC error has occurred on the data bus ICRCE (CRC)

during a Ultra-DMA transfer.

UNC Uncorrectable Data Error. UNC=1 indicates an uncorrectable data error has been

encountered.

IDNF (IDN) ID Not Found. IDN=1 indicates the requested sector's ID field could not be found.

ABRT (ABT) Aborted Command. ABT=1 indicates the requested command has been aborted

due to a device status error or an invalid parameter in an output register.

TKONF (TON) Track 0 Not Found. T0N=1 indicates track 0 was not found during a Recalibrate

AMNF (AMN) Address Mark Not Found. AMN=1 indicates the data address mark has not been

found after finding the correct ID field for the requested sector.

9.10 Features Register

This register is command specific. This is used with the Set Features command, S.M.A.R.T. Function Set command and Format Unit command.

9.11 Sector Count Register

This register contains the number of sectors of data requested to be transferred on a read or write operation between the host and the device. If the value in the register is set to 0, a count of 256 sectors is specified.

If the register is zero at command completion, the command was successful. If not successfully completed, the register contains the number of sectors which need to be transferred in order to complete the request.

The contents of the register are defined otherwise on some commands. These definitions are given in the command descriptions.

9.12 Sector Number Register

This register contains the starting sector number for any disk data access for the subsequent command. The sector number is from one to the maximum number of sectors per track.

In LBA mode, this register contains Bits 0-7. At the end of the command, this register is updated to reflect the current LBA Bits 0-7.

9.13 Status Register

	Status Register									
7	6	5	4	3	2	1	0			
BSY	DRDY	DF	DSC	DRQ	CORR	IDX	ERR			

Figure 56. Status Register

This register contains the device status. The contents of this register are updated whenever an error occurs and at the completion of each command.

If the host reads this register when an interrupt is pending, it is considered to be the interrupt acknowledge. Any pending interrupt is cleared whenever this register is read.

If BSY=1, no other bits in the register are valid.

Bit Definitions

BSY Busy. BSY=1 whenever the device is accessing the registers. The host should not

read or write any registers when BSY=1. If the host reads any register when

BSY=1, the contents of the Status Register will be returned.

DRDY (RDY) Device Ready. RDY=1 indicates that the device is capable of responding to a

command. RDY will be set to 0 during power on until the device is ready to accept

a command.

DF Device Fault. DF=1 indicates that the device has detected a write fault condition.

DF is set to 0 after the Status Register is read by the host.

DSC Device Seek Complete. DSC=1 indicates that a seek has completed and the device

head is settled over a track. DSC is set to 0 by the device just before a seek begins. When an error occurs, this bit is not changed until the Status Register is read by the

host, at which time the bit again indicates the current seek complete status.

When the device enters into or is in Standby mode or Sleep mode, this bit is set by

device in spite of not spinning up.

DRQ Data Request. DRQ=1 indicates that the device is ready to transfer a word or byte

of data between the host and the device. The host should not write the Command

register when DRQ=1.

CORR (COR) Corrected Data. Always 0.

IDX Index. IDX=1 once per revolution. Since IDX=1 only for a very short time during

> each revolution, the host may not see it set to 1 even if the host is reading the Status Register continuously. Therefore the host should not attempt to use IDX for timing

purposes.

ERR Error. ERR=1 indicates that an error occurred during execution of the previous

command. The Error Register should be read to determine the error type. The

device sets ERR=0 when the next command is received from the host.

10.0 General Operation Descriptions

10.1 Reset Response

There are three types of reset in ATA as follows:

Power On Reset (POR)

The device executes a series of electrical circuitry diagnostics, spins up the HDA, tests speed and other mechanical parametric, and sets default

values.

Hard Reset (Hardware Reset) RESET- signal is negated in ATA Bus.

The device executes a series of electrical circuitry diagnostics, spins up the HDA, tests speed and other mechanical parametric, and sets default

values.

Soft Reset (Software Reset) SRST bit in the Device Control Register is set, then is reset.

The device resets the interface circuitry according to the Set Features

requirement.

The actions of each reset is shown in Figure 57 on page 74.

	POR	hard	soft reset
Aborting Host interface Aborting Device operation Initialization of hardware Internal diagnostic Spinning spindle Initialization of registers (*2) DASP handshake PDIAG handshake Reverting programmed parameters to default - Number of CHS (set by Initialize Device Parameter) - Multiple mode - Write cache - Delayed Write - Read look—ahead - ECC bytes - Volatile max address - Address offset mode Disable Standby timer Power mode Reset Standby timer value (*5)		0 (*1) 0 0 X 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 (*1) x x x 0 x 0 (*3)

```
— execute
— not execute
```

Figure 57. Reset Response Table

Note.

- **(*1)** Execute after the data in write cache has been written.
- **(*2)** Default value on POR is shown in Figure 58 on page 75.
- (*3) The Set Features command with Feature register = CCh enables the device to revert these parameters to the power on defaults.
- (*4) In the case of sleep mode, the device goes to idle mode. In other case, the device does not change current mode.
- (*5) After reset the Standby timer value, it is set to 109 minutes.
- (*6) According to the initial power mode selection.

10.1.1 Register Initialization

Register	Default Value
Error	Diagnostic Code
Sector Count	01h
Sector Number	01h
Cylinder Low	00h
Cylinder High	00h
Device/Head	A0h
Status	50h
Alternate Status	50h

Figure 58. Default Register Values

After power on, hard reset, or software reset, the register values are initialized as shown in Figure 58.

Code	Description
01h	No error detected
02h	Formatter device error
03h	Sector buffer error
04h	ECC circuitry error
05h	Controller microprocessor error
8xh	Device 1 failed

Figure 59. Diagnostic Codes

The meaning of the Error Register diagnostic codes resulting from power on, hard reset or the Execute Device Diagnostic command are shown in Figure 59.

10.2 Diagnostic and Reset considerations

For each Reset and Execute Device Diagnostic, the diagnostic is done as follows:

Power On Reset, Hard Reset

DASP- is read by Device 0 to determine if Device 1 is present. If Device 1 is present Device 0 shall read PDIAG- to determine when it is valid to clear the BSY bit and whether Device 1 has powered on or reset without error, otherwise Device 0 clears the BSY bit whenever it is ready to accept commands. Device 0 may assert DASPto indicate device activity. If Device 1 is not present, Device 0 does not Assert DASP- at POR.

Soft Reset

If Device 1 is present Device 0 shall read PDIAG- to determine when it is valid to clear the BSY bit and whether Device 1 has reset without any errors, otherwise Device 0 shall simply reset and clear the BSY bit. DASP- is asserted by Device 0 (and Device 1 if it is present) in order to indicate device active.

Execute Device Diagnostic

If Device 1 is present, Device 0 shall read PDIAG- to determine when it is valid to clear the BSY bit and if Device 1 passed or failed the EXECUTE DEVICE DIAG-NOSTIC command, otherwise Device 0 shall simply execute its diagnostics and then clear the BSY bit. DASP- is asserted by Device 0 (and Device 1 if it is present) in order to indicate the device is active.

In all the above cases: Power on, RESET-, Soft reset, and the EXECUTE DEVICE DIAGNOSTIC command the Device 0 Error register is shown in Figure 60.

Device 1 Present?			Error Register		
Yes Yes Yes Yes No	Yes Yes No No (not read) (not read)	Yes No Yes No Yes No	01h 0xh 81h 8xh 01h 0xh		

Where x indicates the appropriate Diagnostic Code for the Power on, RESET-, Soft reset, or Device Diagnostic error.

Figure 60. Reset error register values

10.3 Power-off considerations

For power off considerations, refer to 5.3.6, "Load/Unload" on page 24.

10.4 Sector Addressing Mode

All addressing of data sectors recorded on the device's media is by a logical sector address. The logical CHS address for DARA-2xxxxx is different from the actual physical CHS location of the data sector on the disk media.

DARA-2xxxxx support both Logical CHS Addressing Mode and LBA Addressing Mode as the sector addressing mode.

The host system may select either the currently selected CHS translation addressing or LBA addressing on a command-by-command basis by using the L bit in the DEVICE/HEAD register. So a host system must set the L bit to 1 if the host uses LBA Addressing mode.

10.4.1 Logical CHS Addressing Mode

The logical CHS addressing is made up of three fields: the cylinder number, the head number and the sector number. Sectors are numbered from 1 to the maximum value allowed by the current CHS translation mode but can not exceed 255(0FFh). Heads are numbered from 0 to the maximum value allowed by the current CHS translation mode but can not exceed 15(0Fh). Cylinders are numbered from 0 to the maximum value allowed by the current CHS translation mode but cannot exceed 65535(0FFFFh).

When the host selects a CHS translation mode using the INITIALIZE DEVICE PARAMETERS command, the host requests the number of sectors per logical track and the number of heads per logical cylinder. The device then computes the number of logical cylinders available in requested mode.

The default CHS translation mode is described in the Identify Device Information. The current CHS translation mode also is described in the Identify Device Information.

10.4.2 LBA Addressing Mode

Logical sectors on the device shall be linearly mapped with the first LBA addressed sector (sector 0) being the same sector as the first logical CHS addressed sector (cylinder 0, head 0, sector 1). Irrespective of the logical CHS translation mode currently in effect, the LBA address of a given logical sector does not change. The following is always true:

where heads_per_cylinder and sectors_per_track are the current translation mode values.

On LBA addressing mode, the LBA value is set to the following register.

```
Device/Head <--- LBA bits 27-24
Cylinder High <--- LBA bits 23-16
Cylinder Low <--- LBA bits 15-8
Sector Number <--- LBA bits 7-0
```

10.5 Power Management Feature

The power management feature set permits a host to modify the behavior in a manner which reduces the power required to operate. The power management feature set provides a set of commands and a timer that enables a device to implement low power consumption modes.

DARA-2xxxxx implement the following set of functions.

- 1. A Standby timer
- 2. Idle command
- 3. Idle Immediate command
- 4. Sleep command
- 5. Standby command
- 6. Standby Immediate command

10.5.1 Power Mode

Sleep Mode The lowest power consumption when the device is powered on occurs in Sleep

Mode. When in sleep mode, the device requires a reset to be activated. The time to

respond could be as long as the power on reset time.

Standby Mode The device interface is capable of accepting commands, but as the media may not

immediately accessible, there is a delay while waiting for the spindle to reach oper-

ating speed.

Idle Mode Refer to the section of Adoptive Battery Life Extender Feature.

Active Mode The device is in execution of a command or accessing the disk media with read look-

ahead function or write cache function.

10.5.2 Power Management Commands

The Check Power Mode command allows a host to determine if a device is currently in, going to or leaving standby mode.

The Idle and Idle Immediate commands move a device to idle mode immediately from the active or standby modes. The idle command also sets the standby timer count and starts the standby timer.

The sleep command moves a device to sleep mode. The device's interface becomes inactive at the completion of the sleep command. A reset is required to move a device out of sleep mode. When a device exits sleep mode it will enter idle mode.

The Standby and Standby Immediate commands move a device to standby mode immediately from the active or idle modes. The standby command also sets the standby timer count.

10.5.3 Standby/Sleep command completion timing

- 1. Confirm the completion of writing cached data in the buffer to media
- 2. Unload heads on the ramp
- 3. Set DRDY bit and DSC bit in Status Register
- 4. Set INTRQ (completion of the command)

- 5. Activate the spindle break to stop the spindle motor
- 6. Wait until spindle motor is stopped
- 7. Perform post process

10.5.4 Standby timer

The standby timer provides a method for the device to automatically enter standby mode from either active or idle mode following a host programmed period of inactivity. If the device is in the active or idle mode, the device waits for the specified time period and if no command is received, the device automatically enters the standby mode.

If the value of SECTOR COUNT register on Idle command or Standby command is set to 00h, the device will automatically set the standby timer to 109 minutes.

10.5.5 Status

In the active, idle and standby modes, the device shall have RDY bit of the status register set. If BSY bit is not set, device shall be ready to accept any command.

In sleep mode, the device's interface is not active. A host shall not attempt to read the device's status or issue commands to the device.

10.5.6 Interface Capability for Power Modes

Each power mode affects the physical interface as defined in the following table:

Mode	BSY	RDY	Interface active	Media
Active	x	x	Yes	Active
Idle	0	1	Yes	Active
Standby	0	1	Yes	Inactive
Sleep	x	x	No	Inactive

Figure 61. Power conditions

Ready(RDY) is not a power condition. A device may post ready at the interface even though the media may not be accessible.

Though the interface is inactive in sleep mode, the access to the interface registers and the validity of INTRQ is guaranteed for two seconds after Sleep command is completed. After this period, the contents of interface registers may be lost. Since the contents of interface registers may be invalid, host should NOT check Status register nor Alternate Status register prior to issuing soft reset to wake up a device.

10.5.7 Initial Power Mode at Power On

After power on or hard reset the device goes to IDLE mode or STANDBY mode depending on the option. Refer DARA-225000 Final Functional Specification (P/N 25L1618), DARA-218000/215000 Final Functional Specification (P/N 25L1619) or DARA-212000/209000/206000 Final Functional Specification (P/N 25L1620) for the initial power mode selection.

10.6 Advanced Power Management (ABLE-3) Feature

This feature provides power saving without performance degradation. The Adaptive Battery Life Extender 3 (ABLE-3) technology intelligently manages transition among power modes within the device by monitoring access patterns of the host.

This technology has three idle modes; Performance Idle mode, Active Idle mode, and Low Power Idle mode.

This feature allows the host to select an advanced power management level. The advanced power management level is a scale from the lowest power consumption setting of 01h to the maximum performance level of FEh. Device performance may increase with increasing advanced power management levels. Device power consumption may increase with increasing advanced power management levels. The advanced power management levels contain discrete bands, described in the section of Set Feature command in detail.

This feature set uses the following functions:

- · A SET FEATURES subcommand to enable Advanced Power Management
- · A SET FEATURES subcommand to disable Advanced Power Management

The Advanced Power Management feature is independent of the Standby timer setting. If both Advanced Power Management level and the Standby timer are set, the device will goto the Standby state when the timer times out or the device's Advanced Power Management algorithm indicates that it is time to enter the Standby state.

The IDENTIFY DEVICE response word 83, bit 3 indicates that Advanced Power Management feature is supported if set. Word 86, bit 3 indicates that Advanced Power Management is enabled if set. Word 91, bits 7-0 contain the current Advanced Power Management level if Advanced Power Management is enabled.

10.6.1 Performance Idle mode

This mode is usually entered immediately after Active mode command processing is complete, instead of conventional idle mode. In Performance Idle mode, all electronic components remain powered and full frequency servo remains operational. This provides instantaneous response to the next command. The duration of this mode is intelligently managed as described below.

10.6.2 Active Idle mode

In this mode, power consumption is 45-55% less than that of Performance Idle mode. Additional electronics are powered off, and the head is parked near the mid-diameter of the disk without servoing. Recovery time to Active mode is about 20ms.

10.6.3 Low Power Idle mode

Power consumption is 60%-65% less than that of Performance Idle mode. The heads are unloaded on the ramp, however the spindle is still rotated at the full speed. Recovery time to Active mode is about 300ms.

10.6.4 Transition Time

The transition time is dynamically managed by users recent access pattern, instead of fixed times. The ABLE-3 algorithm monitors the interval between commands instead of the command frequency of ABLE-2. The algorithm supposes that next command will come with the same command interval distribution as the previous access pattern. The algorithm calculates the expected average saving energy and response delay for next command in several transition time case based on this assumption. And it selects the most effective

transition time with the condition that the calculated response delay is shorter than the value calculated from the specifid level by Set Feature Enable Adaptive Power Management command.

The optimal time to enter Active Idle mode is variable depending on the users recent behavior. It is not possible to achieve the same level of Power savings with a fixed entry time into Active Idle because every users data and access pattern is different. The optimum entry time changes over time.

The same algorithm works for entering into Low Power Idle mode and Standby mode, which consumes less power but need more recovery time switching from this mode to Active mode.

10.7 S.M.A.R.T. Function

The intent of Self-monitoring, analysis and reporting technology (S.M.A.R.T) is to protect user data and prevent unscheduled system downtime that may be caused by predictable degradation and/or fault of the device. By monitoring and storing critical performance and calibration parameters, S.M.A.R.T devices employ sophisticated data analysis algorithms to predict the likelihood of near-term degradation or fault condition. By alerting the host system of a negative reliability status condition, the host system can warn the user of the impending risk of a data loss and advise the user of appropriate action.

Since S.M.A.R.T. utilizes the internal device microprocessor and other device resources, there may be some small overhead associated with its operation. However, special care has been taken in the design of the S.M.A.R.T. algorithms to minimize the impact to host system performance. Actual impact of S.M.A.R.T. overhead is dependent on the specific device design and the usage patterns of the host system. To further ensure minimal impact to the user, S.M.A.R.T. capable devices are shipped from the device manufacturer's factory with the S.M.A.R.T. feature disabled. S.M.A.R.T. capable devices can be enabled by the system OEMs at time of system integration or in the field by aftermarket products.

10.7.1 Attributes

Attributes are the specific performance or calibration parameters that are used in analyzing the status of the device. Attributes are selected by the device manufacturer based on that attribute's ability to contribute to the prediction of degrading or faulty conditions for that particular device. The specific set of attributes being used and the identity of these attributes is vendor specific and proprietary.

10.7.2 Attribute values

Attribute values are used to represent the relative reliability of individual performance or calibration attributes. Higher attribute values indicate that the analysis algorithms being used by the device are predicting a lower probability of a degrading or fault condition existing. Accordingly, lower attribute values indicate that the analysis algorithms being used by the device are predicting a higher probability of a degrading or fault condition existing. There is no implied linear reliability relationship corresponding to the numerical relationship between different attribute values for any particular attribute.

10.7.3 Attribute thresholds

Each attribute value has a corresponding attribute threshold limit which is used for direct comparison to the attribute value to indicate the existence of a degrading or faulty condition. The numerical value of the attribute thresholds are determined by the device manufacturer through design and reliability testing and analysis. Each attribute threshold represents the lowest limit to which its corresponding attribute value can be equal while still retaining a positive reliability status. Attribute thresholds are set at the device manufacturer's factory and cannot be changed in the field. The valid range for attribute thresholds is from 1 through 253 decimal.

10.7.4 Threshold exceeded condition

If one or more attribute values are less than or equal to their corresponding attribute thresholds, then the device reliability status is negative, indicating an impending degrading or faulty condition.

10.7.5 S.M.A.R.T. commands

The S.M.A.R.T. commands provide access to attribute values, attribute thresholds and other logging and reporting information.

10.7.6 S.M.A.R.T. operation with power management modes

It is recommended that, when a host system utilizes both the power management and S.M.A.R.T. features, the system enable the device's attribute autosave feature to allow the device's automatic attribute saving upon receipt of STANDBY IMMEDIATE or SLEEP commands. If the device has been set to utilize the standby timer, the devce also saves attributes values prior to going from an Idle state to Standby state.

10.8 Security Mode Feature Set

Security Mode Feature Set is a powerful security feature. With a device lock password, a user can prevent unauthorized access to hard disk device even if the device is removed from the computer.

New commands are supported for this feature as below.

Security Set Password ('F1'h)
Security Unlock ('F2'h)
Security Erase Prepare ('F3'h)
Security Erase Unit ('F4'h)
Security Freeze Lock ('F5'h)
Security Disable Password ('F6'h)

10.8.1 Security mode

Following security modes are provided.

Device Locked modeThe device disables media access commands after power on. Media access com-

mands are enabled by either a security unlock command or a security erase unit

command.

Device Unlocked mode The device enables all commands. If a password is not set this mode is entered

after power on, otherwise it is entered by a security unlock or a security erase

unit command.

Device Frozen mode The device enables all commands except those which can update the device

lock function, set/change password. The device enters this mode via a Security

Freeze Lock command. It cannot quit this mode until power off.

10.8.2 Security level

Following security levels are provided.

High level security When the device lock function is enabled and the User Password is forgotten

the device can be unlocked via a Master Password.

Maximum level security When the device lock function is enabled and the User Password is forgotten

then only the Master Password with a Security Erase Unit command can

unlock the device. Then user data is erased.

10.8.3 Password

This function can have 2 types of passwords as described below.

Master Password When the Master Password is set, the device does NOT enable the Device Lock

Function, and the device can NOT be locked with the Master Password, but

the Master Password can be used for unlocking the device locked.

User Password The User Password should be given or changed by a system user. When the

User Password is set, the device enables the Device Lock Function, and then

the device is locked on next power on reset or hard reset.

The system manufacturer/dealer who intends to enable the device lock function for the end users, must set the master password even if only single level password protection is required.

10.8.4 Master Password Revision Code

This Master Password Revision Code is set by Security Set Password command with the master password. And this revision code field is returned in the Identify Device command word 92. The valid revision codes are 0000h to FFFDh. The default value of Master Password Revision Code is FFFEh. Value FFFFh is reserved.

10.8.5 Operation example

10.8.5.1 Master Password setting

The system manufacturer/dealer can set a new Master Password from default Master Password using the Security Set Password command, without enabling the Device Lock Function.

10.8.5.2 User Password setting

When a User Password is set, the device will automatically enter lock mode the next time the device is powered on.

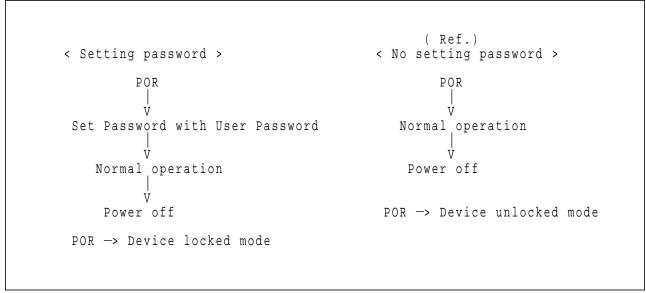


Figure 62. Initial Setting

10.8.5.3 Operation from POR after User Password is set

When Device Lock Function is enabled, the device rejects media access command until a Security Unlock command is successfully completed.

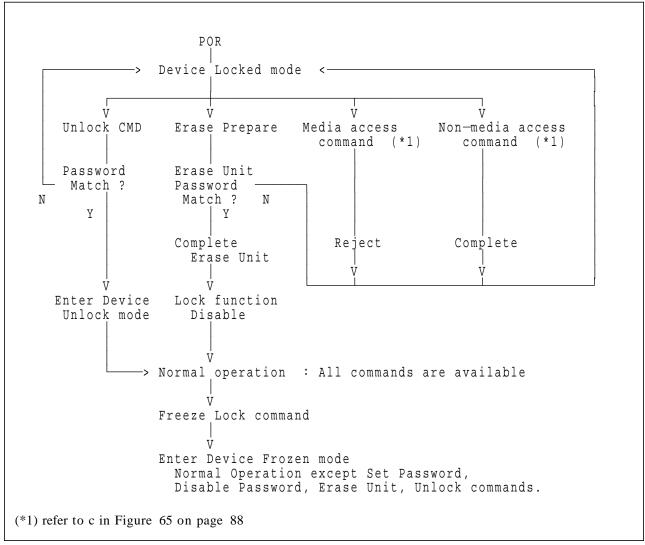


Figure 63. Usual Operation

10.8.5.4 User Password Lost

If the User Password is forgotten and High level security is set, the system user can't access any data. However the device can be unlocked using the Master Password.

If a system user forgets the User Password and Maximum security level is set, data access is impossible. However the device can be unlocked using the Security Erase Unit command to unlock the device and erase all user data with the Master Password.

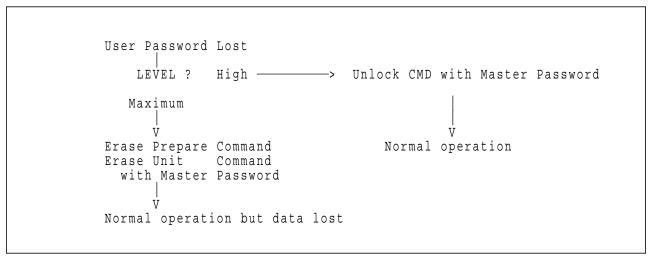


Figure 64. Password Lost

10.8.5.5 Attempt limit for SECURITY UNLOCK command

The SECURITY UNLOCK command has an attempt limit. The purpose of this attempt limit is to prevent that someone attempts to unlock the drive by using various passwords many times.

The device counts the password mismatch. If the password does not match, the device counts it up without distinguishing the Master password and the User password. If the count reaches 5, EXPIRE bit(bit 4) of Word 128 in Identify Device information is set, and then SECURITY ERASE UNIT command and SECURITY UNLOCK command are aborted until a hard reset or a power off. The count and EXPIRE bit are cleared after a power on reset or a hard reset.

10.8.6 Command Table

This table shows the device's response to commands when the Security Mode Feature Set (Device lock function) is enabled.

Command	1	Device Unlock Mode	1
Check Power Mode	1 0	l l o	l 1 o
Enable/Disable Delayed Write	0	0	0
Execute Device Diagnostic	0	0	0
Flush Cache	0	0	0
Format Track	X	0	0
Format Unit	X	0	0
Identify Device	0	0	0
Identify Device DMA	0	0	0
Idle	0	0	0
Idle Immediate	0	0	0
Initialize Device Parameters	0	0	0
Read Buffer	0	0	0
Read DMA (w/o retry)	Х	0	0
Read DMA (w/retry)	Х	0	0
Read Long (w/o retry)	х	0	0
Read Long (w/retry)	х	0	0
Read Multiple	х	0	0
Read Native Max ADDRESS	0	0	0
Read Sector(s) (w/o retry)	х	0	0
Read Sector(s) (w/retry)	х	0	0
Read Verify Sector(s) (w/o retry)	х	0	0
Read Verify Sector(s) (w/retry)	Х	0	0
Recalibrate	0	0	0
Security Disable Password	Х	0	Х
Security Erase Prepare	0	0	0
Security Erase Unit	0	0	X
Security Freeze Lock	X	0	0
Security Set Password	X	0	X
Security Unlock	0	0	X
Seek	0	0	0
Set Features	0	0	0
Set Max ADDRESS	0	0	0
Set Multiple Mode	0	0	0
Sleep	0	0	0

Figure 65. Command table for device lock operation

Command		Device Unlock Mode	
SMART Disable Operations	0	0	0
SMART Enable/Disable Attribute Autosave	0	0	0
SMART Enable Operations	0	0	0
SMART Execute Off-line Immediate	0	0	0
SMART Read Attribute Values	0	0	0
SMART Read Attribute Thresholds	0	0	0
SMART Return Status	0	0	0
SMART Save Attribute Values	0	0	0
Standby	0	0	0
Standby Immediate	0	0	0
Write Buffer	0	0	0
Write DMA (w/o retry)	Х	0	0
Write DMA (w/retry)	Х	0	0
Write Long (w/o retry)	Х	0	0
Write Long (w/retry)	X	0	0
Write Multiple	X	0	0
Write Sector(s) (w/o retry)	X	0	0
Write Sector(s) (w/retry)	X	0	0
Write Verify	х	0	0

Figure 66. Command table for device lock operation - continued

o — Device executes command normally x — Device terminates command with error register of Aborted Command.

10.9 Protected Area Function

Protected Area Function is to provide the 'protected area' which can not be accessed via conventional method. This 'protected area' is used to contain critical system data such as BIOS or system management information. The contents of entire system main memory may also be dumped into 'protected area' to resume after system power off.

The LBA/CYL changed by following command affects the Identify Device Information.

Two commands are defined for this function.

```
Read Native Max ADDRESS ('F8'h)
Set Max ADDRESS ('F9'h)
```

10.9.1 Example for operation (In LBA mode)

Assumptions:

For better understanding, the following example uses actual values for LBA, size, etc. Since it is just an example, these values could be different.

Device characteristics

```
: 536,870,912 byte
   Capacity (native)
                                                          (536MB)
  Max LBA (native)
                                     : 1,048,575 (OFFFFFh)
                                   : 8,388,608 byte
Required size for protected area
                                  :
Required blocks for protected area
                                            16,384 (004000h)
                                    : 528,482,304 byte
Customer usable device size
                                                         (528MB)
Customer usable sector count
                                     : 1,032,192 (0FC000h)
                                     : OFC000h to OFFFFFh
LBA range for protected area
```

1. Shipping HDDs from HDD manufacturer

When the HDDs are shipped from HDD manufacturer, the device has been tested to have a capacity of 536MB, flagging the media defects not to be visible by system.

2. Preparing HDDs at system manufacturer

Special utility software is required to define the size of protected area and store the data into it. The sequence is:

Issue Read Native Max ADDRESS command to get the real device max of LBA/CYL. Returned value shows that native device Max LBA is 0FFFFFh regardless to the current setting.

Make entire device be accessible including the protected area by setting device Max LBA as 0FFFFFh via Set Max ADDRESS command. The option could be either nonvolatile or volatile.

Test the sectors for protected area (LBA > = 0FC000h) if required.

Write information data such as BIOS code within the protected area.

Change maximum LBA using Set Max ADDRESS command to 0FBFFFh with nonvolatile option.

From this point, the protected area cannot be accessed until next Set Max ADDRESS command is issued. Any BIOSes, device drivers, or application software access the HDD as if that is the 528MB device because the device acts exactly same as real 528MB device does.

3. Conventional usage without system software support

Since the HDD works as 528MB device, there is no special care to use this device for normal use.

4. Advanced usage using protected area

The data in the protected area is accessed by following.

Issue Read Native Max ADDRESS command to get the real device max

LBA/CYL. Returned value shows that native device Max LBA is 0FFFFFh regardless of the current setting.

Make entire device be accessible including the protected area by setting device Max LBA as 0FFFFFh via Set Max ADDRESS command with volatile option. By using this option, unexpected power removal or reset will not make the protected area remained accessible.

Read information data from protected area.

Issue hard reset or POR to inhibit any access to the protected area.

10.10 Address Offset Feature (Vendor Specific)

Computer systems perform initial code loading (booting) by reading from a predefined address on a disk drive. To allow an alternate bootable operating system to exist in a reserved area on a disk drive this feature provides a Set Features function to temporarily offset the drive address space. The offset address space wraps around so that the entire disk drive address space remains addressable in offset mode. The Set Max pointer is set to the end of the reserved area to protect the data in the user area when operating in offset mode. This protection can be removed by an Set Max Address command to move the Set Max pointer to the end of the drive. But any commands which access sectors across the original native maximum LBA are rejected with error, even if this protection is removed by an Set Max Address command.


10.10.1 Enable/Disable Address Offset Mode

Subcommand code 09h Enable Address Offset Mode offsets address Cylinder 0, Head 0, Sector 1, LBA 0, to the start of the non-volatile protected area established using the Set Max Address command. The offset condition is cleared by Subcommand 89h Disable Address Offset Mode, Hardware reset or Power on Reset. If Reverting to Power on Defaults has been enabled by Set Features command, it is cleared by Soft reset as well. Upon entering offset mode the capacity of the drive returned in the Identify Device data is the size of the former protected area. A subsequent Set Max Address command with the address returned by Read Max Address command allows access to the entire drive. Addresses wrap so the entire drive remains addressable.


If a non-volatile protected area has not been established before the device receives a Set Features Enable Address Offset Mode command the command fails with Abort error status.

Disable Address Offset Feature removes the address offset and sets the size of the drive reported by the Identify Device command back to the size specified in the last non-volatile Set Max Address command.

Before Enable Address Offset Mode
 A reserved area has been created using a non-volatile Set Max command.

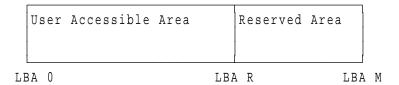

After Enable Address Offset Mode
 The former reserved area is now the user accessible area.
 The former user accessible area is now the reserved area.

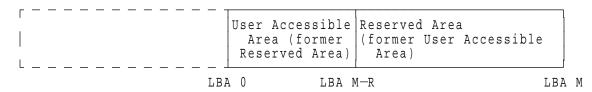

- After Set Max Address Command using the Value Returned by Read Max Address

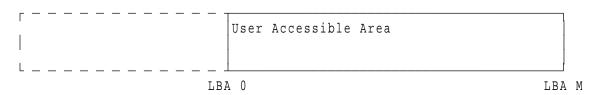


Figure 67. Device address map before and after Set Feature

10.10.2 Identify Device Data

Identify Device data word 83 bit 7 indicates the device supports the Address Offset Feature.

Identify Device data word 86 bit 7 indicates the device is in Address Offset mode.

10.10.3 Exceptions in Address Offset Mode

Any commands which access sectors across the original native maximum LBA are rejected with error, even if the access protection is removed by an Set Max Address command.

Read Look Ahead operation does not be carried out, even if it is enabled by Set Feature command.

10.11 Write Cache Function

Write cache is a performance enhancement whereby the device reports completion of the write command (Write Sectors and Write Multiple) to the host as soon as the device has received all of the data into its buffer. The device assumes responsibility to write the data subsequently onto the disk.

- While writing data after completed acknowledgment of a write command, soft reset or hard reset does
 not affect its operation. But power off terminates writing operation immediately and unwritten data are
 to be lost.
- Flush cache, Soft reset, Standby, Standby Immediate and Sleep are executed after the completion of writing to disk media on enabling write cache function. So the host system can confirm the completion of write cache operation by issuing flush cache command, Soft reset, Standby command, Standby Immediate command or Sleep command, and then, by confirming its completion.
- The retry bit of Write Sectors is ignored when write cache is enabled.

10.12 Delayed Write Function (Vendor Specific)

Delayed Write function is a power saving enhancement whereby the device delays the actual data writing into the media. When the device is in the power saving mode and the Write command (Write Sectors, Write Multiple, or Write DMA) comes from the host, the transferred data is not written into the media immediately, only stored into the cache buffer. When the cache buffer becomes full or reaches to the predefined size, or any command except the Write command comes, the operation to write the data in the cache buffer into the media is started.

Here is reason why the power consumption can be reduced by Delayed Write. When some Write commands comes with enough long interval, the device must exit from the power saving mode and enter into the power saving mode again without Delayed Write function. If Delayed Write is enabled, such power saving mode transition times can be reduced. As result, the additional energy for power saving mode transition can be saved, then the average power consumption of the device can be reduced.

But the duration since the command completion of the Write command until the media write completion will be extended terribly with Delayed Write function. If the power for the device is turned off in this duration, the data which has not been written to the media is lost. So a command listed in Write Cache Function section shall be issued before the power off to confirm whole cached data has been written into the media.

For safety, Delayed Write function is disabled at Power On Default. Enable Delayed Write command shall be issued to the device to enable Delayed Write function every Power On Reset or Hard Reset. The actions of each reset is shown in Figure 57 on page 74

10.12.1 Enable/Disable Delayed Write command

Command code FAh with Feature register 07h enables Delayed Write function.

Command code FAh with Feature register 87h disables Delayed Write function.

Be careful that even if Delayed Write function is enabled by this command, Delayed Write does not work when Write Cache function is disabled.

10.13 Reassign Function

The reassign Function is used with read commands and write commands. The sectors of data for reassignment are prepared as the spare data sector. The number of the spare sector's entry is 868 entries. The one entry can register 256 consecutive sectors maximally.

This reassignment information is registered internally, and the information is available right after completing the reassign function. Also the information is used on the next power on reset or hard reset.

If the number of the spare sector reaches 0 sector, the reassign function will be disabled automatically.

The spare sectors for reassignment are located at reserved area. As a result of reassignment, the physical location of logically sequenced sectors will be dispersed.

10.13.1 Auto Reassign Function

The sectors that show some errors may be reallocated automatically when specific conditions are met. The spare sectors for reallocation are located at reserved area. The conditions for auto-reallocation are described below.

Non recovered write errors

When a write operation can not be completed after the Error Recovery Procedure(ERP) is fully carried out, the sector(s) are reallocated to the spare location. An error is reported to the host system only when the write cache is disabled and the auto reallocation fails.

If the number of available spare sectors reaches 16 sectors, the write cache function will be disabled automat-

If the command is without retry and the write cache function is disabled, the auto reassign function is not invoked.

Non recovered read errors

When a read operation fails after defined ERP is fully carried out, a hard error is reported to the host system. This location is registerred internally as a candidate for the reallocation. When a registerred location is specified as a target of a write operation, a sequence of media verification is performed automatically. When the result of this verification meets the criteria, this sector is reallocated.

Recovered read errors

When a read operation for a sector failed once then recovered at the specific ERP step, this sector of data is reallocated automatically. A media verification sequence may be run prior to the relocation according to the pre-defined conditions.

11.0 Command Protocol

The commands are grouped into different classes according to the protocols followed for command execution. The command classes with their associated protocols are defined below.

For all commands, the host must first check if BSY=1, and should proceed no further unless and until BSY=0. For all commands, the host must also wait for RDY=1 before proceeding.

A device must maintain either BSY=1 or DRQ=1 at all times until the command is completed. The INTRQ signal is used by the device to signal most, but not all, times when the BSY bit is changed from 1 to 0 during command execution.

A command shall only be interrupted with a hardware or software reset. The result of writing to the Command register while BSY=1 or DRQ=1 is unpredictable and may result in data corruption. A command should only be interrupted by a reset at times when the host thinks there may be a problem, such as a device that is no longer responding.

Interrupts are cleared when the host reads the Status Register, issues a reset, or writes to the Command Register.

Figure 132 on page 187 shows the device timeout values.

11.1 Data In Commands

These commands are:

- · Identify Device
- · Read Buffer
- · Read Long
- · Read Multiple
- · Read Sectors
- SMART Read Attribute Values
- · SMART Read Attribute Thresholds

Execution includes the transfer of one or more 512 byte (>512 bytes on Read Long) sectors of data from the device to the host.

- 1. The host writes any required parameters to the Features, Sector Count, Sector Number, Cylinder, and Device/Head Registers.
- 2. The host writes the command code to the Command Register.
- 3. For each sector (or block) of data to be transferred:
 - a. The device sets BSY=1 and prepares for data transfer.
 - b. When a sector (or block) of data is available for transfer to the host, the device sets BSY=0, sets DRQ=1, and interrupts the host.
 - c. In response to the interrupt, the host reads the Status Register.
 - d. The device clears the interrupt in response to the Status Register being read.
 - e. The host reads one sector (or block) of data via the Data Register.

- f. The device sets DRQ=0 after the sector (or block)has been transferred to the host.
- 4. For the Read Long command:
 - a. The device sets BSY=1 and prepares for data transfer.
 - b. When the sector of data is available for transfer to the host, the device sets BSY=0, sets DRQ=1, and interrupts the host.
 - c. In response to the interrupt, the host reads the Status Register.
 - d. The device clears the interrupt in response to the Status Register being read.
 - e. The host reads the sector of data including ECC bytes via the Data Register.
 - f. The device sets DRQ=0 after the sector has been transferred to the host.

The Read Multiple command transfers one block of data for each interrupt. The other commands transfer one sector of data for each interrupt.

Note that the status data for a sector of data is available in the Status Register **before** the sector is transferred to the host.

If the device detects an invalid parameter, then it will abort the command by setting BSY=0, ERR=1, ABT=1, and interrupting the host.

If an error occurs, the device will set BSY=0, ERR=1, and DRQ=1. The device will then store the error status in the Error Register, and interrupt the host. The registers will contain the location of the sector in error. The errored location will be reported with CHS mode or LBA mode, the mode is decided by mode select bit (bit 6) of Device/Head register on issuing the command.

If an Uncorrectable Data Error (UNC=1) occurs, the defective data will be transferred from the media to the sector buffer, and will be available to be transferred to the host, at the host's option. In case of Read Multiple command, the host should complete transfer the block which includes the error from the sector buffer and terminate whatever kind of type of error occurred.

If an error occurs that is correctable by retries, the data will be corrected and the transfer will continue normally. There will be no indication to the host that any retry occurred.

All data transfers to the host through the Data Register are 16 bits, except for the ECC bytes, which are 8 bits.

11.2 Data Out Commands

These commands are:

- Format Track
- · Security Disable Password
- · Security Erase Unit
- · Security Set Password
- · Security Unlock
- · Write Buffer
- · Write Long
- · Write Multiple

- · Write Sectors
- · Write Verify

Execution includes the transfer of one or more 512 byte (>512 bytes on Write Long) sectors of data from the host to the device.

- 1. The host writes any required parameters to the Features, Sector Count, Sector Number, Cylinder, and Device/Head Registers.
- 2. The host writes the command code to the Command Register.
- 3. The device sets BSY=1.
- 4. For each sector (or block) of data to be transferred:
 - a. The device sets BSY=0 and DRQ=1 when it is ready to receive a sector (or block).
 - b. The host writes one sector (or block) of data via the Data Register.
 - c. The device sets BSY=1 after it has received the sector (or block).
 - d. When the device has finished processing the sector (or block), it sets BSY=0, and interrupts the host.
 - e. In response to the interrupt, the host reads the Status Register.
 - f. The device clears the interrupt in response to the Status Register being read.
- 5. For the Write Long command:
 - a. The device sets BSY=0 and DRQ=1 when it is ready to receive a sector.
 - b. The host writes one sector of data including ECC bytes via the Data Register.
 - c. The device sets BSY=1 after it has received the sector.
 - d. After processing the sector of data the device sets BSY=0 and interrupts the host.
 - e. In response to the interrupt, the host reads the Status Register.
 - f. The device clears the interrupt in response to the Status Register being read.

The Write Multiple command transfers one block of data for each interrupt. The other commands transfer one sector of data for each interrupt.

If the device detects an invalid parameter, then it will abort the command by setting BSY=0, ERR=1, ABT=1, and interrupting the host.

If an uncorrectable error occurs, the device will set BSY=0 and ERR=1, store the error status in the Error Register, and interrupt the host. The registers will contain the location of the sector in error. The errored location will be reported with CHS mode or LBA mode. The mode is decided by mode select bit (bit 6) of Device/Head register on issuing the command.

All data transfers to the device through the Data Register are 16 bits, except for the ECC bytes, which are 8 bits.

11.3 Non-Data Commands

These commands are:

- · Check Power Mode
- · Enable/Disable Delayed Write
- Execute Device Diagnostic
- · Flush Cache
- · Format Unit
- Idle
- · Idle Immediate
- Initialize Device Parameters
- · Read Native Max ADDRESS
- · Read Verify Sectors
- · Recalibrate
- · Security Erase Prepare
- · Security Freeze Lock
- · Seek
- · Set Features
- · Set Max ADDRESS
- · Set Multiple Mode
- · Sleep
- SMART Disable Operations
- SMART Enable/Disable Attribute Autosave
- · SMART Enable Operations
- · SMART Execute Off-line Immediate
- · SMART Return Status
- SMART Save Attribute Values
- Standby
- · Standby Immediate

Execution of these commands involves no data transfer.

- 1. The host writes any required parameters to the Features, Sector Count, Sector Number, Cylinder, and Device/Head Registers.
- 2. The host writes the command code to the Command Register.
- 3. The device sets BSY=1.
- 4. When the device has finished processing the command, it sets BSY=0, and interrupts the host.
- 5. In response to the interrupt, the host reads the Status Register.
- 6. The device clears the interrupt in response to the Status Register being read.

11.4 DMA Data Transfer Commands

These commands are:

- · Identify Device DMA
- · Read DMA
- Write DMA

Data transfer using DMA commands differ in two ways from PIO transfers:

- data transfers are performed using the slave-DMA channel
- no intermediate sector interrupts are issued on multi-sector commands

Initiation of the DMA transfer commands is identical to the Read Sector or Write Sector commands except that the host initializes the slave-DMA channel prior to issuing the command.

The interrupt handler for DMA transfers is different in that:

- · no intermediate sector interrupts are issued on multi-sector commands
- the host resets the DMA channel prior to reading status from the device.

The DMA protocol allows high performance multi-tasking operating systems to eliminate processor overhead associated with PIO transfers.

- 1. Host initializes the slave-DMA channel
- 2. Host writes any required parameters to the Features, Sector Count, Sector Number, Cylinder and Device/Head registers.
- 3. Host writes command code to the Command Register
- 4. The device sets DMARQ when it is ready to transfer any part of the data.
- 5. Host transfers the data using the DMA transfer protocol currently in effect.
- 6. When all of the data has been transferred, the device generates an interrupt to the host.
- 7. Host resets the slave-DMA channel
- 8. Host reads the Status Register and, optionally, the Error Register

Refer DARA-225000 Final Functional Specification (P/N 25L1618), DARA-218000/215000 Final Functional Specification (P/N 25L1619) or DARA-212000/209000/206000 Final Functional Specification (P/N 25L1620) for further details.

12.0 Command Descriptions

Proto col	Command	Code (Hex)	Binary Code Bit 7 6 5 4 3 2 1 0
3 3 3 3 3 3 4 4 1 1 1 3 3 3 3 2 3 2 2 3 3 3 3 3 3 3 3 3	Check Power Mode Check Power Mode* Enable/Disable Delayed Write Execute Device Diagnostic Flush Cache Format Track Format Unit Identify Device Identify Device DMA Idle Idle* Idle Immediate Idle Immediate* Initialize Device Parameters Read Buffer Read DMA (retry) Read Long (retry) Read Long (no retry) Read Multiple Read Native Max ADDRESS Read Sectors (retry) Read Sectors (retry) Read Verify Sectors (retry) Read Verify Sectors (retry) Read Verify Sectors (no retry) Read Verify Sectors (no retry) Recalibrate Security Disable Password Security Erase Prepare Security Freeze Lock Security Set Password Security Unlock Seek Set Features Set Max ADDRESS	E 9 F 9 C C 2 2 3 4 8 0 1 0 1 F F F F 7 E F F F F F F F F F F F F F F	1 1 1 0 0 1 0 1 1 0 0 1 1 0 0 1 1 1 1 1
3	Set Max ADDRESS Set Multiple Mode	C6	

Figure 68. Command Set

© Copyright IBM Corp. 1999

Proto col	Command	Code (Hex)	Binary Code Bit 7 6 5 4 3 2 1 0
3 3 3 3 3 1 1 3 3 3 3 3 3 3 3 4 4 4 2 2 2 2 2 2 2 2 2	Sleep Sleep* SMART Disable Operations SMART Enable/Disable Attribute Autosave SMART Enable Operations SMART Execute Off—line Immediate SMART Read Attribute Values SMART Read Attribute Thresholds SMART Return Status SMART Save Attribute Values Standby Standby* Standby Immediate Standby Immediate* Write Buffer Write DMA (retry) Write Long (retry) Write Long (no retry) Write Long (no retry) Write Sectors (retry) Write Sectors (no retry) Write Sectors (no retry) Write Verify	E 6 9 9 B 0 B 0 B 0 B 0 B 0 B 0 B 0 B 0 B 0 B 0	1 1 1 0 0 1 1 0 1 0 0 1 1 0 0 0 1 0 1 1 0 0 0 0 1 1 1 1 0 0 0 0 0 1 1 1 0 0 1 0 1 0 1 1 1 0 0 0 1 0 1 0 0 0 1 1 0 0 0 0 0 0 1 1 0 0 0 0

3 : Non data command 4 : DMA command

+ : Vendor specific command

Figure 69. Command Set - continued

Commands marked * are alternate command codes for previously defined commands.

Command (Subcommand)	Command Code (Hex)	Feature Register (Hex)
(Delayed Write Function) Enable Delayed Write function Disable Delayed Write function	FA FA	07 87
(S.M.A.R.T function) SMART Read Attribute Values SMART Read Attribute Thresholds SMART Enable/Disable Attribute Autosave SMART Save Attribute Values SMART Execute Off-line Immediate SMART Enable Operations SMART Disable Operations SMART Return Status	B 0 B 0 B 0 B 0 B 0 B 0 B 0 B 0	D0 D1 D2 D3 D4 D8 D9 DA
(Set Features) Enable Write Cache Set Transfer Mode Enable Advanced Power Management feature Enable Address Offset mode 34 bytes of ECC apply on Read/Write Long Disable read look—ahead feature Disable reverting to power on defaults Disable write cache Disable Advanced Power Management feature Disable Address Offset mode Enable read look—ahead feature 4 bytes of ECC apply on Read/Wrtie Long Enable reverting to power on defaults	E F F F F F F F F F F F F F F F F F F F	0 2 0 3 0 5 0 9 4 4 5 5 6 6 8 2 8 5 8 9 AA BB CC

Figure 70. Command Set (Subcommand)

Figure 68 on page 103 and Figure 69 on page 104 shows the commands that are supported by the device. Figure 70 shows the sub-commands that are supported by each command or feature.

The following symbols are used in the command descriptions:

Output Registers

0 Indicates that the bit must be set to 0.

1 Indicates that the bit must be set to 1.

D The device number bit. Indicates that the device number bit of the Device/Head Register

should be specified. Zero selects the master device and one selects the slave device.

Η Head number. Indicates that the head number part of the Device/Head Register is an

output parameter and should be specified.

L LBA mode. Indicates the addressing mode. Zero specifies CHS mode and one does LBA

addressing mode.

R Retry. Indicates that the Retry bit of the Command Register should be specified.

В Option Bit. Indicates that the Option Bit of the Sector Count Register should be specified.

(This bit is used by Set Max ADDRESS command)

 \mathbf{V} Valid. Indicates that the bit is part of an output parameter and should be specified.

Indicates that the hex character is not used. X

Indicates that the bit is not used.

Input Registers

0 Indicates that the bit is always set to 0.

1 Indicates that the bit is always set to 1.

Η Head number. Indicates that the head number part of the Device/Head Register is an

input parameter and will be set by the device.

 \mathbf{V} Valid. Indicates that the bit is part of an input parameter and will be set to 0 or 1 by the

device.

Indicates that the bit is not part of an input parameter.

The command descriptions show the contents of the Status and Error Registers after the device has completed processing the command and has interrupted the host.

12.1 Check Power Mode (E5h/98h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 0 1 0 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count)
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN							
0	0 0 0 0 0 V 0 0						

	Status Register							
	7 6 5 4 3 2 1 0 BSY RDY DF DSC DRQ COR IDX ERR							
	0	0	0] –	_	0] –] V

Figure 71. Check Power Mode Command (E5h/98h)

The Check Power Mode command will report whether the device is spun up and the media is available for immediate access.

Input Parameters From The Device

Sector Count

The power mode code. The command returns FFh in the Sector Count Register if the spindle motor is at speed and the device is not in Standby or Sleep mode. Otherwise, the Sector Count Register will be set to 0.

12.2 Enable/Disable Delayed Write (FAh: Vendor Specific)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature	V V V	V V V V
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	1 1 0 1 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN							
0 0 0 0 0 V 0 0							

	Status Register							
	7 6 5 4 3 2 1 0 BSY RDY DF DSC DRQ COR IDX ERR							
	0 0 0 V							

Figure 72. Enable/Disable Delayed Write Command (FAh)

The Enable/Disable Delayed Write command sets if Delayed Write function is enabled or disabled according to the feature register value.

Even if Delayed Write function is enabled by this command, Delayed Write does not work when Write Cache function is disabled.

For details for this function, refer to 10.12, "Delayed Write Function (Vendor Specific)" on page 95.

Output Parameters To The Device

Feature Destination code for this command.

07H Enable Delayed Write function

87H Disable Delayed Write function

12.3 Execute Device Diagnostic (90h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	
Command	1 0 0	1 0 0 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register							
7 CRC	6 UNC	5 0	4 IDN	3	2 ABT	1 T0N	0 AMN	
0	V	V	V	V	V	V	V	

Status Register									
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR		
0	0	0	-	-	0] –	0		

Figure 73. Execute Device Diagnostic Command (90h)

The Execute Device Diagnostic command performs the internal diagnostic tests implemented by the device. The results of the test are stored in the Error Register.

The normal Error Register bit definitions do not apply to this command. Instead, the register contains a diagnostic code. See Figure 59 on page 75 for the definition.

12.4 Flush Cache (E7h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 0 1 1 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register								
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN		
0	0	0	0	0	V	0	0		

	Status Register								
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR	
	0	V	0	V] –	0		V	

Figure 74. Flush Cache Command (E7h)

This command causes the device to complete writing data from its cache.

The device returns a status, RDY=1 and DSC=1 (50h), after following sequence.

- Data in the write cache buffer is written to disk media.
- Return a successfully completion.

12.5 Format Track (50h: Vendor Specific)

Command Block	Outp	ut	Re	e g :	ist	cei	ſS
Register	7 6	5	4	3	2	1	0
Data		_	_	_	_	_	_
Feature		-	-	_	_	_	_
Sector Count		_	_	_	_	_	_
Sector Number	V V	V	V	V	V	V	V
Cylinder Low	V V	V	V	V	V	V	V
Cylinder High	V V	V	V	V	V	V	V
Device/Head	1 L	1	D	Н	Н	Н	Н
Command	0 1	0	1	0	0	0	0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number)
Cylinder Low)
Cylinder High)
Device/Head) — — — н н н н
Status	See Below

	Error Register							
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN	
0	0	0	V	0	V	0	0	

	Status Register								
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR	
	0	V	V	V] –	0] –	V	

Figure 75. Format Track Command (50h)

The Format Track command formats a single logical track on the device. Each good sector of data on the track will be initialized to zero with write operation. At this time, whether the sector of data is initialized correctly is not verified with read operation. Any data previously stored on the track will be lost.

The host transfers a sector of data containing a format table to the device. The format table should contain two bytes for each sector on the track to be formatted. The structure of format table is shown in Figure 76 on page 112. The first byte should contain a descriptor value and the second byte should contain the sector number. The descriptor value should be 0 for a good sector, and any other descriptor value will cause an aborted error. The remaining bytes of the sector following the format table are ignored.

Since device performance is optimal at 1:1 interleave, and the device uses relative block addressing internally, the device will always format a track in the same way no matter what sector numbering is specified in the format table.

Output Parameters To The Device

Sector Number In LBA mode, this register specifies LBA address bits 0 - 7 to be formatted. (L=1)

Cylinder High/Low The cylinder number of the track to be formatted. (L=0)

In LBA mode, this register specifies LBA address bits 8 - 15 (Low), 16 - 23 (High) to

be formatted. (L=1)

H The head number of the track to be formatted. (L=0)

In LBA mode, this register specifies LBA address bits 24 - 27 to be formatted. (L=1)

Input Parameters From The Device

Sector Number In LBA mode, this register specifies current LBA address bits 0-7. (L=1)

Cylinder High/Low In LBA mode, this register specifies current LBA address bits 8 - 15 (Low), 16 - 23

(High)

Н In LBA mode, this register specifies current LBA address bits 24 - 27. (L=1)

Error The Error Register. An Abort error (ABT=1) will be returned under the following

conditions:

• The descriptor value does not match the certain value. (except 00h)

In LBA mode, this command formats a single logical track including the specified LBA.

Explanation for descriptor

Descriptor: 00h The sector of data will be initialized to 00h.

Data	Description
xxh 00h	descriptor value for sector number 00h sector number
xxh 01h	descriptor value for sector number 01h sector number
xxh 02h	descriptor value for sector number 02h sector number
:	
xxh N	descriptor value for sector number N sector number (last sector for the track)
00h 00h :	remainder of buffer filled with 00h
	xxh 00h xxh 01h xxh 02h : : xxh N

Descriptor: 00h - Format sector as good sector

Figure 76. Format track data field format

12.6 Format Unit (F7h: Vendor Specific)

Command Block	Output Re	gisters
Register	7 6 5 4	3 2 1 0
Data		
Feature	V V V V	V V V
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1 D	
Command	1 1 1 1	0 1 1 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register							
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN	
0	0	0	V	0	V	0	0	

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0	V] –	0		V

Figure 77. Format Unit Command (F7h)

The Format Unit command initializes all user data sectors after merging reassigned sector location into the defect information of the device and clearing the reassign information. Both new reassign information and new defect information are available right after this command completion, and are also used on next power on reset or hard reset. Both previous information are erased from the device by this command.

Note that the Format Unit command initializes from LBA 0 to Native MAX LBA. Host MAX LBA set by Initialize Drive Parameter or Set MAX ADDRESS command is ignored. So the protected area by Set MAX ADDRESS command is also initialized.

The security erase prepare command should be completed immediately prior to the Format Unit command. If the device receives a Format Unit command without a prior Security Erase Prepare command the device aborts the Format Unit command.

If Feature register is NOT 11h, the device returns Abort error to the host.

This command does not request to data transfer.

Output Parameters To The Device

Feature Destination code for this command.

11H Merge reassigned location into the defect information

The execution time of this command is shown below.

DARA-225000	about 44 min
DARA-218000	about 38 min
DARA-215000	about 30 min
DARA-212000	about 26 min
DARA-209000	about 20 min
DARA-206000	about 14 min

12.7 Identify Device (ECh)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 1 1 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN
0	0	0	0	0	V	0	0

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0] —] –	0] V

Figure 78. Identify Device Command (ECh)

The Identify Device command requests the device to transfer configuration information to the host. The device will transfer a sector to the host containing the information in Figure 79 on page 116.

Word	Content	Description
01 02 03 04 05 06 07 08 09 10-19 20	045AH * * * * * * * * * * * * * * * * * *	Drive classification, bit assignments: 15(=0): 1=ATAPI device, 0=ATA device 14(=0): 1=format speed tolerance gap required 13(=0): 1=track offset option available 12(=0): 1=data strobe offset option available 11(=0): 1=rotational speed tolerance > 0.5% 10(=1): 1=disk transfer rate > 10 Mbps 9(=0): 1=disk transfer rate > 5 Mbps but <= 10 Mbps 8(=0): 1=disk transfer rate <= 5 Mbps 7(=0): 1=removable cartridge device 6(=1): 1=fixed device 5(=0): 1=spindle motor control option implemented 4(=1): 1=head switch time > 15 us 3(=1): 1=not MFM encoded 2(=0): 1=soft sectored 1(=1): 1=hard sectored 0(=0): Reserved Number of cylinders in default translate mode Number of removable cylinders Number of heads in default translate mode Reserved Reserved Number of sectors per track in default translate mode Number of bytes of sector gap Number of bytes in sync field Reserved Serial number in ASCII (0 = not specified)
23-26 27-46 47	XXXX Note.3 8010H	Microcode version in ASCII Model number in ASCII Maximum number of sectors that can be transferred per interrupt on Read and Write Multiple commands 15-8(=80h) 7-0: Maximum number of sectors that can be transferred per interrupt.
48 49	0000H * 0F00H	Capable of double word I/O, '0000'= cannot perform Capabilities, bit assignments: 15-14(=0) Reserved 13(=0) Standby timer value are vendor specific 12(=0) Reserved 11(=1) IORDY Supported 10(=1) IORDY can be disabled 9(=1) 1=LBA Supported 8(=1) 1=DMA Supported 7-0(=0) Reserved

Figure 79. Identify device information

Word	Content	Description
5 0	0000Н	Capabilities 15(=0) 0=the contents of word 50 are valid 14(=1) 1=the contents of word 50 are valid 13-1(=0) Reserved 0(=0) 1=the device has a minimum Standby timer value that is device specific
51	0200Н	PIO data transfer cycle timing mode
5 2	0200H *	DMA data transfer cycle timing mode Refer Word 62 and 63
53	XXX7H	Validity flag of the word 15-3(=0) Reserved 2(=1) 1=Word 88 is Valid 1(=1) 1=Word 64-70 are Valid 0(=1) 1=Word 54-58 are Valid
5 4	XXXXH	Number of current cylinders
5 5	XXXXH	Number of current heads
56	XXXXH	Number of current sectors per track
57-58	XXXXH	Current capacity in sectors Word 57 specifies the low word of the capacity
5 9	0хххн	Current Multiple setting. bit assignments 15-9(=0) Reserved 8 1= Multiple Sector Setting is Valid
60-61	Note.4	7-0 xxh = Current setting for number of sectors Total Number of User Addressable Sectors Word 60 specifies the low word of the number
6 2	0000H *	Reserved
63	XX07H	Multiword DMA Transfer Capability 15-11(=0) Reserved 10 1=Multiword DMA mode 2 is selected 9 1=Multiword DMA mode 1 is selected 8 1=Multiword DMA mode 0 is selected 7-0(=7) Multi word DMA transfer modes supported (support mode 0,1 and 2)
64	0003н	Flow Control PIO Transfer Modes Supported 15-8(=0) Reserved 7-0(=3) Advanced PIO Transfer Modes Supported '11' = PIO Mode 3 and 4 Supported
6 5	0078Н	Minimum Multiword DMA Transfer Cycle Time Per Word
6 6	0078Н	15-0(=78) Cycle time in nanoseconds (120ns, 16.6MB/s) Manufacturer's Recommended Multiword DMA Transfer Cycle Time
67	00F0H	15-0(=78) Cycle time in nanoseconds (120ns, 16.6MB/s) Minimum PIO Transfer Cycle Time Without Flow Control 15-0(=F0) Cycle time in nanoseconds (240ns, 8.3MB/s)
68	0078Н	Minimum PIO Transfer Cycle Time With IORDY Flow Control 15-0(=78) Cycle time in nanoseconds (120ns, 16.6MB/s)

Figure 80. Identify device information --- Continued ---

Word	Content	Description
69-79 80	0000H 001EH	Reserved Major version number 15-0(=1E) ATA-1, ATA-2, ATA-3 and ATA/ATAPI-4
81	0017н	Minor version number 15-0(=17) ATA/ATAPI-4 T13 1153D revision 17
8 2	746BH	Command set supported 15 (-1), Reserved 14 (-1) 1=NOP command supported 13 (-1) 1=READ BUFFER command supported 12 (-1) 1=WRITE BUFFER command supported 11 (-0) Reserved 10 (-1) 1=Host Protected Area Feature Set supported 9 (-0) 1=DEVICE RESET command supported 8 (-0) 1=SERVICE interrupt supported 7 (-0) 1=release interrupt supported 6 (-1) 1=look—ahead supported 5 (-1) 1=write cache supported 4 (-0) 1=supports PACKET Command Feature Set 3 (-1) 1=supports Removable Media Feature Set 1 (-1) 1=supports Security Feature Set 0 (-1) 1=supports S.M.A.R.T Feature Set
83	4088H	Command set supported 15(=0) Always 14(=1) Always 13-8(=0) Reserved 7(=1) 1=Address Offset feature supported 6-5(=0) Reserved 4(=0) 1=Removable Media Status Notification Feature Set supported 3(=1) 1=Advanced Power Management Feature Set supported 2(=0) 1=CFA Feature Set supported 1(=0) 1=READ/WRITE DMA QUEUED supported 0(=0) 1=DOWNLOAD MICROCODE command supported
8 4	4000H	Command set/feature supported extension 15(=0) Always 14(=1) Always 13-0(=0) Reserved

Figure 81. Identify device information --- Continued ---

Word	Content	Description
8 5	F4XXH	Command set/feature enabled 15(=1) Reserved 14(=1) 1=NOP command supported 13(=1) 1=READ BUFFER command supported 12(=1) 1=WRITE BUFFER command supported 11(=0) Reserved 10(=1) 1=Host Protected Area Feature Set supported 9(=0) 1=DEVICE RESET command supported 8(=0) 1=SERVICE interrupt enabled 7(=0) 1=release interrupt enabled 6(=X) 1=look—ahead enabled 5(=X) 1=write cache enabled 4(=0) 1=supports PACKET Command Feature Set 3(=X) 1=supports Power Management Feature Set 2(=0) 1=supports Removable Media Feature Set 1(=X) 1=Security Feature Set enabled 0(=X) 1=S.M.A.R.T Feature Set enabled
86	00XXH	Command set/feature enabled 15-8(=0) Reserved 7(=X) 1=Address Offset mode enabled 6-5(=0) Reserved 4(=0) 1=Removable Media Status Notification Feature Set enabled 3(=X) 1=Advanced Poser Management Feature Set enabled 2(=0) 1=CFA Feature Set supported 1(=0) 1=READ/WRITE DMA QUEUED command supported 0(=0) 1=DOWNLOAD MICROCODE command supported
8 7	4000H	Command set/feature enabled 15(=0) Always 14(=1) Always 13-0(=0) Reserved
8 8	0X1FH	Ultra DMA Transfer mode (mode 4 supported) 15-13(=0) Reserved 12(=X) 1=UltraDMA mode 4 is selected 11(=X) 1=UltraDMA mode 3 is selected 10(=X) 1=UltraDMA mode 2 is selected 9(=X) 1=UltraDMA mode 1 is selected 8(=X) 1=UltraDMA mode 0 is selected 7-5(=0) Reserved 4(=1) 1=UltraDMA mode 4 is supported 3(=1) 1=UltraDMA mode 3 is supported 2(=1) 1=UltraDMA mode 2 is supported 1(=1) 1=UltraDMA mode 1 is supported 0(=1) 1=UltraDMA mode 0 is supported
8 9	XXXXH	Time required for security erase unit completion Time= value(XXXXh)*2 [minutes] Refer to 12.22,]Security Erase Unit (F4h)≠ on page 142
9 0	0000Н	Refer to 12.22, [Security Erase Unit (F4H)≠ on page 142] Time required for Enhanced security erase completion 0000 : Not supported

Figure 82. Identify device information --- Continued ---

Word	Content	Description
91	40XXH	Current Advanced Power Management level 15-8(=40h) Reserved 7-0(=X) Currect Advanced Power Management level set by Set Features Command (01h to FEh)
92	XXXXH X000H	Current Master Password Revision Codes Device detected result 15-14(=0) Reserved 13(=X) 1=Device detected CBLID- above ViH 0=Device detected CBLID- below ViL 12-0(=0) Reserved
94-127	0000H 0XXXH	Reserved Security Mode Feature. Bit assignments 15-9(=0) Reserved 8(=X) Security Level 1= Maximum, 0= High 7-6(=0) Reserved 5(=0) 1=Enhanced security erase supported 4(=X) 1=Security count expired 3(=X) 1=Security Frozen 2(=X) 1=Security locked 1(=X) 1=Security enabled 0(=X) 1=Security supported
129	000XH *	Current Set Feature Option. Bit assignments 15-4(=0) Reserved 3(=X) 1=Auto reassign enabled 2(=X) 1=Reverting enabled 1(=X) 1=Read Look—ahead enabled 0(=X) 1=Write Cache enabled
130	XXXXH * 000XH *	Reserved Initial Power Mode Selection. Bit assignments 15-2(=0) Reserved 1(=1) Always
132-255	0000H	<pre>0(=X) Initial Power Mode 1= Standby, 0= Idle Reserved</pre>

Figure 83. Identify device information

Note. The '*' mark in 'Content' field indicates the use of those parameters that are vedor specific.

Microcode revision	SHxOAxxx
DARA-225000 Number of cylinders Number of heads Model number (ASCII) Total number of user addressable sectors	3FFFh 0010h IBM-DARA-225000 2F47E00h

Microcode revision	GLxOAxxx
DARA-218000 Number of cylinders Number of heads Model number (ASCII) Total number of user addressable sectors	3FFFh 0010h IBM-DARA-218000 21CAB00h
DARA-215000 Number of cylinders Number of heads Model number (ASCII) Total number of user addressable sectors	3FFFh 0010h IBM-DARA-215000 1C21B00h

Microcode revision	ARxOAxxx
DARA-212000 Number of cylinders Number of heads Model number (ASCII) Total number of user addressable sectors	3FFFh 0010h IBM-DARA-212000 167CA00h
DARA-209000 Number of cylinders Number of heads Model number (ASCII) Total number of user addressable sectors	3FFFh 0010h IBM-DARA-209000 10D7900h
DARA-206000 Number of cylinders Number of heads Model number (ASCII) Total number of user addressable sectors	3080h 000Fh IBM-DARA-206000 B30880h

Microcode revision is referred to 12.7, "Identify Device (ECh)" on page 115 word 23 - 26. This is 8 characters in ASCII.

Figure 84. Number of cylinders/heads/sectors by models for DARA-2xxxxx.

12.8 Identify Device DMA (EEh)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	1 - 1 D
Command	1 1 1 0 1 1 1 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN						0 AMN	
0 0 0 0 0 V 0 0							

Status Register							
7 6 5 4 3 2 1 0 BSY RDY DF DSC DRQ COR IDX ERR							
0 V 0 0 - V							

Figure 85. Identify Device Command DMA (EEh)

The Identify Device DMA command requests the device to transfer configuration information to the host. The device will transfer the same 256 words of device identification data by the Identify Device command(ECh) via DMA channel.

12.9 Idle (E3h/97h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count	V V V	V V V V
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 0 0 1 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register									
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN							0 AMN		
0	0 0 0 0 0 V 0 0								

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0	V		0		V

Figure 86. Idle Command (E3h/97h)

The Idle command causes the device to enter Idle mode immediatly, and set auto power down timeout parameter(standby timer). And then the timer starts counting down.

When the Idle mode is entered, the device is spun up to operating speed. If the device is already spinning, the spin up sequence is not executed.

During Idle mode the device is spinning and ready to respond to host commands immediately.

Output Parameters To The Device

Sector Count

Timeout Parameter. If zero, the timeout interval(Standby Timer) is NOT disabled, but the timeout interval is set for 109 minutes automatically. If other than zero, the timeout interval is set for (Timeout Parameter \times 5) seconds.

The device will enter Standby mode automatically if the timeout interval expires with no device access from the host. The timeout interval will be reinitialized if there is a device access before the timeout interval expires.

12.10 Idle Immediate (E1h/95h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 0 0 0 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register								
CI	7 R C	6 UNC	5 0	4 IDN	3	2 ABT	1 T0N	0 AMN	
()	0	0	0	0	V	0	0	

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	V	_	0	-	V

Figure 87. Idle Immediate Command (E1h/95h)

The Idle Immediate command causes the device to enter Idle mode.

The device is spun up to operating speed. If the device is already spinning, the spin up sequence is not executed.

During Idle mode the device is spinning and ready to respond to host commands immediately.

The Idle Immediate command will not affect the auto power down timeout parameter.

12.11 Initialize Device Parameters (91h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count	V V V	V V V V
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D H H H H
Command	1 0 0	1 0 0 0 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register								
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN	
0	0	0	0	0	V	0	0	

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	0	0] –] —	0		V

Figure 88. Initialize Device Parameters Command (91h)

The Initialize Device Parameters command enables the host to set the number of sectors per track and the number of heads minus 1, per cylinder. Words 54-58 in Identify Device Information reflects these parameters.

The parameters remain in effect until the following events:

- Another Initialize Device Parameters command is received.
- The device is powered off.
- · Hard reset occurs.

Н

• Soft reset occurs and the Set Feature option of CCh is set instead of 66h.

Output Parameters To The Device

Sector Count The number of sectors per track. 0 does not mean there are 256 sectors per track, but there is no sector per track.

The number of heads minus 1 per cylinder. The minimum is 0 and the maximum is

Note: The following condition needs to be satisfied to avoid invalid number of cylinder beyond FFFFh, which will cause performance degradation of the drive.

(Total customer usable data sectors) / ((Sector Count)*(H+1)) → FFFFh

The total customer usable data sectors are indicated at 3.1, "Default Logical Drive Parameter" on page 9, and related description is at 10.4.1, "Logical CHS Addressing Mode" on page 77.

12.12 Read Buffer (E4h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 0 1 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register								
CI	7 R C	6 UNC	5 0	4 IDN	3	2 ABT	1 T0N	0 AMN	
()	0	0	0	0	V	0	0	

	Status Register											
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR					
0	V	0	-	_	0	-	V					

Figure 89. Read Buffer Command (E4h)

The Read Buffer command transfers a sector of data from the sector buffer of device to the host.

The sector is transferred through the Data Register 16 bits at a time.

The sector transferred will be from the same part of the buffer written to by the last Write Buffer command. The contents of the sector may be different if any reads or writes have occurred since the Write Buffer command was issued.

12.13 Read DMA (C8h/C9h)

Command Block	Out	tpı	иt	Re	eg:	ist	cei	ſS
Register	7	6	5	4	3	2	1	0
Data	_	_	_	_	_	_	_	_
Feature	_	_	_	_	_	_	_	_
Sector Count	V	V	V	V	V	V	V	V
Sector Number	V	V	V	V	V	V	V	V
Cylinder Low	V	V	V	V	V	V	V	V
Cylinder High	V	V	V	V	V	V	V	V
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	1	1	0	0	1	0	0	R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	v v v v v v v
Sector Number	v v v v v v v
Cylinder Low	v v v v v v v
Cylinder High	v v v v v v v
Device/Head	_ — — — н н н н
Status	See Below

	Error Register										
7 CRC	6 UNC	5	4 IDN	3	2 ABT	1 T0N	0 AMN				
V	V	0	V	0	V	0	V				

	Status Register										
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR				
0	V	0	V		0		V				

Figure 90. Read DMA Command (C8h/C9h)

The Read DMA command reads one or more sectors of data from disk media, then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. The data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256

sectors will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register specifies LBA address bits 0 - 7 to be transferred. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register specifies LBA address bits 8 - 15 (Low) 16 - 23 (High) to

be transferred. (L=1)

Η The head number of the first sector to be transferred. (L=0)

In LBA mode, this register specifies LBA bits 24-27 to be transferred. (L=1)

R The retry bit. If set to one, then retries are disabled.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unre-

coverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

The head number of the sector to be transferred. (L=0)Н

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.14 Read Long (22h/23h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count	0 0 0	0 0 0 0 1
Sector Number	V V V	V V V V
Cylinder Low	V V V	V V V V V
Cylinder High	V V V	V V V V V
Device/Head	1 L 1	D Н Н Н Н
Command	0 0 1	0 0 0 1 R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count)v
Sector Number)
Cylinder Low)
Cylinder High)
Device/Head) — — — н н н н
Status	See Below

	Error Register											
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN					
0	0	0	V	0	V	0	V					

	Status Register										
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR				
0	V	0	V		0		V				

Figure 91. Read Long Command (22h/23h)

The Read Long command reads the designated one sector of data and the ECC bytes from the disk media, then transfers the data and ECC bytes from the device to the host.

After 512 bytes of data have been transferred, the device will keep setting DRQ=1 to indicate that the device is ready to transfer the ECC bytes to the host. The data is transferred 16 bits at a time, and the ECC bytes are transferred 8 bits at a time. The number of ECC bytes are 4 or 34 according to the setting of Set Feature option. The default setting is 4 bytes of ECC data.

The command makes a single attempt to read the data and does not check the data using ECC. Whatever is read is returned to the host.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. The Sector Count must be set

to one.

Sector Number The sector number of the sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

Н The head number of the sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24-27. (L=1)

R The retry bit. If set to one, then retries are disabled.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. **Sector Number** The sector number of the transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

Н The head number of the transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24-27. (L=1)

It should be noted that the device internally uses 34 bytes of ECC data on all data written or read from the disk. The 4 byte mode of operation is provided via an emulation. It is recommended that for testing the effectiveness and integrity of the devices ECC functions that the 34 byte ECC mode should be used.

12.15 Read Multiple (C4h)

Command Block	Out	put	Regi	sters
Register	7	6 5	4 3	2 1 0
Data				
Feature				
Sector Count	V	V V	V V	V V V
Sector Number	V	V V	V V	V V V
Cylinder Low	V	V V	V V	V V V
Cylinder High	V	V V	V V	V V V
Device/Head	1	L 1	D H	ннн
Command	1	1 0	0 0	1 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count)
Sector Number)
Cylinder Low)
Cylinder High)
Device/Head) — — — н н н н
Status	See Below

	Error Register										
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN				
0	V	0	V	0	V	0	V				

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	V	-	0] –	V

Figure 92. Read Multiple Command (C4h)

The Read Multiple command reads one or more sectors of data from disk media, then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time. Command execution is identical to the Read Sectors command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256

sectors will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unre-

coverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

Н The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.16 Read Native Max ADDRESS (F8h)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	1 L 1 D
Command	1 1 1 1 1 0 0 0

Command Block	Input Registers					
Register	7 6 5 4 3 2 1 0					
Data						
Error	See Below					
Sector Count						
Sector Number)					
Cylinder Low)					
Cylinder High)					
Device/Head) — — — н н н н					
Status	See Below					

	Error Register								
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN		
0	0	0	0	0	V	0	0		

Status Register								
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR	
0	V	0] —] –	0	_] V	

Figure 93. Read Native Max ADDRESS (F8h)

This command returns the native max LBA/CYL of HDD which is not effected by Set Max ADDRESS command. Even if the Address Offset mode is enabled, the native max LBA/CYL of HDD is returned.

Output Parameters To The Device

L LBA mode.Indicates the addressing mode.L=0 specifies CHS mode and L=1 does

LBA addressing mode.

The device number bit. Indicates that the device number bit of the Device/Head

Register should be specified. D=0 selects the master device and D=1 selects the

slave device.

Indicates that the bit is not used.

Input Parameters From The Device

Sector Number In LBA mode, this register contains native max LBA bits 0 - 7. (L=1)

In CHS mode, this register contains native max sector number. (L=0)

Cylinder High/Low In LBA mode, this register contains native max LBA bits 8 - 15 (Low),

16 - 23 (High). (L=1)

In CHS mode, this register contains native max cylinder number. (L=0)

H In LBA mode, this register contains native max LBA bits 24 - 27. (L=1)

In CHS mode, this register contains native max head number.(L=0)

- Valid. Indicates that the bit is part of an input parameter and will be set to 0 or 1 by \mathbf{V} the device.
- Indicates that the bit is not used.

12.17 Read Sectors (20h/21h)

Command Block	Out	Įρι	ıt	Re	eg:	ist	cei	ſS
Register	7	6	5	4	3	2	1	0
Data		_	_	_	_	_	_	_
Feature	_	_	_	_	_	_	_	_
Sector Count	V	V	V	V	V	V	V	V
Sector Number	V	V	V	V	V	V	V	V
Cylinder Low	V	V	V	V	V	V	V	V
Cylinder High	V	V	V	V	V	V	V	V
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	0	0	1	0	0	0	0	R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count)
Sector Number)
Cylinder Low)
Cylinder High)
Device/Head) — — — н н н н
Status	See Below

	Error Register									
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN										
0	V	0	V	0	V	0	V			

	Status Register								
7 6 5 4 3 2 1 0 BSY RDY DF DSC DRQ COR IDX ERR									
0	V	0	V] –	0		V		

Figure 94. Read Sectors Command (20h/21h)

The Read Sectors command reads one or more sectors of data from disk media, then transfers the data from the device to the host.

The sectors are transferred through the Data Register 16 bits at a time.

If an uncorrectable error occurs, the read will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256

sectors will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit. If set to one, then retries are disabled.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unre-

coverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

Н The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.18 Read Verify Sectors (40h/41h)

Command Block	Outpu	ιt	Re	e g :	ist	eı	ſS
Register	7 6	5	4	3	2	1	0
Data		_	_	_	_	_	_
Feature		_	_	_	_	_	_
Sector Count	V V	V	V	V	V	V	V
Sector Number	V V	V	V	V	V	V	V
Cylinder Low	V V	V	V	V	V	V	V
Cylinder High	V V	V	V	V	V	V	V
Device/Head	1 L	1	D	Н	Н	Н	Н
Command	0 0	1	0	0	0	0	R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	v v v v v v v
Sector Number	v v v v v v v
Cylinder Low	v v v v v v v
Cylinder High	v v v v v v v
Device/Head	_ — — — н н н н
Status	See Below

	Error Register									
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN										
0	V	0	V	0	V	0	V			

	Status Register								
7 6 5 4 3 2 1 0 BSY RDY DF DSC DRQ COR IDX ERR									
0	V	0	V] –	0		V		

Figure 95. Read Verify Sectors Command (40h/41h)

The Read Verify Sectors verifies one or more sectors on the device. No data is transferred to the host.

The difference of Read Sectors command and Read Verify Sectors command is whether the data is transferred to the host or not.

If an uncorrectable error occurs, the read verify will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be verified. If zero is specified, then 256 sectors

will be verified.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit. If set to one, then retries are disabled.

Input Parameters From The Device

Sector Count The number of requested sectors not verified. This will be zero, unless an unrecover-

able error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

Н The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.19 Recalibrate (1xh)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	1 - 1 D
Command	0 0 0 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register									
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN										
0	0	0	0	0	V	V	0			

Status Register									
7 6 5 4 3 2 1 0 BSY RDY DF DSC DRQ COR IDX ERR									
0	V	0	V	-	0] –	V		

Figure 96. Recalibrate Command (1xh)

The Recalibrate command moves the read/write heads from anywhere on the disk to cylinder 0.

If the device cannot reach cylinder 0, T0N (Track 0 Not Found) will be set in the Error Register.

12.20 Security Disable Password (F6h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	1 0 1 1 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register								
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN		
0	0	0	0	0	V	0	0		

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	V] –	0		V

Figure 97. Security Disable Password Command (F6h)

The Security Disable Password command disables the security mode feature (device lock function).

The Security Disable Password command requests a transfer of a single sector of data from the host including information specified in Figure 98. Then the device checks the transferred password. If the User Password or Master Password matches the given password, the device disables the security mode feature (device lock function). This command does not change the Master Password which may be re-activated later by setting User Password. This command should be executed in device unlock mode.

Word	Description
00 01-16 17-255	Control word bit 0 : Identifier (1- Master, 0- User) bit 1-15 : Reserved Password (32 bytes) Reserved

Figure 98. Password Information for Security Disable Password command

The device will compare the password sent from this host with that specified in the control word.

Identifier

Zero indicates that the device should check the supplied password against the user password stored internally. One indicates that the device should check the given password against the master password stored internally.

12.21 Security Erase Prepare (F3h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	1 0 0 1 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register								
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN	
0	0	0	0	0	V	0	0	

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0	V] —	0] –] V

Figure 99. Security Erase Prepare Command (F3h)

The Security Erase Prepare Command must be issued immediately before the Security Erase Unit Command to enable device erasing and unlocking.

The Security Erase Prepare Command must be issued immediately before the Format Unit Command. This command is to prevent accidental erasure of the device.

This command does not request to transfer data.

12.22 Security Erase Unit (F4h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	1 0 1 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register								
7 CRC	6 UNC	5	4 IDN	3	2 ABT	1 T0N	0 AMN	
0	0	0	V	0	V	0	0	

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	V] —	0] –] V

Figure 100. Security Erase Unit Command (F4h)

The Security Erase Unit command initializes all user data sectors, then disables the device lock function.

Note that the Security Erase Unit command initializes from LBA 0 to Native MAX LBA. Host MAX LBA set by Initialize Drive Parameter or Set MAX ADDRESS command is ignored. So the protected area by Set MAX ADDRESS command is also initialized.

This command requests to transfer a single sector data from the host including information specified in Figure 101.

If the password does not match then the device rejects the command with an Aborted error.

Word	Description
00 01-16 17-255	Control word bit 0 : Identifier (1- Master, 0- User) bit 1-15 : Reserved Password (32 bytes) Reserved

Figure 101. Erase Unit information

Identifier

Zero indicates that the device should check the supplied password against the user password stored internally. One indicates that the device should check the given password against the master password stored internally.

The Security Erase Unit command erases all user data and disables the security mode feature (device lock function). So after completing this command, all user data will be initialized to zero with write operation. At this time, it is not verified with read operation whether the sector of data is initialized correctly. Also, the defective sector information and the reassigned sector information for the device are not updated. The security erase prepare command should be completed immediately prior to the Security Erase Unit command. If the device receives a Security Erase Unit command without a prior Security Erase Prepare command the device aborts the security erase unit command.

This command disables the security mode feature (device lock function), however the master password is still stored internally within the device and may be re-activated later when a new user password is set. If you execute this command on disabling the security mode feature (device lock function), the password sent by the host is NOT compared with the password stored in the device for both the Master Password and the User Password, and then the device only erases all user data.

The execution time of this command is shown below.

DARA-225000	about 44 min
DARA-218000	about 38 min
DARA-215000	about 30 min
DARA-212000	about 26 min
DARA-209000	about 20 min
DARA-206000	about 14 min

12.23 Security Freeze Lock (F5h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	1 0 1 0 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN
0	0	0	0	0	V	0	0

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	-	-	0] –] V

Figure 102. Security Freeze Lock Command (F5h)

The Security Freeze Lock Command allows the device to enter frozen mode immediately.

After this command is completed, the command which updates Security Mode Feature (Device Lock Function) is rejected.

Frozen mode is quit only by Power off.

The following commands are rejected when the device is in frozen mode. For detail, refer to Figure 65 on page 88.

- · Security Set Password
- · Security Unlock
- · Security Disable Password
- Security Erase Unit

12.24 Security Set Password (F1h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	1 0 0 0 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN
0	0	0	0	0	V	0	0

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0] –	_	0] –	V

Figure 103. Security Set Password Command (F1h)

The Security Set Password command enables security mode feature (device lock function), and sets the master password or the user password.

The security mode feature (device lock function) is enabled by this command, and the device is not locked immediately. The device is locked after next power on reset or hard reset. When the MASTER password is set by this command, the master password is registerred internally, but the device is NOT locked after next power on reset or hard reset.

This command requests a transfer of a single sector of data from the host including the information specified in Figure 104 on page 146.

The data transferred controls the function of this command.

Word	Description
00 01-16 17-18 19-255	Control word bit 0 : Identifier (1- Master, 0- User) bit 1-7 : Reserved bit 8 : Security level (1- Maximum, 0- High) bit 9-15 : Reserved Password (32 byte) Master Password Revision Code (valid if Word 0 bit 0 = 1) Reserved

Figure 104. Security Set Password Information

Zero indicates that device regards Password as User Password. One indicates that **Identifier**

device regards Password as Master Password.

Security Level Zero indicates High level, one indicates Maximum level. If the host sets High level and the password is forgotten, then the Master Password can be used to unlock the

device. If the host sets Maximum level and the user password is forgotten, only an Security Erase Prepare/Security Unit command can unlock the device and all data

will be lost.

Password The text of the password - all 32 bytes are always significant.

Master Password Revision Code The Revision Code field is set with Master password. If Identifier is User, the Revision Code is not set. The Revision Code field is returned in Identify Device word 92. The valid Revision Codes are 0000h to FFFDh. Default Master Password Revision Code is FFFEh. FFFFh is reserved.

The setting of the Identifier and Security level bits interact as follows.

Identifier=User / Security level = High The password supplied with the command will be saved as the new user password. The security mode feature (lock function) will be enabled from the next power on. The file may then be unlocked by either the user password or the previously set master pass-

Identifier=Master / Security level = High This combination will set a master password but will NOT enable the security mode feature (lock function).

Identifier=User / Security level = Maximum The password supplied with the command will be saved as the new user password. The security mode feature (lock function) will be enabled from the next power on. The file may then be unlocked by only the user password. The master password previously set is still stored in the file but may NOT be used to unlock the device.

Identifier=Master / Security level = Maximum This combination will set a master password but will NOT enable the security mode feature (lock function).

12.25 Security Unlock (F2h)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	1 - 1 D
Command	1 1 1 1 0 0 1 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register								
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN	
0	V	0	0	0	V	0	0	

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0	-	-	0] –	V

Figure 105. Security Unlock Command (F2h)

This command unlocks the password and causes the device to enter device unlock mode. If power on reset or hard reset is done without executing the Security Disable Password command after this command is completed, the device will be in device lock mode. The password has not been changed yet.

The Security Unlock command requests to transfer a single sector of data from the host including information specified in Figure 106 on page 148.

If the Identifier bit is set to master and the file is in high security mode then the password supplied will be compared with the stored master password. If the file is in maximum security mode then the security unlock will be rejected.

If the Identifier bit is set to user, then the file compares the supplied password with the stored user password.

If the password compare fails then the device returns an abort error to the host and decrements the unlock attempt counter. This counter is initially set to 5 and is decremented for each password mismatch. When this counter reaches zero then all password protected commands are rejected until a hard reset or a power off.

Word	Description
00 01-16 17-255	Control word bit 0 : Identifier (1- Master, 0- User) bit 1-15 : Reserved Password (32 bytes) Reserved

Figure 106. Security Unlock Information

Identifier

Zero indicates that device regards Password as User Password. One indicates that device regards Password as Master Password.

The user can detect if the attempt to unlock the device has failed due to a mismatched password as this is the only reason that an abort error will be returned by the file AFTER the password information has been sent to the device. If an abort error is returned by the device BEFORE the password data has been sent to the file then another problem exists.

12.26 Seek (7xh)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	
Sector Count	
Sector Number	V V V V V V V
Cylinder Low	V V V V V V V
Cylinder High	V V V V V V V
Device/Head	1 L 1 D H H H H
Command	0 1 1 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	v v v v v v v
Cylinder Low	v v v v v v v
Cylinder High	v v v v v v v
Device/Head	н н н н
Status	See Below

	Error Register								
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN		
0	0	0	V	0	V	0	0		

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0	V		0		V

Figure 107. Seek Command (7xh)

The Seek command initiates a seek to the designated track and selects the designated head. The device need not be formatted for a seek to execute properly.

Output Parameters To The Device

Sector Number In LBA mode, this register specifies LBA address bits 0 - 7 for seek. (L=1)

Cylinder High/Low The cylinder number of the seek.

In LBA mode, this register specifies LBA address bits 8 - 15 (Low), 16 - 23 (High)

for seek. (L=1)

H The head number of the seek.

In LBA mode, this register specifies LBA address bits 24 - 27 for seek. (L=1)

Input Parameters From The Device

Sector Number In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

H In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.27 Set Features (EFh)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	V V V V V V V
Sector Count	Note.1
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	1 - 1 D
Command	1 1 1 0 1 1 1 1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register								
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN							0 AMN		
	0	0	0	0	0	V	0	0	

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0] —] –	0] –] V

Figure 108. Set Features Command (EFh)

The Set Feature command establishes the following parameters which affect the execution of certain features as shown in below table.

ABT will be set to 1 in the Error Register if the Feature register contains any undefined values.

Output Parameters To The Device

Feature

Destination code for this command.

02H Enable write cache (Warning.1)

03H Set transfer mode based on value in sector count register

05H Enable Advanced Power Management

09H Enable Address Offset mode

44H 34 bytes of ECC apply on Read Long/Write Long commands

55H Disable read look-ahead feature

66H Disable reverting to power on defaults

82H Disable write cache

85H Disable Advanced Power Management

89H Disable Address Offset mode

AAH Enable read look-ahead feature

BBH 4 bytes of ECC apply on Read Long/Write Long commands

CCH Enable reverting to power on defaults

Warning 1. Hard reset or power off must not be done in 5 seconds after write command completion when write cache is enabled.

Note 1.

When Feature register is 03h (=Set Transfer mode), the Sector Count Register specifies the transfer mechanism. The upper 5 bits define the type of transfer and the low order 3 bits encode the mode value.

```
PIO Default Transfer Mode
                                        0000 0000
PIO Default Transfer Mode, Disable IORDY
                                        00000 001
PIO Flow Control Transfer Mode x
                                       00001 nnn (nnn=000,001,010,011,100)
Multiword DMA mode x
                                        00100 nnn (nnn=000,001,010)
Ultra DMA mode x
                                        01000 nnn (nnn=000,001,010,011,100)
```

Note 2.

When Feature register is 05h (=Enable Advanced Power Management), the Sector Count Register specifies the Advanced Power Management level.

```
COh - FEh ... The deepest Power Saving mode is Active Idle
80h - BFh ... The deepest Power Saving mode is Low power Idle
01h - 7Fh ... The deepest Power Saving mode is Standby
00h, FFh ...Aborted
```

When Feature register is 85h (=Disable Advanced Power Management), the deepest Power Saving mode becomes Active Idle.

Note 3.

If the number of auto reassigned sectors reaches the device's reassignment capacity, the write cache function will be automatically disabled. Although the device still accepts the Set Features command (with Feature register = 02h) without error, the write cache function will remain disabled. For current write cache function status, please refer to the Identify Device Information(129word) by Identify Device command.

Note 4.

After power on reset or hard reset, the device is set to the following features as default.

Write cache : Enable ECC bytes : 4 bytes Read look-ahead : Enable : Disable Reverting to power on defaults : Disable Address Offset mode

12.28 Set Max ADDRESS (F9h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		— — — B
Sector Number	V V V	V V V V
Cylinder Low	V V V	V V V V
Cylinder High	V V V	V V V V
Device/Head	1 L 1	р н н н н
Command	1 1 1	1 1 0 0 1

Command Block	Input Registers						
Register	7 6 5 4 3 2 1 0						
Data							
Error	See Below						
Sector Count							
Sector Number)						
Cylinder Low)						
Cylinder High)						
Device/Head) — — — н н н н						
Status	See Below						

	Error Register							
CI	7 R C	6 UNC	5 0	4 IDN	3	2 ABT	1 T0N	0 AMN
()	0	0	0	0	V	0	0

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0] –] —	0] –] V

Figure 109. Set Max ADDRESS (F9h)

This command overwrites the max LBA/CYL of HDD in a range of actual device capacities. Once device receives this command, all accesses beyond that LBA/CYL are rejected with setting ABORT bit in status register. Identify device command and Identify device DMA command returns the LBA/CYL which is set via this command as a default value.

Read Native Max ADDRESS command should be issued and completed immediately prior to issuing Set Max ADDRESS command. If the device receives Set Max ADDRESS command without a prior Read Native Max ADDRESS command, the device aborts the Set Max ADDRESS command.

In CHS mode, Cylinder High, Cylinder Low specify the max cylinder number. The Head number of DEVICE/HEAD and Sector Number are ignored. The default value(See default CHS in Identify device information) is used for that.

In LBA mode, the Head number of DEVICE/HEAD, Cylinder High, Cylinder Low and Sector Number specify the max LBA. This command will be set this LBA sa the max LBA of the device.

Output Parameters To The Device

В

Option bit for selection whether nonvolatile or volatile. B=0 is volatile condition. When B=1, MAX LBA/CYL which is set by Set Max ADDRESS command is preserved by POR and HARD RESET. When B=0, MAX LBA/CYL which is set by Set Max ADDRESS command will be lost by POR and HARD RESET. B=1 is not valid when the device is in Address Offset mode, and the command is aborted.

Sector Number In LBA mode, this register contains LBA bits 0 - 7 which is to be input.(L=1)

In CHS mode, this register is ignored. (L=0)

Cylinder High/Low In LBA mode, this register contains LBA bits 8 - 15 (Low),

16 - 23 (High) which is to be set. (L=1)

In CHS mode, this register contains cylinder number which is to be input.(L=0)

H In LBA mode, this register contains LBA bits 24 - 27 which is to be input.(L=1)

In CHS mode, this register is ignored. (L=0)

L LBA mode.Indicates the addressing mode.L=0 specifies CHS mode and L=1 does

LBA addressing mode.

D The device number bit. Indicates that the device number bit of the Device/Head

should be specified. D=0 selects the master device and D=1 selects the slave device.

V Valid. Indicates that the bit is part of an output parameter and should be specified.

• Indicates that the bit is not used.

Input Parameters From The Device

Sector Number In LBA mode, this register contains Adjusted max LBA bits 0 - 7.(L=1)

In CHS mode, this register contains max sector number (= 63). (L=0)

Cylinder High/Low In LBA mode, this register contains Adjusted max LBA bits 8 - 15 (Low),

16 - 23 (High). (L=1)

In CHS mode, this register contains max cylinder number which is set. (L=0)

H In LBA mode, this register contains Adjusted max LBA bits 24 - 27. (L=1)

In CHS mode, this register contains max head number (= 15).(L=0)

Valid. Indicates that the bit is part of an input parameter and will be set to 0 or 1 by

the device.

- Indicates that the bit is not used.

12.29 Set Multiple (C6h)

Command Block	Output	Registers			
Register	7 6 5	4 3 2 1 0			
Data					
Feature					
Sector Count	V V V	V V V V			
Sector Number					
Cylinder Low					
Cylinder High					
Device/Head	1 - 1	D			
Command	1 1 0	0 0 1 1 0			

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN
0	0	0	0	0	V	0	0

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	0] —] –	0] –] V

Figure 110. Set Multiple Command (C6h)

The Set Multiple command enables the device to perform Read and Write Multiple commands and establishes the block size for these commands. The block size is the number of sectors to be transferred for each interrupt.

The default block size after power up, or hard reset is 0, and Read Multiple and Write Multiple commands are disabled.

If an invalid block size is specified, an Abort error will be returned to the host, and Read Multiple and Write Multiple commands will be disabled.

Output Parameters To The Device

Sector Count.

The block size to be used for Read Multiple and Write Multiple commands. Valid block sizes can be selected from 0, 2, 4, 8 or 16. If 0 is specified, then Read Multiple and Write Multiple commands are disabled.

12.30 Sleep (E6h/99h)

Output	Registers				
7 6 5	4 3 2 1 0				
1 - 1	D				
1 1 1	0 0 1 1 0				
	7 6 5 1 - 1				

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register								
7 CRC 0	6 UNC 0	5 0 0	4 IDN 0	3 0 0	2 ABT V	1 T 0 N 0	0 AMN 0	

	Status Register							
7	6	5	4	3	2	1	0	
BSY	RDY	DF	DSC	DRQ	COR	IDX	ERR	
0	V	0	V	—	0	—	V	

Figure 111. Sleep Command (E6h/99h)

This command is the only way to cause the device to enter Sleep Mode.

When this command is issued, the device confirms the completion of the cached write commands before it asserts INTRQ. Then the device is spun down, and the interface becomes inactive. The only way to recover from Sleep Mode is with a software reset or a hardware reset.

The use of hardware reset to recover from Sleep Mode may be incompatible with continued operation of the host system.

If the device is already spun down, the spin down sequence is not executed.

12.31 S.M.A.R.T. Function Set (B0h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature	V V V	V V V V V
Sector Count	V V V	V V V V V
Sector Number		
Cylinder Low	0 1 0	0 1 1 1 1
Cylinder High	1 1 0	0 0 0 1 0
Device/Head	1 - 1	D
Command	1 0 1	1 0 0 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register							
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN
0	0	0	0	0	V	0	0

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	V] –	0	-	V

Figure 112. S.M.A.R.T. Function Set Command (B0h)

The S.M.A.R.T. Function Set command provides access to Attribute Values, Attribute Thresholds and other low level subcommands that can be used for logging and reporting purposes and to accommodate special user needs. The S.M.A.R.T. Function Set command has several separate subcommands which are selectable via the device's Features Register when the S.M.A.R.T. Function Set command is issued by the host.

In order to select a subcommand the host must write the subcommand code to the device's Features Register before issuing the S.M.A.R.T. Function Set command. The subcommands and their respective codes are listed below.

Code	Subcommand
D0h	SMART Read Attribute Values
D1h	SMART Read Attribute Thresholds
D2h	SMART Enable/disable Attribute Autosave
D3h	SMART Save Attribute Values
D4h	SMART Execute Off-line Immediate
D5h	SMART Read Log Sector
D6h	SMART Write Log Sector

D8h **SMART** Enable Operations

D9h **SMART** Disable Operations

DAh **SMART Return Status**

DRh SMART Enable/Disable Automatic Off-Line

12.31.1.1 SMART Read Attribute Values (Subcommand D0h)

This subcommand returns the device's Attribute Values to the host. Upon receipt of the SMART Read Attribute Values subcommand from the host, the device asserts BSY, saves any updated Attribute Values to the Attribute Data sectors, asserts DRQ, clears BSY, asserts INTRQ, and then waits for the host to transfer the 512 bytes of Attribute Value information from the device via the Data Register.

12.31.1.2 SMART Read Attribute Thresholds (Subcommand D1h)

This subcommand returns the device's Attribute Thresholds to the host. Upon receipt of the SMART Read Attribute Thresholds subcommand from the host, the device asserts BSY, reads the Attribute Thresholds from the Attribute Threshold sectors, asserts DRQ, clears BSY, asserts INTRQ, and then waits for the host to transfer the 512 bytes of Attribute Thresholds information from the device via the Data Register.

12.31.1.3 SMART Enable/Disable Attribute Autosave (Subcommand D2h)

This subcommand enables and disables the attribute autosave feature of the device. The SMART Enable/Disable Attribute Autosave subcommand allows the device to automatically save its updated Attribute Values to the Attribute Data Sector at the timing of the first transition to Active idle mode after 30 minutes since the last saving of Attribute Values; this subcommand causes the autosave feature to be disabled. The state of the Attribute Autosave feature (either enabled or disabled) will be preserved by the device across power cycle.

A value of 00h written by the host into the device's Sector Count Register before issuing the SMART Enable/Disable Attribute Autosave subcommand will cause this feature to be disabled. Disabling this feature does not preclude the device from saving Attribute Values to the Attribute Data sectors during some other normal operation such as during a power-up or power-down.

A value of F1h written by the host into the device's Sector Count Register before issuing the SMART Enable/Disable Attribute Autosave subcommand will cause this feature to be enabled. Any other non-zero value written by the host into this register before issuing the SMART Enable/Disable Attribute Autosave subcommand will not change the current Autosave status but the device will respond with the error code specified in Figure 124 on page 173.

The SMART Disable Operations subcommand disables the autosave feature along with the device's SMART operations.

Upon the receipt of the subcommand from the host, the device asserts BSY, enables or disables the Autosave feature, clears BSY and asserts INTRO.

12.31.1.4 SMART Save Attribute Values (Subcommand D3h)

This subcommand causes the device to immediately save any updated Attribute Values to the device's Attribute Data sector regardless of the state of the Attribute Autosave feature. Upon receipt of the SMART Save Attribute Values subcommand from the host, the device asserts BSY, writes any updated Attribute Values to the Attribute Data sector, clears BSY and asserts INTRQ.

12.31.1.5 SMART Execute Off-line Immediate (Subcommand D4h)

This subcommand causes the device to immediately initiate the set of activities that collect Attribute data in an off-line mode (off-line routine) or execute a self-test routine in either captive or off-line mode.

The Sector Number register shall be set to specify the operation to be executed.

Sector Number	Operation to be executed
0	Execute SMART off-line data collection routine immediately
1	Execute SMART Short self-test routine immediately in off-line mode
2	Execute SMART Extended self-test routine immediately in off-line mode
127	Abort off-line mode self-test routine
129	Execute SMART Short self-test routine immediately in captive mode
130	Execute SMART Extended self-test routine immediately in captive mode

12.31.1.5.1 Off-line mode: The device executes command completion before executing the specified routine. During execution of the routine the device will not set BSY nor clear DRDY. If the device is in the process of performing its routine and is interrupted by a new command from the host, the device will abort or suspend its routine and service the host within two seconds after receipt of the new command. After servicing the interrupting command, the device will resume its routine automatically or not start its routine depending on the interrupting command.

12.31.1.5.2 Captive mode: When executing self-test in captive mode, the device sets BSY to one and executes the specified self-test routine after receipt of the command. At the end of the routine, the device sets the execution result in the Self-test execution status byte (Figure 114 on page 161) and ATA registers as below and executes command completion.

Status	Set ERR to one when self-test has failed
Error	Set ABRT to one when self-test has failed
Cyl Low	Set to F4h when self-test has failed
Cvl High	Set to 2Ch when self-test has failed

12.31.1.6 SMART Read Log Sector (Subcommand D5h)

This command returns the specified log sector contents to the host.

The 512 bytes data are returned at a command and the Sector Count value shall be set to one. The Sector Number shall be set to specify the log sector address.

Log sector address	Content	Type
01h	SMART Error Log	Read Only
06h	SMART Self—test Log	Read Only
80h—9Fh	Host vendor specific	Read/Write

Figure 113. Log sector addresses

12.31.1.7 SMART Write Log Sector (Subcommand D6h)

This command writes 512 bytes data to the specified log sector.

The 512 bytes data are transferred at a command and the Sector Count value shall be set to one. The Sector Number shall be set to specify the log sector address (Figure 113). If Read Only log sector is specified, the device returns ABRT error.

12.31.1.8 SMART Enable Operations (Subcommand D8h)

This subcommand enables access to all S.M.A.R.T. capabilities within the device. Prior to receipt of a SMART Enable Operations subcommand, Attribute Values are neither monitored nor saved by the device. The state of S.M.A.R.T. (either enabled or disabled) will be preserved by the device across power cycles. Once enabled, the receipt of subsequent SMART Enable Operations subcommands will not affect any of the Attribute Values.

Upon receipt of the SMART Enable Operations subcommand from the host, the device asserts BSY, enables S.M.A.R.T. capabilities and functions, clears BSY and asserts INTRQ.

12.31.1.9 SMART Disable Operations (Subcommand D9h)

This subcommand disables all S.M.A.R.T.capabilities within the device including the device's attribute autosave feature. After receipt of this subcommand the device disables all S.M.A.R.T. operations. Non self-preserved Attribute Values will no longer be monitored. The state of S.M.A.R.T. (either enabled or disabled) is preserved by the device across power cycles. Note that this subcommand does not preclude the device's power mode attribute autosaving.

Upon receipt of the SMART Disable Operations subcommand from the host, the device asserts BSY, disables S.M.A.R.T. capabilities and functions, clears BSY and asserts INTRQ.

After receipt of the device of the SMART Disable Operations subcommand from the host, all other S.M.A.R.T. subcommands -- with the exception of SMART Enable Operations -- are disabled, and invalid and will be aborted by the device (including the SMART Disable Operations subcommand), returning the error code as specified in Figure 124 on page 173.

Any Attribute Values accumulated and saved to volatile memory prior to receipt of the SMART Disable Operations command will be preserved in the device's Attribute Data Sectors. If the device is re-enabled, these Attribute Values will be updated, as needed, upon receipt of a SMART Read Attribute Values or SMART Save Attribute Values command.

12.31.1.10 SMART Return Status (Subcommand DAh)

This command is used to communicate the reliability status of the device to the host's request. Upon receipt of the SMART Return Status subcommand the device asserts BSY, saves any updated Attribute Values to the reserved sector and compares the updated Attribute Values to the Attribute Thresholds.

If the device does not detect a Threshold Exceeded Condition, or detects a Threshold Exceeded Condition but involving attributes are advisory, the device loads 4Fh into the Cylinder Low register, C2h into the Cylinder High register, clears BSY, and asserts INTRQ.

If the device detects a Threshold Exceeded Condition for prefailure attributes, the device loads F4h into the Cylinder Low register, 2Ch into the Cylinder High register, clears BSY, and asserts INTRQ. Advisory attributes never result in negative reliability condition.

12.31.1.11 SMART Enable/Disable Automatic Off-Line (Subcommand DBh)

This subcommand enables and disables the optional feature that cause the device to perform the set of offline data collection activities that automatically collect attribute data in an off-line mode and then save this data to the device's non-volatile memory. This subcommand may either cause the device to automatically initiate or resume performance of its off-line data collection activities or cause the automatic off-line data collection feature to be disabled.

A value of zero written by the host into the device's Sector Count register before issuing this subcommand shall cause the feature to be disabled. Disabling this feature does not preclude the device from saving attribute values to non-volatile memory during some other normal operation such as during a power-on or power-off sequence or during an error recovery sequence.

A value of F8h written by the host into the device's Sector Count register before issuing this subcommand shall cause this feature to be enabled. Any other non-zero value written by the host into this register before issuing this subcommand is vender specific and will not change the current Automatic Off-Line Data Collection status, but device may respond with the error code specified in Figure 124 on page 173.

12.31.2 Device Attributes Data Structure

The following defines the 512 bytes that make up the Attribute Value information. This data structure is accessed by the host in its entirety using the SMART Read Attribute Values subcommand. All multi-byte fields shown in these data structures follow the ATA-3 specification for byte ordering, namely that the least significant byte occupies the lowest numbered byte address location in the field.

Description	Bytes	Offset	Format	Value
Data Structure Revision Number	2	00h	binary	0010h
1st Device Attribute	12	02h	(*1)	(*2)
30th Device Attribute	12	15Eh	(*1)	(*2)
Off-line data collection status	1	16Ah	(*1)	(*2)
Self-test execution status	1	16Bh	(*1)	(*2)
Total time in seconds to complete off-line data collection activity	2	16Ch	(*1)	(*2)
Current segment pointer	1	16Eh	(*1)	(*2)
Off-line data collection capability	1	16Fh	(*1)	1Bh
S.M.A.R.T. capability	2	170h	(*1)	0003h
S.M.A.R.T. device error logging capability	1	172h	(*1)	01h
Self-test failure check point	1	173h	(*1)	(*2)
Short self-test completion time in minutes	1	174h	(*1)	(*2)
Extended self-test completion time in minutes	1	175h	(*1)	(*2)
Reserved	12	176h		(* 3)
Vendor specific	125	182h		(* 3)
Data structure checksum	1	1FFh	(*1)	(*2)
	512			

- (*1) See following definitions
- (*2) Value varied by actual operating condition (*3) Filled with 00h

Figure 114. Device Attribute Data Structure

12.31.2.1 Data Structure Revision Number

The Data Structure Revision Number identifies which version of this data structure is implemented by the device. This revision number will be set to 0005h. This revision number identifies both the Attribute Value and Attribute Threshold Data structures.

12.31.2.2 Individual Attribute Data Structure

The following defines the 12 bytes that make up the information for each Attribute entry in the Device Attribute Data Structure.

Description	Bytes	Offset	Format		
Attribute ID Number (01h to FFh)	1	00h	binary		
Status Flags	2	01h	bit flags		
Bit 0 Pre-Failure/Advisory					
Bit 1 On-line Collection					
Bit 2-5 Reserved (may either 0 or 1)					
Bit 6-15 Reserved (all 0)					
Attribute Value (valid values from 01h to FEh)	1	03h	binary		
00h invalid for attribute value — not to be used					
01h minimum value					
64h initial value for all attributes prior to any data collection					
FDh maximum value					
FEh value is not valid					
FFh invalid for attribute value — not to be used					
Reserved (may not be 0)	1	04h	binary		
Reserved (may not be 0)	6	05h	binary		
Reserved (00h)	1	0 B h	binary		
Total Bytes	12				

Figure 115. Individual Attribute Data Structure

12.31.2.2.1 Attribute ID Numbers: Any non-zero value in the Attribute ID Number indicates an active attribute. The device supports following Attribute ID Numbers. Those marked with (*) indicate that corresponding Attribute Values can be either collected on-line or off-line.

ID **Attribute Name**

- 0 Indicates that this entry in the data structure is not used
- 1 Raw Read Error Rate (*)

Throughput Performance (*) 2 Spin Up Time 3 Start/Stop Count 4 5 Reallocated Sector Count Seek Error Rate 7 8 Seek Time Performance (*) 9 Power-On Hours Count Spin Retry Count 10 **12** Device Power Cycle Count 196 Reallocation Event Count 197 **Current Pending Sector Count** 198 Off-Line Scan Uncorrectable Sector Count 199 Ultra DMA CRC Error Count

12.31.2.2.2 Status Flag Definitions

Bit	Flag Name	Definition
0	Pre—Failure/ Advisory bit	If bit = 0, an Attribute Value less than or equal to its corresponding Attribute Threshold indicates an Advisory condition where the usage or age of the device has exceeded its intended design life period. If bit = 1, an Attribute Value less than or equal to its corresponding Attribute Threshold indicates a Pre—Failure condition where imminent loss of data is being predicted.
1	On-Line Collective bit	If bit = 0, the Attribute Value is updated only during Off—Line testing. If bit = 1, the Attribute Value is updated during On—Line testing or during both On—Line and Off—Line testing.
2-5	Reserved bits	may either 0 or 1
6-15	Reserved bits	Always 0

Figure 116. Status Flag Definitions

12.31.2.2.3 Normalized Values: The device will perform conversion of the raw Attribute Values to transform them into normalized values, which the host can then compare with the Threshold values. A Threshold is the excursion limit for a normalized Attribute Value. In normalizing the raw data, the device will perform any necessary statistical validity checks to ensure that an instantaneous raw value is not improperly reflected in the normalized Attribute Value (i.e., one read error in the first 10 reads being interpreted as exceeding the read error rate threshold when the subsequent 1 billion reads all execute without error). The end points for the normalized values for all Attributes will be 1 (01h) at the low end, and 100 (64h) at the high end for the device. For Performance and Error Rate Attributes, values greater than 100 are also possible, up to a maximum value of 253 (FDh).

12.31.2.3 Off-Line Data Collection Status

The value of this byte defines the current status of the off-line activities of the device. Bit 7 indicates Automatic Off-Line Data Collection Status.

Bit 7	Automatic Off-Line Data Collection Status
0	Automatic Off-Line Data Collection is disabled.
1	Automatic Off-Line Data Collection is enabled.

Bits 0 thru 6 represents a hexadecimal status value reported by the device.

vaiue	Definition
0	Off-line data collection never started

- All segments completed without errors. In this case, current segment pointer equals to total segments required.
- 4 Off-line data collection suspended by interrupting command
- 5 Off-line data collecting aborted by interrupting command
- 6 Off-line data collection aborted with fatal error

12.31.2.4 Self-test execution status

Bit Definition

0-3 Percent Self-test remaining

An approximation of the percent of the self-test routine remaining until completion in ten percent increments. Valid values are 0 through 9.

- **4-7** Current Self-test execution status
 - **0** The self-test routine completed without error or has never been run
 - 1 The self-test routine aborted by the host
 - 2 The self-test routine interrupted by the host with a hard or soft reset
 - 3 The device was unable to complete the self-test routine due to a fatal error or unknown test error
 - 4 The self-test routine completed with unknown element failure
 - 5 The self-test routine completed with electrical element failure
 - 6 The self-test routine completed with servo element failure
 - 7 The self-test routine completed with read element failure
 - 15 The self-test routine in progress

12.31.2.5 Total Time in Seconds to Complete Off-line Data Collection Activity

This field tells the host how many seconds the device requires to complete the off-line data collection activity.

12.31.2.6 Current Segment Pointer

This byte is a counter indicating the next segment to execute as an off-line data collection activity. Because the number of segments is 1, 01h is always returned in this field.

12.31.2.7 Off-Line Data Collection Capability

Bit **Definition** 0 Execute Off-line Immediate implemented bit 0 SMART Execute Off-line Immediate subcommand is not implemented SMART Execute Off-line Immediate subcommand is implemented Enable/disable Automatic Off-line implemented bit 1 SMART Enable/disable Automatic Off-line subcommand is not implemented SMART Enable/disable Automatic Off-line subcommand is implemented abort/restart off-line by host bit 2 The device will suspend off-line data collection activity after an interrupting command and resume it after some vendor specific event 1 The device will abort off-line data collection activity upon receipt of a new command

- 3 Off-line Read Scanning implemented bit
 - The device does not support Off-line Read Scanning
 - 1 The device supports Off-line Read Scanning
- 4 Self-test implemented bit
 - **0** Self-test routine is not implemented
 - 1 Self-test routine is implemented
- **5-7** Reserved (0)

12.31.2.8 SMART Capability

This word of bit flags describes the S.M.A.R.T. capabilities of the device. The device will return 03h indicating that the device will save its Attribute Values prior to going into a power saving mode and supports the SMART ENABLE/DISABLE ATTRIBUTE AUTOSAVE command.

Bit Definition

0 Pre-power mode attribute saving capability

If bit = 1, the device will save its Attribute Values prior to going into a power saving mode (Standby or Sleep mode).

1 Attribute autosave capability

If bit = 1, the device supports the SMART ENABLE/DISABLE ATTRIBUTE AUTOSAVE command.

2-15 Reserved (0)

12.31.2.9 Error Logging Capability

Bit Definition 7-1 Reserved (0)

0 Error Logging support bit

If bit = 1, the device supports the Error Logging

12.31.2.10 Self-test failure check point

This byte indicates the section of self-test where the device detected a failure.

12.31.2.11 Self-test completion time

These bytes are the minimum time in minutes to complete self-test.

12.31.2.12 Data Structure Checksum

The Data Structure Checksum is the 2's compliment of the result of a simple 8-bit addition of the first 511 bytes in the data structure.

12.31.3 Device Attribute Thresholds Data Structure

The following defines the 512 bytes that make up the Attribute Threshold information. This data structure is accessed by the host in its entirety using the SMART Read Attribute Thresholds. All multi-byte fields shown in these data structures follow the ATA-3 specification for byte ordering, namely that the least significant byte occupies the lowest numbered byte address location in the field.

The sequence of active Attribute Thresholds will appear in the same order as their corresponding Attribute Values.

Description	Bytes	Offset	Format	Value
Data Structure Revision Number	2	00h	binary	0010h
1st Attribute Threshold	12	02h	(*1)	(*2)
30th Attribute Threshold	12	15Eh	(*1)	(*2)
Reserved	18	16Ah		(* 3)
Vendor specific	131	17Ch		(*3)
Data structure checksum	1	1FFh		(*2)
	512			

```
(*1) - See following definitions
```

Figure 117. Device Attribute Thresholds Data Structure

12.31.3.1 Data Structure Revision Number

This value is the same as the value used in the Device Attributes Values Data Structure.

12.31.3.2 Individual Thresholds Data Structure

The following defines the 12 bytes that make up the information for each Threshold entry in the Device Attribute Thresholds Data Structure. Attribute entries in the Individual Threshold Data Structure is in the same order and correspond to the entries in the Individual Attribute Data Structure.

^(*2) — Value varied by actual operating condition (*3) — Filled with 00h

Description	Bytes	Offset	Format
Attribute ID Number (01h to FFh)	1	00h	binary
Attribute Threshold (for comparison with Attribute Values from 00h to FFh)	1	01h	binary
00h — "always passing" threshold value to be used for code test purposes			
01h — minimum value for normal operation			
FDh — maximum value for normal operation			
FEh — invalid for threshold value			
FFh — "always failing" threshold value to be used for code test purposes			
Reserved (00h)	10	02h	binary
Total Bytes	12		

Figure 118. Individual Threshold Data Structure

12.31.3.3 Attribute ID Numbers

Attribute ID Numbers supported by the device are the same as Attribute Values Data Structures.

12.31.3.4 Attribute Threshold

These values are preset at the factory and are not meant to be changeable. However, the host might use "SMART Write Attribute Threshold" subcommand to override these preset values in the Threshold sectors.

12.31.3.5 Data Structure Checksum

The Data Structure Checksum is the 2's compliment of the result of a simple 8-bit addition of the first 511 bytes in the data structure.

12.31.4 SMART error log sector

The following defines the 512 bytes that make up the SMART error log sector. All multi-byte fields shown in these data structures follow the ATA/ATAPI-4 specifications for byte ordering.

Description	Bytes	Offset
SMART error log version	1	00h
Error log pointer	1	01h
1st error log data structure	9 0	02h
2nd error log data structure	9 0	5Ch
3rd error log data structure	9 0	B6h
4th error log data structure	9 0	110h
5th error log data structure	9 0	16Ah
Device error count	2	1C4h
Reserved	5 7	1C6h
Data structure checksum	1	1FFh
	512	

Figure 119. SMART error log sector

12.31.4.1 SMART error log version

This value is set to 01h.

12.31.4.2 Error log pointer

This points the most recent error log data structure. Only values 1 through 5 are valid.

12.31.4.3 Device error count

This field contains the total number of errors. The value will not roll over.

12.31.4.4 Error log data structure

Data format of each error log structure is shown below.

Description	Bytes	Offset
1st command data structure	12	00h
2nd command data structure	12	0 C h
3rd command data structure	12	18h
4th command data structure	12	24h
5th command data structure	12	30h
Error data structure	3 0	3Ch
	90	

Figure 120. Error log data structure

12.31.4.4.1 Command data structure: Data format of each command data structure is shown below.

Description	Bytes	Offset
Device Control register	1	00h
Features register	1	01h
Sector count register	1	02h
Sector number register	1	03h
Cylinder Low register	1	04h
Cylinder High register	1	05h
Device/Head register	1	06h
Command register	1	07h
Timestamp(miliseconds from Power On)	4	08h
	12	

Figure 121. Command data structure

12.31.4.4.2 Error data structure: Data format of error data structure is shown below.

Description	Bytes	Offset
Reserved	1	00h
Error register	1	01h
Sector count register	1	02h
Sector number register	1	03h
Cylinder Low register	1	04h
Cylinder High register	1	05h
Device/Head register	1	06h
Status register	1	07h
Extended error data(vendor specific)	19	08h
State	1	1Bh
Life timestamp (hours)	2	1Ch
	3 0	

Figure 122. Error data structure

State field contains a value indicating the device state when command was issued to the device.

Value	State
x0h	Unknown
x1h	Sleep
x2h	Standby
x3h	Active/Idle
x4h	SMART Off-line or Self-test
x5h-xAh	Reserved
xBh-xFh	Vendor specific

Note: The value of x is vendor specific.

12.31.5 Self-test log data structure

The following defines the 512 bytes that make up the Self-test log sector. All multi-byte fields shown in these data structures follow the ATA/ATAPI-4 specifications for byte ordering.

Description	Bytes	Offset
Data structure revision	2	00h
Self-test number	1	n*18h+02h
Self-test execution status	1	n*18h+03h
Life time power on hours	2	n * 18h + 04h
Self-test failure check point	1	n*18h+06h
LBA of first failure	4	n*18h+07h
Vendor specific	15	n*18h+0Bh
Vendor specific	2	1FAh
Self-test log pointer	1	1FCh
Reserved	2	1FDh
Data structure checksum	1	1FFh
	512	

Note: n is 0 through 20

Figure 123. Self-test log data structure

The data structure contains the descriptor of Self-test that the device has performed. Each descriptor is 24 bytes long and the self-test data structure is capable to contain up to 21 descriptors.

After 21 descriptors has been recorded, the oldest descriptor will be overwritten with new descriptor.

Self-test log pointer points the most recent descriptor. When there is no descriptor the value is 0. When there is descriptor(s) the value is 1 through 21.

12.31.6 Error Reporting

The following table shows the values returned in the Status and Error Registers when specific error conditions are encountered by a device.

Error Condition	Status Register	Error Register
A S.M.A.R.T. FUNCTION SET command was received by the device without the required key being loaded into the Cylinder High and Cylinder Low registers.	51h	04h
A S.M.A.R.T. FUNCTION SET command was received by the device with a subcommand value in the Features Register that is either invalid or not supported by this device.	51h	04h
A S.M.A.R.T. FUNCTION SET command subcommand other than SMART ENABLE OPERATIONS was received by the device while the device was in a "S.M.A.R.T. disabled" state.	51h	04h
The device is unable to read its Attribute Values or Attribute Thresholds data structure.	51h	10h or 40h
The device is unable to write to its Attribute Values data structure.	51h	10h or 01h

Figure 124. S.M.A.R.T. Error Codes

12.32 Standby (E2h/96h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count	V V V	V V V V
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 0 0 1 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register								
7 6 5 4 3 2 1 0 CRC UNC 0 IDN 0 ABT TON AMN							0 AMN		
()	0	0	0	0	V	0	0	

	Status Register								
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR	
	0 V 0 V - 0 - V								

Figure 125. Standby Command (E2h/96h)

The Standby command causes the device to enter the Standby Mode immediately, and set auto power down timeout parameter(standby timer).

When this command is issued, the device confirms the completion of the cached write commands before it asserts INTRQ. Then the device is spun down, but the interface remains active.

If the device is already spun down, the spin down sequence is not executed.

During the Standby mode the device will respond to commands, but there is a delay while waiting for the spindle to reach operating speed.

The timer starts counting down when the device returns to Idle mode.

Output Parameters To The Device

Sector Count

Timeout Parameter. If zero, the timeout interval(Standby Timer) is NOT disabled, but the timeout interval is set to 109 minutes automatically. If other than zero, the timeout interval is set for (Timeout Parameter \times 5) seconds.

When the automatic power down sequence is enabled,

The device will enter Standby mode automatically if the timeout interval expires with no device access from the host. The timeout interval will be reinitialized if there is a device access before the timeout interval expires.

12.33 Standby Immediate (E0h/94h)

Command Block	Output Registers
Register	7 6 5 4 3 2 1 0
Data	
Feature	
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	1 - 1 D
Command	1 1 1 0 0 0 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

Error Register								
7 CRC	6 UNC	5	4 IDN	3	2 ABT	1 T0N	0 AMN	
0	0	0	0	0	V	0	0	

	Status Register							
	7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
	0	V	0	V] –	0] V

Figure 126. Standby Immediate Command (E0h/94h)

The Standby Immediate command causes the device to enter Standby mode immediately.

When this command is issued, the device confirms the completion of the cached write commands before asserts INTRQ. Then the device is spun down, but the interface remains active.

If the device is already spun down, the spin down sequence is not executed.

During the Standby mode, the device will respond to commands, but there is a delay while waiting for the spindle to reach operating speed.

The Standby Immediate command will not affect the auto power down timeout parameter.

12.34 Write Buffer (E8h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count		
Sector Number		
Cylinder Low		
Cylinder High		
Device/Head	1 - 1	D
Command	1 1 1	0 1 0 0 0

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	
Sector Number	
Cylinder Low	
Cylinder High	
Device/Head	
Status	See Below

	Error Register										
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN				
0	0	0	0	0	V	0	0				

Status Register										
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR			
0	V	0	-] –	0] –	V			

Figure 127. Write Buffer Command (E8h)

The Write Buffer command transfers a sector of data from the host to the sector buffer of the device. The sectors of data are transferred through the Data Register 16 bits at a time.

The Read Buffer and Write Buffer commands are synchronized such that sequential Write Buffer and Read Buffer commands access the same 512 byte within the buffer.

12.35 Write DMA (CAh/CBh)

Command Block	Out	Įρι	ıt	Re	eg:	ist	cei	î S
Register	7	6	5	4	3	2	1	0
Data	_	_	_	_	_	_	_	_
Feature	_	-	_	_	_	_	-	_
Sector Count	V	V	V	V	V	V	V	V
Sector Number	V	V	V	V	V	V	V	V
Cylinder Low	V	V	V	V	V	V	V	V
Cylinder High	V	V	V	V	V	V	V	V
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	1	1	0	0	1	0	1	R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	v v v v v v v
Sector Number	v v v v v v v
Cylinder Low	v v v v v v v
Cylinder High	v v v v v v v
Device/Head	_ — — — н н н н
Status	See Below

Error Register										
7 CRC	6 UNC	5 0	4 IDN	3 0	2 ABT	1 T0N	0 AMN			
V	0	0	V	0	V	0	0			

Status Register									
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR		
0	V	V	V	-	0] –	V		

Figure 128. Write DMA Command (CAh/CBh)

The Write DMA command transfers one or more sectors of data from the host to the device, then the data is written to the disk media.

The sectors of data are transferred through the Data Register 16 bits at a time.

The host initializes a slave-DMA channel prior to issuing the command. Data transfers are qualified by DMARQ and are performed by the slave-DMA channel. The device issues only one interrupt per command to indicate that data transfer has terminated and status is available.

If an uncorrectable error occurs, the write will be terminated at the failing sector.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256

sectors will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

Н The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit. If set to one, then retries are disabled. When write cache is enabled,

They are ignored. (Ignoring the retry bit is in violation of ATA-3.)

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unre-

coverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

Η The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.36 Write Long (32h/33h)

Command Block	Out	ŗρι	ıt	Re	e g :	ist	eı	î S
Register	7	6	5	4	3	2	1	0
Data	-	_	_	_	_	_	_	_
Feature		_	_	_	_	_	-	_
Sector Count	0	0	0	0	0	0	0	1
Sector Number	V	V	V	V	V	V	V	V
Cylinder Low	V	V	V	V	V	V	V	V
Cylinder High	V	V	V	V	V	V	V	V
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	0	0	1	1	0	0	1	R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count)v
Sector Number)
Cylinder Low)
Cylinder High)
Device/Head) — — — н н н н
Status	See Below

Error Register									
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN		
0	0	0	V	0	V	0	0		

Status Register										
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR			
0	V	V] V		0		V			

Figure 129. Write Long Command (32h/33h)

The Write Long command transfers the data and the ECC bytes of the designated one sector from the host to the device, then the data and the ECC bytes are written to the disk media.

After 512 bytes of data have been transferred, the device will keep setting DRQ=1 to indicate that the device is ready to receive the ECC bytes from the host. The data is transferred 16 bits at a time, and the ECC bytes are transferred 8 bits at a time. The number of ECC bytes are 4 or 34 according to setting of Set Feature option. The default number after power on is 4 bytes.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. The Sector Count must be set

to one.

Sector Number The sector number of the sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit. If set to one, then retries are disabled.

Input Parameters From The Device

Sector Count The number of requested sectors not transferred.

Sector Number The sector number of the sector to be transferred. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the sector to be transferred. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

H The head number of the sector to be transferred. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

The file internally uses 34 bytes of ECC on all data read or writes. The 4 byte mode of operation is provided via an emulation technique. As a consequence of this emulation it is recommended that 34 byte ECC mode is used for all tests to confirm the operation of the files ECC hardware. Unexpected results may occur if such testing is performed using 4 byte mode.

12.37 Write Multiple (C5h)

Command Block	Out	pu	ıt	Re	e g :	ist	eı	î S
Register	7	6	5	4	3	2	1	0
Data	_	_	_	_	_	_	_	_
Feature	_	_	_	_	_	-	-	_
Sector Count	V	V	V	V	V	V	V	V
Sector Number	V	V	V	V	V	V	V	V
Cylinder Low	V	V	V	V	V	V	V	V
Cylinder High	V	V	V	V	V	V	V	V
Device/Head	1	L	1	D	Н	Н	Н	Н
Command	1	1	0	0	0	1	0	1

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count	v v v v v v v
Sector Number	v v v v v v v
Cylinder Low	v v v v v v v
Cylinder High	v v v v v v v
Device/Head	_ — — — н н н н
Status	See Below

Error Register								
7 CRC	6 UNC	5 0	4 IDN	3	2 ABT	1 T0N	0 AMN	
0	0	0	V	0	V	0	0	

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	V] V		0		V

Figure 130. Write Multiple Command (C5h)

The Write Multiple command transfers one or more sectors from the host to the device, then the data is written to the disk media.

Command execution is identical to the Write Sectors command except that an interrupt is generated for each block (as defined by the Set Multiple command) instead of for each sector. The sectors are transferred through the Data Register 16 bits at a time.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256

sectors will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unre-

coverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

H The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.38 Write Sectors (30h/31h)

Command Block	Output	Registers
Register	7 6 5	4 3 2 1 0
Data		
Feature		
Sector Count	V V V	V V V V
Sector Number	V V V	V V V V
Cylinder Low	V V V	V V V V
Cylinder High	V V V	V V V V
Device/Head	1 L 1	р н н н н
Command	0 0 1	1 0 0 0 R

Command Block	Input Registers
Register	7 6 5 4 3 2 1 0
Data	
Error	See Below
Sector Count)
Sector Number)
Cylinder Low) v v v v v v v
Cylinder High)
Device/Head) — — — н н н н
Status	See Below

Error Register							
7 CRC	6 UNC	5	4 IDN	3 0	2 ABT	1 T0N	0 AMN
0	0	0	V	0	V	0	0

Status Register							
7 BSY	6 RDY	5 DF	4 DSC	3 DRQ	2 COR	1 IDX	0 ERR
0	V	V	V	-	0] –	V

Figure 131. Write Sectors Command (30h/31h)

The Write Sectors command transfers one or more sectors from the host to the device, then the data is written to the disk media.

The sectors are transferred through the Data Register 16 bits at a time.

If an uncorrectable error occurs, the write will be terminated at the failing sector, when the auto reassign function is disable.

Output Parameters To The Device

Sector Count The number of continuous sectors to be transferred. If zero is specified, then 256

sectors will be transferred.

Sector Number The sector number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 8 - 15 (Low), 16 - 23 (High). (L=1)

H The head number of the first sector to be transferred. (L=0)

In LBA mode, this register contains LBA bits 24 - 27. (L=1)

R The retry bit. If set to one, then retries are disabled. But ignored, when write cache is

enabled. (Ignoring the retry bit is in violation of ATA-3.)

Input Parameters From The Device

Sector Count The number of requested sectors not transferred. This will be zero, unless an unre-

coverable error occurs.

Sector Number The sector number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 0 - 7. (L=1)

Cylinder High/Low The cylinder number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 8 - 15 (Low), 16 - 23 (High).

(L=1)

H The head number of the last transferred sector. (L=0)

In LBA mode, this register contains current LBA bits 24 - 27. (L=1)

12.39 Write Verify (3Ch: Vendor Specific)

In DARA-2xxxxx implementation, Write Verify command is exactry same as Write Sectors command(30h). No read verification is performed after write operation.

Refer to Write Sectors Command for parameters.

13.0 Timeout Values

The timing of BSY and DRQ in Status Register are shown in Figure 132

FUNCTION	INTERVAL	START	STOP	TIMEOUT
Power On	Device Busy After Power On	Power On	Status Register BSY=1	400 ns
	Device Ready After Power On	Power On	Status Register BSY=0 and RDY=1	31 sec
Software Reset	Device Busy After Software Reset	Device Control Register RST=1	Status Register BSY=1	400 ns
	Device Ready After Software Reset	Device Control Register RST=0 after RST=1	Status Register BSY=0 and RDY=1	31 sec
Hard Reset	Device Busy After Hard Reset	Bus RESET Signal Asserted	Status Register BSY=1	400 ns
	Device Ready After Hard Reset	Bus RESET Signal Asserted	Status Register BSY=0 and RDY=1	31 sec
Data In Command	Device Busy After Command Code Out	OUT to Command Register	Status Register BSY=1	400 ns
	Interrupt, DRQ For Data Transfer In	Status Register BSY=1	Status Register BSY=0 and DRQ=1, Interrupt	30 sec
	Device Busy After Data Transfer In	256th Read From Data Register	Status Register BSY=1	10 us
Data Out Command	Device Busy After Command Code Out	OUT to Command Register	Status Register BSY=1	400 ns
	Data Request For Data Transfer Out	Status Register BSY=1	Status Register BSY=0 and DRQ=1	700 us (Note.3)
	Device Busy After Data Transfer Out	256th Write From Data Register	Status Register BSY=1	5 us
	Interrupt For Data Transfer Out	Status Register BSY=1	Status Register BSY=0 and RDY=1 Interrupt	30 sec (Note.1)
Non-Data Command	Device Busy After Command Code Out	OUT to Command Register	Status Register BSY=1	400 ns
	Interrupt For Command Complete	Status Register BSY=1	Interrupt	30 sec (Note.2)

Figure 132. Timeout Values

© Copyright IBM Corp. 1999

FUNCTION	INTERVAL	START	STOP	TIMEOUT
DMA Data Transfer Command	Device Busy after Command Code Out	Out to Command Register	Status Register BSY=1	400 ns

Figure 133. Timeout Values --- Continued ---

Command category is referred to 11.0, "Command Protocol" on page 97.

The abbreviations "ns", "us", "ms" and "sec" mean nanoseconds, microseconds, milliseconds and seconds, respectively.

We recommend that the host system executes Soft reset and then retry to issue the command if the host system timeout would occur for the device.

- For SECURITY ERASE UNIT command, the execution time is referred to 12.22, "Security (Note.1) Erase Unit (F4h)" on page 142.
- For FORMAT UNIT command, the execution time is referred to 12.6, "Format Unit (F7h: (Note.2) Vendor Specific)" on page 113.
- When the initial power mode at power on is Standby mode, and when the following commands (Note.3) are issued by the host as First Command, the command's timeout value of the field is 10 seconds.

Security Disable Password, Security Erase Unit,

Security Set Password, Security Unlock.

14.0 Appendix

14.1 Commands Support Coverage

Following table is provided to facilitate the understanding of DARA-2xxxxx command support coverage comparing to the ATA-4 defined command set. The column of 'Implementation' shows the capability of DARA-2xxxxx for those commands.

Command Code	Command Name	Implementation for DARA-2XXXX	ATA-4 Categoly
00h 03h	NOP CFA REQUEST EXTENDED ERROR CODE DEVICE RESET	No No	Optional (7*)
08h 1xh	RECALIBRATE	No Yes	Optional (7*) obsoleted(*)
20h	READ SECTOR(S) (w/ retry)		Mandatory
21h	READ SECTOR(S) (w/o retry)		Mandatory
22h	READ LONG (w/ retry)		obsoleted(*)
23h	READ LONG (w/o retry)		obsoleted(*)
30h	WRITE SECTOR(S) (w/ retry)		Mandatory
31h	WRITE SECTOR(S) (w/o retry)		Mandatory
32h	WRITE LONG (w/ retry)		obsoleted(*)
33h	WRITE LONG (w/o retry)		obsoleted(*)
38h 3Ch	CFA TRANSLATE SECTORS W/O ERASE WRITE VERIFY (2)	No Vendor specific	Optional (7*)
40h	READ VERIFY SECTOR(S) (w/ retry)		Mandatory
41h	READ VERIFY SECTOR(S) (w/ retry)		Mandatory
50h	FORMAT TRACK	Yes	obsoleted(*)
7xh	SEEK	Yes	Mandatory
87h	CFA TRANSLETE SECTOR	No	Vendor specific
90h	EXECUTE DEVICE DIAGNOSTIC	Yes	Mandatory
91h	INITIALIZE DEVICE PARAMETERS	Yes	Mandatory
92h	DOWNLOAD MICROCODE	Reserved	Optional
94h-99h	Reserved	Reserved	Reserved(*)
AOh	PACKET	No	Not to be used
A1h	IDENTIFY PACKET DEVICE	No	Not to be used
A2h	SERVICE	No	Not to be used

Figure 134. Command coverage

© Copyright IBM Corp. 1999

Command Code	Command Name	Implementation for DARA-2XXXX	ATA-4 Categoly
BOh	SMART FUNCTION SET	Yes	Optional - (5)
COh	CFA ERASE SECTORS	No	Vendor specific
C4h	READ MULTIPLE	Yes	Mandatory
C5h	WRITE MULTIPLE	Yes	Mandatory
C6h	SET MULTIPLE MODE	Yes	Mandatory
C7h	READ DMA QUEUED	No	Optional(*)
C8h	READ DMA (w/ retry)	Yes	Mandatory
C9h	READ DMA (w/o retry)	Yes	Mandatory
CAh	WRITE DMA (w/ retry)	Yes	Mandatory
CBh	WRITE DMA (w/o retry)	Yes	Mandatory
CCh	WRITE DMA QUEUED	No	Optional(*)
CDh	CFA WRITE MULTIPLE W/O ERASE	No	Optional - (7)
DAh	GET MEDIA STATUS	No	Optional (7*)
DEh	MEDIA LOCK	No	Optional (7*)
DFh	MEDIA UNLOCK	No	Optional (7*)
E0h	STANDBY IMMEDIATE	Yes	Mandatory
E1h	IDLE IMMEDIATE	Yes	Mandatory
E2h	STANDBY	Yes	Mandatory
E3h	IDLE	Yes	Mandatory
E4h	READ BUFFER	Yes	Optional
E5h	CHECK POWER MODE	Yes	Mandatory
E6h	SLEEP	Yes	Mandatory
E7h	FLUSH CACHE	Yes	Optional(*)
E8h	WRITE BUFFER	Yes	Optional
ECh	IDENTIFY DEVICE	Yes	Mandatory(*)
EDh	MEDIA EJECT	No	Optional (7*)
EEh	IDENTIFY DEVICE DMA	Yes	obsoleted(*)
EFh	SET FEATURES	Yes	Mandatory
F0h	Vendor specific	Reserved	Vendor specific
F1h	SECURITY SET PASSWORD	Yes	Optional (6)
F2h	SECURITY UNLOCK	Yes	Optional (6)
F3h	SECURITY ERASE PREPARE	Yes	Optional (6)
F4h	SECURITY ERASE UNIT	Yes	Optional (6)
F5h	SECURITY FREEZE LOCK	Yes	Optional (6)
F6h	SECURITY DISABLE PASSWORD	Yes	Optional (6)
F7h	FORMAT UNIT	Vendor specific	Vendor specific
F8h	READ NATIVE MAX ADDRESS	Yes	Optional
F9h	SET MAX ADDRESS	Yes	Optional(*)
FAh	ENABLE/DISABLE DELAYED WRITE	Yes	Vendor specific
FBh-FFh	Vendor specific	Reserved	Vendor specific
	Reserved: all remaining codes	Reserved	Reserved

Figure 135. Command coverage --- Continued ---

- Note: (1) These commands have two command codes and appear in this table twice, once for each command code.
 - (2) The WRITE VERIFY command implemented vendor spcific. The opration is same as WRITE SECTORS and verification is not performed.
 - (3) Protected Area Feature Set
 - (4) Power Management Feature Set
 - (5) S.M.A.R.T. Function Set
 - (6) Security Mode Feature Set
 - (7) Removable
 - (*) Indicates that the definition of this command has changed from ATA-3, X3.298-1997.

Figure 136. Command coverage --- Continued ---

14.2 SET FEATURES Command Support Coverage

The following table is provided to facilitate the understanding of DARA-2xxxxx. "Set Features" command support coverage comparing to the ATA-4 defined command set. The column of 'Implementation' shows the capability of DARA-2xxxxx for those commands. For detail operation, refer to 12.27, "Set Features (EFh)" on page 150.

Features Register		Implementation for DARA-2XXXX
02h 03h 05h 09h 44h 55h 5Dh 5Eh 66h 82h 85h 89h 95h	Enable write cache Set transfer mode Enable Advanced Power Management Enable Address Offset mode Set vendor specific bytes ECC Disable read look—ahead feature Enable release interrupt Enable SERVICE interrupt Disable reverting to power on defaults Disable write cache Disable Advanced Power Management Disable Address Offset mode Enable Media Status Notification	Yes Yes Yes Yes Yes Yes You
AAh BBh CCh DDh EEh	Enable read look—ahead feature Set 4 bytes ECC Enable reverting to power on defaults Disable release interrupt	Yes Yes Yes No No Reserved

Figure 137. SET FEATURES Command coverage

Index

ABRT 70 ABT 70 Adaptive Power Management Feature Low Power Idle mode 80 Advanced Power Management (Adaptive Battery Life Extender 3) Feature 80 Advanced Power Management Feature Active Idle mode 80 Performance Idle mode 80 Transition Time 80 AMN 71 AMNF 71 Auto Reassign Function 96 Non recovered read errors 96 Recovered read errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 119 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device DMA (FEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8k/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 147 F Illush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113	Α	Command (continued)
ABT 70 Adaptive Power Management Feature Low Power Idle mode 80 Advanced Power Management (Adaptive Battery Life Extender 3) Feature 80 Advanced Power Management Feature Active Idle mode 80 April Power Management Feature Active Idle mode 80 Performance Idle mode 80 Performance Idle mode 80 Performance Idle mode 80 Proformance Idle (E2h) 115 Policy Ecception Into Science Idle (E2h) 115 Policy Ecception Into Science Idle Idle (E3h) 115 Policy Ecception Into Idle Idle (E3h) 115 Policy Ecception Into Idle Idle (E3h) 115		Seek (7xh) 149
Adaptive Power Management Feature Low Power Idle mode 80 Advanced Power Management Adaptive Battery Life Extender 3) Feature 80 Advanced Power Management Feature Active Idle mode 80 Performance Idle mode 80 Transition Time 80 AMNF 71 Auto Reassign Function 96 Non recovered read errors 96 Non recovered write errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Idlentify Device (ECh) 115 Identify Device (ECh) 115 Identify Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1kh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Unit (F4h) 142 Security Erase Unit (F4h) 145 Set Multiple (C4h) 154 Sleep (B6h/99h) 174 Standby (Ezhef) 154 Sleep (B6h/99h) 174 Standby (Ezhef) 175 Write Buffer (E8h) 175 Write Buffer (E8h) 176 Write DMA (Chh/CBh) 177 Write Duffer (B8h) 177 Write Duffer (E8h) 177 Write Duffer (E8h) 177 Write Duffer (C6h) 174 Write Duffer (E8h) 177 Write Duffer (E8h) 175 Write Duffer (Seth) 177 Write Duffer (E8h) 175 Write Duffer (E8h) 175 Standby (Ezhef) 175 Write Buffer (E8h) 175 Write Duffer		* /
Low Power Idle mode 80 Advanced Power Management (Adaptive Battery Life Extender 3) Feature 80 Advanced Power Management Feature Active Idle mode 80 Performance Idle mode 80 Performance Idle mode 80 Transition Time 80 AMN 71 AMNF 71 AMNF 71 AMNF 71 AMNF 71 AMNF 70 Auto Reassign Function 96 Non recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C C Check Power Mode (E5h/98h) 107 Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 137 Recalibrate (1kh) 139 S.M.A.R.F. Punction Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Sta Password (F6h) 145 Security Erase Prepare (F3h) 141 Security Erase Prepare (F3h) 141 Security Erase Prepare (F3h) 141 Security Erase Prepare (F3h) 144 Security Sta Password (F6h) 145 Security Erase Prepare (F3h) 141 Security Erase Prepare (F3h) 144 Security Sta Password (F6h) 145 Security Sta Password (F6h) 146 Security Sta Password (F6h) 145 Security Sta Password (F6h) 145 Security Sta Password (F6h) 146 Security Sta Password (F6h) 146 Security Sta Password (F6h) 146 Secu		
Advanced Power Management (Adaptive Battery Life Extender 3) Feature 80 Advanced Power Management Feature Active Idle mode 80 Performance Idle mode 80 Transition Time 80 AMN 7 11 Auto Reassign Function 96 Non recovered read errors 96 Non recovered write errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B B B B B B B B B B B B B B B B	-	
Extender 3) Feature 80 Advanced Power Management Feature Active Idle mode 80 Performance Idle mode 80 Transition Time 80 AMNF 71 Auto Reassign Function 96 Non recovered read errors 96 Recovered dread errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (ETh) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read DMA (C8h/C9h) 127 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21b) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 Read Security Disable Password (F6h) 140 Security Erase Prepare (F5h) 141 Security Erase Prepare (F5h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145		* '
Advanced Power Management Feature Active Idle mode 80 Performance Idle mode 80 Transition Time 80 AMN 71 AMNF 71 Auto Reassign Function 96 Non recovered read errors 96 Non recovered write errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B B 106 BSY 72 C C Check Power Mode (E5h/98h) 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (Fh) 113 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read BMfer (E4h) 120 Read DMA (CAh/CBh) 177 Write Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Setfer (E4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Setfer (E4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Setfer (E4h) 131 Read Native Max ADDRESS (F8h) 144 Security Frase Prepare (F6h) 141 Security Frase Prepare (F6h) 144 Security Frase Prepare (F6h) 144 Security Set Password (F1h) 145		
Active Idle mode 80 Performance Idle mode 80 Transition Time 80 AMN 71 Auto Reassign Function 96 Non recovered read errors 96 Recovered dread errors 96 Recovered read errors 96 Recovered read errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device (ECh) 123 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Erase Penaper (F3h) 141 Security Erase Penaper (F3h) 141 Security Set Password (F1h) 145		
Performance Idle mode 80 AMN 71 AMNF 71 AMNF 71 AMNF 71 AMNF 71 AUTO Reassign Function 96 Non recovered write errors 96 Non recovered write errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Fisase Prepare (F5h) 141 Security Frase Prepare (F5h) 141 Security Frase Prepare (F5h) 141 Security Frase Prepare (F5h) 144 Security Set Password (F1h) 145		
Transition Time 80 AMN 71 Auto Reassign Function 96 Non recovered read errors 96 Non recovered read errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Track (50h) 111 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device DMA (EBh) 122 Idle (E3h/97h) 123 Idle Immediate (Elh/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C5h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Set Password (F1h) 145 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145		
AMN 71 AMNF 71 Auto Reassign Function 96 Non recovered read errors 96 Non recovered write errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device (ECh) 115 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Reacalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145		
AMNF 71 Auto Reassign Function 96 Non recovered read errors 96 Non recovered write errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device (E(h) 122 Idle (E3h/97h) 123 Idle Immediate (Elh/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Erase Unit (F4h) 142 Security Erase Prepare (F3h) 141 Security Erase Prepare (F3h) 141 Security Ser Password (F1h) 145 Security Ser Password (F1h) 145 Security Set Password (F1h) 145		
Auto Reassign Function 96 Non recovered read errors 96 Recovered read errors 96 Recovered read errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device DMA (E8h) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145		
Non recovered read errors 96 Non recovered write errors 96 Automatic Power Down Sequence 174 B B B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Identify Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 CORR 72 Diagnostic and Reset considerations 76 Diagnostic Codes 70, 75, 109 DSO 69 DS1 69 DS2 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F Ilush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H H H H H H H H H H H H H H H H		
Non recovered write errors 96 Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device (ECh) 115 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F8h) 141 Security Erase Prepare (F8h) 141 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 D D 106 Delayed Write 95 DF 72 Diagnostic and Reset considerations 76 Diagnostic Codes 70, 75, 109 DRDY 72 DRQ 72 DRV 70 DSO 69 DS1 69 DS1 69 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 Exercite Diagnostic 100, 109 F F FIUSH Cache 100, 110 Format Unit 100, 113 F F Ilush Cache 100, 110 Format Unit 100, 113 H H 106 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145		
Recovered read errors 96 Automatic Power Down Sequence 174 B B B 106 BSY 72 C C C C C C C C C C C C C C C C C C		
B B B 106 BSY 72 C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 119 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Sectors (20h/21h) 135 Read Sectors (20h/11h) 135 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Freeze Lock (F5h) 144		CORR 72
B B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Freeze Lock (F5h) 144		
B B B B B B B B B B B B B B B B B B B	Automatic Power Down Sequence 1/4	D
B 106 BSY 72 CC Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144		_
B 106 BSY 72 C C Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Unit (F7h) 113 Identify Device (ECh) 115 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Frase Prepare (F3h) 141 Security Frase Prepare (F3h) 141 Security Frase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 145	R	
BSY 72 Diagnostic Diagnostic and Reset considerations 76 Diagnostic Codes 70, 75, 109 DRDY 72 DRDY 72 DRQ 72 DRV 70 DSO 69 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Frase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Diagnostic and Reset considerations 76 Diagnostic Codes 70, 75, 109 DRV 70 DSO 69 DS1 69 DS1 69 DS1 69 DS1 69 DS2 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 Format Track 98, 111 Format Unit 100, 113		
Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Diagnostic and Reset considerations 76 Diagnostic Codes 70, 75, 109 DRV 72 DRV 70 DS0 69 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 Format Track 98, 111 Format Unit 100, 113 H H H H H H H Geurity Set Password (F1h) 145		
Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Diagnostic Codes 70, 75, 109 DRV 72 DRV 70 DS0 69 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F F F F F F F F F F F	DS 1 /2	
Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Diagnostic Codes 70, 75, 109 DRDY 72 DRQ PAS (50) DA (5		
Check Power Mode 100, 107 Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Bagnostic Codes 70, 75, 109 DRDY 72 DRV 70 DS0 69 DS1 69 DS1 69 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F F F F F F F F F F F	C	
Command Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 DRQ 72 DRV 70 DS0 69 DS1 69 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H 106 H 108 DRQ 72 DRV 70 DS0 69 DS1 69 DS1 69 DS1 69 DSC 72 F Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 Execute Device Diagnostic 100, 109 F H H 106 H 108 109 109 109 109 109 109 109 109 109 10		
Check Power Mode (E5h/98h) 107 Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 IBN 7 70 DRV 70 DS0 69 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F F F F F F F F F F F	,	
Enable/Disable Delayed Write (FAh) 108 Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 BSS 069 DS1 69 DSC 72 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H H H 106 H 69		~
Execute Device Diagnostic (90h) 109 Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 BE Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F F F F F F F F F F F		
Flush Cache (E7h) 110 Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 BE Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 200, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 200, 108 Enable/Disable Pelayed Write 200, 108 Enable/Disab		
Format Track (50h) 111 Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write ommand 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F H H H H H H H H H H H H		
Format Unit (F7h) 113 Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 200, 108 Enable/Disable Passed Write 200, 108 Ena		DSC 72
Identify Device (ECh) 115 Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Verify Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 200, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 200, 108 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 Format Track 98, 111 Format Unit 100, 113 H H H H H H H H H H H H H		
Identify Device DMA (EEh) 122 Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 100, 108 Enable/Disable Delayed Write 200m and 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H 106 H 106 H 69		F
Idle (E3h/97h) 123 Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Enable/Disable Delayed Write command 95 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H 106 H 106 H 106 H 107 H 108 H 109 H 109 H 106 H 106 H 107 H 108 H 109 H 109 H 106 H 106 H 107 H 108 H 109 H 109 H 109 H 100 H		_
Idle Immediate (E1h/95h) 124 Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 ERR 72 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F F F H H H H H H H H		
Initialize Device Parameters (91h) 125 Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Error Register Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F F F F F F F F F F F F F	· · · · · · · · · · · · · · · · · · ·	
Read Buffer (E4h) 126 Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Diagnostic Codes 75 Example of operation 90 Execute Device Diagnostic 100, 109 F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H 106 H 106 H 106 H 107 H 108 H 109 H 106 H 106 H 106 H 107 H 108 H 109 H 109 H 100		
Read DMA (C8h/C9h) 127 Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Example of operation 90 Execute Device Diagnostic 100, 109 F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H 106 H 106 H 107 H 108 H 109 H 109 H 100 H 1		
Read Long (22h/23h) 129 Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Execute Device Diagnostic 100, 109 F F Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H 106 H 106 H 107 H 108 H 109 H 109 F F F F F F F F F F F F F		
Read Multiple (C4h) 131 Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H 106 H 106 H 106		• •
Read Native Max ADDRESS (F8h) 133 Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 Format Track 98, 111 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H 106 H 106 H 106		Execute Device Diagnostic 100, 109
Read Sectors (20h/21h) 135 Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Flush Cache 100, 110 Format Track 98, 111 Format Unit 100, 113 H H H 106 H 69		
Read Verify Sectors (40h/41h) 137 Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 H 106 H 0 69		F
Recalibrate (1xh) 139 S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Format Track 98, 111 Format Unit 100, 113 H H H H H 106 H 69		
S.M.A.R.T. Function Set (B0h) 156 Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 Format Unit 100, 113 H H H 106 H 69		
Security Disable Password (F6h) 140 Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 H 106 H 106		
Security Erase Prepare (F3h) 141 Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 H 106 H0 69	·	1 ormat Onit 100, 113
Security Erase Unit (F4h) 142 Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 H 106 H0 69	•	
Security Freeze Lock (F5h) 144 Security Set Password (F1h) 145 H 106 H 069		Н
Security Set Password (F1h) 145 H0 69		
becauty bet I assword (I III) I it		
		- **

© Copyright IBM Corp. 1999

H1 69 H2 69 H3 69 HS0 70 HS1 70 HS2 70 HS3 70	Register (continued) Command Register 68 Cylinder High Register 68 Cylinder Low Register 68 Data Register 68 Device Control Register 68 Device/Head Register 69 Drive Address Register 69 Error Register 70
	Features Register 71
ICRCE 70	Register Initialization 75
Identify Device 97, 115	Sector Count Register 71
Identify Device DMA 101, 122	Sector Number Register 71
Idle 100, 123	Status Register 71
Idle Immediate 100, 124	Register Initialization 75
IDN 70	Reset
IDNF 70 IDX 72	Diagnostic and Reset considerations 76
IEN 69	Register Initialization 75 RST 69
Initial Power Mode at Power On 79	K31 09
Initialize Device Parameters 100, 125	
	S
1	S.M.A.R.T. Function 82
L 70 106	Attribute thresholds 82
L 70, 106	Attribute values 82
LBA Addressing Mode 77 Logical CHS Addressing Mode 77	Attributes 82
	S.M.A.R.T. commands 82 S.M.A.R.T. operation with power management modes 82
M	Threshold exceeded condition 82
Master 70	S.M.A.R.T. Function Set 156
	Sector Addressing Mode 77
P	LBA Addressing Mode 77
-	Logical CHS Addressing Mode 77
Power Management Feature 78 Initial Power Mode at Power On 79	Security Disable Password 98, 140
Interface Capability for Power Modes 79	Security Erase Prepare 100, 141
Power Management Commands 78	Security Erase Unit 98, 142
Power Mode 78	Security Freeze Lock 100, 144
Standby timer 79	Security Mode Feature Set 84
Standby/Sleep command completion timing 78	Security Set Password 98, 145
Status 79	Security Unlock 98, 147 Seek 100, 149
Power-off considerations 76	Set Features 100, 150
	SET FEATURES Command support Coverage 192
R	Set Max ADDRESS 100, 152
R 106	Set Multiple 154
RDY 72	Set Multiple Mode 100
Read Buffer 97, 126	Slave 70
Read DMA 101, 127	Sleep 100, 155
Read Long 97, 129	SMART Disable Operations 100
Read Multiple 97, 131	SMART Enable Operations 100 SMART Enable/Disable Attribute Autosaye 100
Read Native Max ADDRESS 100, 133	SMART Enable/Disable Attribute Autosave 100 SMART Execute Off-line Immediate 100
Read Sectors 97, 135	SMART Execute Off-line Himmediate 100 SMART Read Attribute Thresholds 97
Read Verify Sectors 100, 137	SMART Read Attribute Values 97
Reassign Function 96	SMART Return Status 100
Recalibrate 100, 139 Register	SMART Save Attribute Values 100
Alternate Status Register 67	SRST 69
Internate Status Register 07	

Standby 100, 174 Standby Immediate 100, 175

T

T0N 70 Timeout Interval 69, 187 Timeout Parameter 123, 174 TK0NF 70

U

UNC 70

V V 106

W

Write Buffer 98, 176 Write Cache 94 Write DMA 101, 177 Write Long 98, 179 Write Multiple 98, 181 Write Sectors 98, 183 Write Verify 99, 185 WTG 69

X

x 106



S25L-1638-03

Published in Japan